

Contents

■ How to Read this Design Guide	5
□ How to Read this Design Guide	5
□ Approvals	5
□ Symbols	6
□ Abbreviations	6
□ Definitions	7
■ Introduction to FC 300	13
□ Safety Precautions	13
□ Safety Precautions	13
□ Disposal Instruction	14
□ Software Version	15
□ Control Principle	19
□ FC 300 Controls	19
□ FC 301 vs. FC 302 Control Principle	19
□ Control Structure in VVC ^{plus}	20
□ Control Structure in Flux Sensorless (FC 302 only)	21
□ Control Structure in Flux with Motor Feedback	21
□ Internal Current Control in VVC ^{plus} Mode	22
□ Local (Hand On) and Remote (Auto On) Control	22
□ Reference Handling	24
□ Scaling of References and Feedback	25
□ Dead Band Around Zero	27
□ Speed PID Control	31
□ The following parameters are relevant for the Speed Control	31
□ Process PID Control	33
□ Ziegler Nichols Tuning Method	37
□ Motor cables to comply with EMC regulations	39
□ EMC Immunity	40
□ Earth Leakage Current	42
□ Selection of Brake Resistor	42
□ Mechanical Brakecontrol	44
□ Hoist Mechanical Brake	45
□ Safe Stop of FC 300	48
□ Safe Stop Installation (FC 302 and FC 301 - A1 enclosure only)	49
□ Safe Stop Commissioning Test	50
■ FC 300 Selection	53
□ Electrical Data	53
□ General Specifications	59
□ Efficiency	64
□ Acoustic Noise	64
□ Peak Voltage on Motor	65
□ Purpose of derating	66
□ Automatic adaptations to ensure performance	69



■ How to Order	71
□ Drive Configurator	71
□ Ordering Form Type Code	71
□ Ordering Numbers	73
■ How to Install	79
□ Mechanical Dimension	79
□ Mechanical Installation	81
□ Accessory Bag	81
□ Electrical Installation	84
☐ Removal of Knockouts for Extra Cables	84
☐ Connection to Mains and Earthing	85
■ Motor Connection	87
□ Fuses	89
□ Access to Control Terminals	91
□ Control Terminals	91
□ Electrical Installation, Control Terminals	92
□ Basic Wiring Example	92
□ Electrical Installation, Control Cables	93
□ Motor Cables	95
□ Switches S201, S202, and S801	96
☐ Final Set-Up and Test	97
□ Additional Connections	99
□ Relay Connection	100
□ Relay Output	101
□ Parallel Connection of Motors	101
□ Motor Thermal Protection	102
☐ How to Connect a PC to the FC 300	103
□ The FC 300 Software Dialog	103
□ Residual Current Device	108
■ Application Examples	109
□ Start/Stop	109
□ Pulse Start/Stop	109
□ Potentiometer Reference	110
□ Encoder Connection	110
□ Encoder Direction	110
□ Closed Loop Drive System	111
□ Programming of Torque Limit and Stop	111
Smart Logic Control Programming	112
■ Options and Accessories	115
□ Options and Accessories	115
☐ Mounting of Option Modules in Slot B	115
☐ General Purpose Input Output Module MCB 101	115
☐ Encoder Option MCB 102	117
□ Resolver Option MCB 103	119




□ Relay Option MCB 105	121
□ 24 V Back-Up Option MCB 107 (Option D)	124
☐ IP 21/IP 4X/ TYPE 1 Enclosure Kit	125
□ Sine-wave Filters	126
■ RS-485 Installation and Set-up	127
□ RS-485 Installation and Set-up	127
☐ FC Protocol Overview	130
□ Network Configuration	130
☐ FC Protocol Message Framing Structure - FC 300	131
□ Examples	136
□ Danfoss FC Control Profile	136
■ Troubleshooting	149
□ Status messages - FC 300 DG	149
□ Warnings/Alarm Messages	149
■ Index	158

FC 300 Design Guide





How to Read this Design Guide

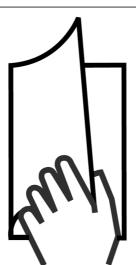



☐ How to Read this Design Guide

This Design Guide will introduce all aspects of your FC 300.

Available literature for FC 300

- The VLT® AutomationDrive FC 300 Operating Instructions MG.33.AX.YY provide the neccessary information for getting the drive up and running.
- The VLT® AutomationDrive FC 300 Design Guide MG.33.BX.YY entails all technical information about the drive and customer design and applications.
- The VLT® AutomationDrive FC 300 Programming Guide MG.33.MX.YY provides information on how to programme and includes complete parameter descriptions.
- The VLT® AutomationDrive FC 300 Profibus Operating Instructions MG.33.CX.YY provide the information required for controlling, monitoring and programming the drive via a Profibus fieldbus.
- The VLT® AutomationDrive FC 300 DeviceNet Operating Instructions MG.33.DX.YY provide the information required for controlling, monitoring and programming the drive via a DeviceNet fieldbus.

X = Revision number

YY = Language code

Danfoss Drives technical literature is also available online at www.danfoss.com/BusinessAreas/Drives-Solutions/Documentations/Technical+Documentation.

□ Approvals









$_$ How to Read this Design Guide $_$



□ Symbols

Symbols used in this guide.



NB!

Indicates something to be noted by the reader.



Indicates a general warning.



Indicates a high-voltage warning.

* Indicates default setting

□ Abbreviations

Alternating current	AC
American wire gauge	AWG
Ampere/AMP	A
Automatic Motor Adaptation	AMA
Current limit	I _{LIM}
Degrees Celcius	°C
Direct current	DC
Drive Dependent	D-TYPE
Electro Magnetic Compatibility	EMC
Electronic Thermal Relay	ETR
Frequency Converter	FC
Gram	g
Hertz	Hz
Kilohertz	kHz
Local Control Panel	LCP
Meter	m
Milli Henry Inductance	mH
Milliampere	mA
Millisecond	ms
Minute	min
Motion Control Tool	MCT
Nanofarad	nF
Newton Meters	Nm
Nominal motor current	I _{M,N}
Nominal motor frequency	f _{M,N}
Nominal motor power	P _{M,N}
Nominal motor voltage	U _{M,N}
Parameter	par.
Protective Extra Low Voltage	PELV
Printed Circuit Board	PCB
Rated Inverter Output Current	I _{INV}
Revolutions Per Minute	RPM
Second	S
Torque limit	T _{LIM}
Volts	V



$_{-}$ How to Read this Design Guide $\,\,\,\,\,\,\,\,$

□ Definitions

Drive:

D-TYPE

Size and type of the connected drive (dependencies).

IVLT, MAX

The maximum output current.

 ${
m I}$ VLT,N

The rated output current supplied by the frequency converter.

UVLT, MAX

The maximum output voltage.

Input:

Control command

You can start and stop the connected motor by means of LCP and the digital inputs.

Functions are divided into two groups.

Functions in group 1 have higher priority than functions in group 2.

Group 1	Reset, Coasting stop, Reset and Coasting stop, Quick-stop, DC braking, Stop and the "Off" key.
Group 2	Start, Pulse start, Reversing, Start reversing, Jog and Freeze output

Motor:

 f_{JOG}

The motor frequency when the jog function is activated (via digital terminals).

fм

The motor frequency.

fMAX

The maximum motor frequency.

fmin

The minimum motor frequency.

fm,N

The rated motor frequency (nameplate data).

Ιм

The motor current.

 $I_{M,N}$

The rated motor current (nameplate data).

M-TYPE

Size and type of the connected motor (dependencies).

n_{M,N}

The rated motor speed (nameplate data).

Pm,N

The rated motor power (nameplate data).

 $T_{M,N}$

The rated torque (motor).

Uм

The instantaneous motor voltage.






$_{\scriptscriptstyle -}$ How to Read this Design Guide $_{\scriptscriptstyle -}$



U_M,N

The rated motor voltage (nameplate data).

Break-away torque

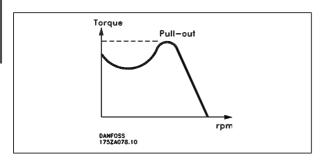

η_{VLT}

The efficiency of the frequency converter is defined as the ratio between the power output and the power input.

Start-disable command

A stop command belonging to the group 1 control commands - see this group.

Stop command

See Control commands.

References:

Analog Reference

A signal transmitted to the analog inputs 53 or 54, can be voltage or current.

Binary Reference

A signal transmitted to the serial communication port.

Preset Reference

A defined preset reference to be set from -100% to +100% of the reference range. Selection of eight preset references via the digital terminals.

Pulse Reference

A pulse frequency signal transmitted to the digital inputs (terminal 29 or 33).

Ref_{MAX}

Determines the relationship between the reference input at 100% full scale value (typically 10 V, 20mA) and the resulting reference. The maximum reference value set in par. 3-03.

Ref_{MIN}

Determines the relationship between the reference input at 0% value (typically 0V, 0mA, 4mA) and the resulting reference. The minimum reference value set in par. 3-02.

Miscellaneous:

Analog Inputs

The analog inputs are used for controlling various functions of the frequency converter.

There are two types of analog inputs:

Current input, 0-20 mA and 4-20 mA

Voltage input, 0-10 V DC (FC 301)

Voltage input, -10 - +10 V DC (FC 302).

Analog Outputs

The analog outputs can supply a signal of 0-20 mA, 4-20 mA, or a digital signal.

Danfoss

$_{-}\,$ How to Read this Design Guide $\,$ -

Automatic Motor Adaptation, AMA

AMA algorithm determines the electrical parameters for the connected motor at standstill.

Brake Resistor

The brake resistor is a module capable of absorbing the brake power generated in regenerative braking. This regenerative braking power increases the intermediate circuit voltage and a brake chopper ensures that the power is transmitted to the brake resistor.

CT Characteristics

Constant torque characteristics used for all applications such as conveyor belts, displacement pumps and cranes.

Digital Inputs

The digital inputs can be used for controlling various functions of the frequency converter.

Digital Outputs

The drive features two Solid State outputs that can supply a 24 V DC (max. 40 mA) signal.

DSP

Digital Signal Processor.

ETR

Electronic Thermal Relay is a thermal load calculation based on present load and time. Its purpose is to estimate the motor temperature.

Hiperface[®]

Hiperface® is a registered trademark by Stegmann.

Initialising

If initialising is carried out (par. 14-22), the frequency converter returns to the default setting.

Intermittent Duty C ycle

An intermittent duty rating refers to a sequence of duty cycles. Each cycle consists of an on-load and an off-load period. The operation can be either periodic duty or non-periodic duty.

LCP

The Local Control Panel (LCP) makes up a complete interface for control and programming of the FC 300 Series. The control panel is detachable and can be installed up to 3 metres from the frequency converter, i.e. in a front panel by means of the installation kit option.

Isb

Least significant bit.

<u>msb</u>

Most significant bit.

<u>MCM</u>

Short for Mille Circular Mil, an American measuring unit for cable cross-section. 1 MCM = 0.5067 mm².

On-line/Off-line Parameters

Changes to on-line parameters are activated immediately after the data value is changed. Changes to off-line parameters are not activated until you enter [OK] on the LCP.

Process PID

The PID regulator maintains the desired speed, pressure, temperature, etc. by adjusting the output frequency to match the varying load.



Danfoss

$_{--}$ How to Read this Design Guide $_{--}$



Pulse Input/Incremental Encoder

An external, digital pulse transmitter used for feeding back information on motor speed. The encoder is used in applications where great accuracy in speed control is required.

RCD

Residual Current Device.

Set-up

You can save parameter settings in four Set-ups. Change between the four parameter Set-ups and edit one Set-up, while another Set-up is active.

SFAVM

Switching pattern called Stator Flux oriented Asynchronous Vector Modulation (par. 14-00).

Slip Compensation

The frequency converter compensates for the motor slip by giving the frequency a supplement that follows the measured motor load keeping the motor speed almost constant..

Smart Logic Control (SLC)

The SLC is a sequence of user defined actions executed when the associated user defined events are evaluated as true by the SLC. (Parameter group 13-xx).

FC Standard Bus

Includes RS 485 bus with FC protocol or MC protocol. See parameter 8-30.

Thermistor:

A temperature-dependent resistor placed where the temperature is to be monitored (frequency converter or motor).

Trip

A state entered in fault situations, e.g. if the frequency converter is subject to an over-temperature or when the frequency converter is protecting the motor, process or mechanism. Restart is prevented until the cause of the fault has disappeared and the trip state is cancelled by activating reset or, in some cases, by being programmed to reset automatically. Trip may not be used for personal safety.

Trip Locked

A state entered in fault situations when the frequency converter is protecting itself and requiring physical intervention, e.g. if the frequency converter is subject to a short circuit on the output. A locked trip can only be cancelled by cutting off mains, removing the cause of the fault, and reconnecting the frequency converter. Restart is prevented until the trip state is cancelled by activating reset or, in some cases, by being programmed to reset automatically. Trip may not be used for personal safety.

VT Characteristics

Variable torque characteristics used for pumps and fans.

\/\/Cplus

If compared with standard voltage/frequency ratio control, Voltage Vector Control (VVC^{plus}) improves the dynamics and the stability, both when the speed reference is changed and in relation to the load torque.

60° AVM

Switching pattern called 60° $\underline{A}synchronous~\underline{V}ector~\underline{M}odulation~(par.~14-00).$

Power Factor

The power factor is the relation between I_1 and I_{RMS} .

Power factor =
$$\frac{\sqrt{3 \times U \times 11 \times cos\varphi}}{\sqrt{3 \times U \times I_{RMS}}}$$

$$= \frac{I1 \times \cos\varphi 1}{I_{RMS}} = \frac{I_1}{I_{RMS}} \text{ since } \cos\varphi 1 = 1$$



— How to Read this Design Guide —

The power factor indicates to which extent the frequency converter imposes a load on the mains supply.

$$I_{RMS} = \sqrt{I_1^2 + I_5^2 + I_7^2} + ... + I_n^2$$

The lower the power factor, the higher the I_{RMS} for the same kW performance.

(m)


In addition, a high power factor indicates that the different harmonic currents are low. The FC 300 frequency converters' built-in DC coils produce a high power factor, which minimizes the imposed load on the mains supply.







Introduction to FC 300

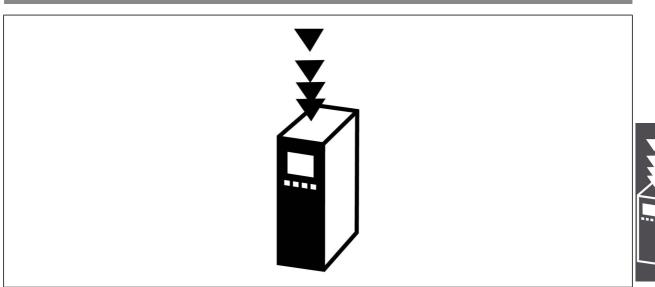



Safety Precautions



The voltage of the frequency converter is dangerous whenever connected to mains. Incorrect installation of the motor, frequency converter or fieldbus may cause damage to the equipment, serious personal injury or death. Consequently, the instructions in this manual, as well as national and local rules and safety regulations, must be complied with.

Safety Regulations

- 1. The frequency converter must be disconnected from mains if repair work is to be carried out. Check that the mains supply has been disconnected and that the necessary time has passed before removing motor and mains plugs.
- 2. The [STOP/RESET] key on the control panel of the frequency converter does not disconnect the equipment from mains and is thus not to be used as a safety switch.
- 3. Correct protective earthing of the equipment must be established, the user must be protected against supply voltage, and the motor must be protected against overload in accordance with applicable national and local regulations.
- 4. The earth leakage currents are higher than 3.5 mA.
- 5. Protection against motor overload is not included in the factory setting. If this function is desired, set par. 1-90 to data value ETR trip or data value ETR warning.



NB!

The function is initialised at 1.16 x rated motor current and rated motor frequency. For the North American market: The ETR functions provide class 20 motor overload protection in accordance with NEC.

- 6. Do not remove the plugs for the motor and mains supply while the frequency converter is connected to mains. Check that the mains supply has been disconnected and that the necessary time has passed before removing motor and mains plugs.
- 7. Please note that the frequency converter has more voltage inputs than L1, L2 and L3, when load sharing (linking of DC intermediate circuit) and external 24 V DC have been installed. Check that all voltage inputs have been disconnected and that the necessary time has passed before commencing repair work.



Warning against Unintended Start

- The motor can be brought to a stop by means of digital commands, bus commands, references
 or a local stop, while the frequency converter is connected to mains. If personal safety considerations make it necessary to ensure that no unintended start occurs, these stop functions are
 not sufficient.
- 2. While parameters are being changed, the motor may start. Consequently, the stop key [STOP/ RESET] must always be activated; following which data can be modified.
- 3. A motor that has been stopped may start if faults occur in the electronics of the frequency converter, or if a temporary overload or a fault in the supply mains or the motor connection ceases.



Touching the electrical parts may be fatal - even after the equipment has been disconnected from mains.

Also make sure that other voltage inputs have been disconnected, such as external 24 V DC, load sharing (linkage of DC intermediate circuit), as well as the motor connection for kinetic back up. Refer to FC 300 Operating Instructions (MG.33.A8.xx) for further safety guidelines.

Disposal Instruction



Equipment containing electrical components may not be disposed of together with domestic waste.

It must be separately collected with Electrical and Electronic waste according to local and currently valid legislation.



Caution

The FC 300 AutomationDrive DC link capacitors remain charged after power has been disconnected. To avoid electrical shock hazard, disconnect the FC 300 from the mains before carrying out maintenance. Before doing service on the frequency converter wait at least the amount of time indicated below:

FC 300: 0.25 - 7.5 kW 4 minutes
FC 300: 11 - 22 kW 15 minutes
FC 300: 30 - 75 kW 15 minutes





FC 300 Design Guide Software version: 4.0x







This Design Guide can be used for all FC 300 frequency converters with software version 4.0x. The software version number can be seen from parameter 15-43.



$_{-}\;$ Introduction to FC 300 $\;-\;$

□ CE Conformity and Labelling

What is CE Conformity and Labelling?

The purpose of CE labelling is to avoid technical trade obstacles within EFTA and the EU. The EU has introduced the CE label as a simple way of showing whether a product complies with the relevant EU directives. The CE label says nothing about the specifications or quality of the product. Frequency converters are regulated by three EU directives:

The machinery directive (98/37/EEC)

All machines with critical moving parts are covered by the machinery directive of January 1, 1995. Since a frequency converter is largely electrical, it does not fall under the machinery directive. However, if a frequency converter is supplied for use in a machine, we provide information on safety aspects relating to the frequency converter. We do this by means of a manufacturer's declaration.

The low-voltage directive (73/23/EEC)

Frequency converters must be CE labelled in accordance with the low-voltage directive of January 1, 1997. The directive applies to all electrical equipment and appliances used in the 50 - 1000 V AC and the 75 - 1500 V DC voltage ranges. Danfoss CE-labels in accordance with the directive and issues a declaration of conformity upon request.

The EMC directive (89/336/EEC)

EMC is short for electromagnetic compatibility. The presence of electromagnetic compatibility means that the mutual interference between different components/appliances does not affect the way the appliances work.

The EMC directive came into effect January 1, 1996. Danfoss CE-labels in accordance with the directive and issues a declaration of conformity upon request. To carry out EMC-correct installation, see the instructions in this Design Guide. In addition, we specify which standards our products comply with. We offer the filters presented in the specifications and provide other types of assistance to ensure the optimum EMC result.

The frequency converter is most often used by professionals of the trade as a complex component forming part of a larger appliance, system or installation. It must be noted that the responsibility for the final EMC properties of the appliance, system or installation rests with the installer.

□ What Is Covered

The EU "Guidelines on the Application of Council Directive 89/336/EEC" outline three typical situations of using a frequency converter. See below for EMC coverage and CE labelling.

- The frequency converter is sold directly to the end-consumer. The frequency converter is for
 example sold to a DIY market. The end-consumer is a layman. He installs the frequency converter
 himself for use with a hobby machine, a kitchen appliance, etc. For such applications, the frequency converter must be CE labelled in accordance with the EMC directive.
- 2. The frequency converter is sold for installation in a plant. The plant is built up by professionals of the trade. It could be a production plant or a heating/ventilation plant designed and installed by professionals of the trade. Neither the frequency converter nor the finished plant has to be CE labelled under the EMC directive. However, the unit must comply with the basic EMC requirements of the directive. This is ensured by using components, appliances, and systems that are CE labelled under the EMC directive.
- 3. The frequency converter is sold as part of a complete system. The system is being marketed as complete and could e.g. be an air-conditioning system. The complete system must be CE labelled in accordance with the EMC directive. The manufacturer can ensure CE labelling under the EMC directive either by using CE labelled components or by testing the EMC of the system. If he chooses to use only CE labelled components, he does not have to test the entire system.





□ Danfoss VLT Frequency Converter and CE Labelling

CE labelling is a positive feature when used for its original purpose, i.e. to facilitate trade within the EU and EFTA.

However, CE labelling may cover many different specifications. Thus, you have to check what a given CE label specifically covers.

The covered specifications can be very different and a CE label may therefore give the installer a false feeling of security when using a frequency converter as a component in a system or an appliance.

Danfoss CE labels the frequency converters in accordance with the low-voltage directive. This means that if the frequency converter is installed correctly, we guarantee compliance with the low-voltage directive. Danfoss issues a declaration of conformity that confirms our CE labelling in accordance with the low-voltage directive.

The CE label also applies to the EMC directive provided that the instructions for EMC-correct installation and filtering are followed. On this basis, a declaration of conformity in accordance with the EMC directive is issued.

The Design Guide offers detailed instructions for installation to ensure EMC-correct installation. Furthermore, Danfoss specifies which our different products comply with.

Danfoss gladly provides other types of assistance that can help you obtain the best EMC result.



As mentioned, the frequency converter is mostly used by professionals of the trade as a complex component forming part of a larger appliance, system, or installation. It must be noted that the responsibility for the final EMC properties of the appliance, system or installation rests with the installer. As an aid to the installer, Danfoss has prepared EMC installation guidelines for the Power Drive system. The standards and test levels stated for Power Drive systems are complied with, provided that the EMC-correct instructions for installation are followed, see section *Electrical Installation*.

The frequency converter has been designed to meet the IEC/EN 60068-2-3 standard, EN 50178 pkt. 9.4.2.2 at 50°C.

A frequency converter contains a large number of mechanical and electronic components. All are to some extent vulnerable to environmental effects.



The frequency converter should not be installed in environments with airborne liquids, particles, or gases capable of affecting and damaging the electronic components. Failure to take the necessary protective measures increases the risk of stoppages, thus reducing the life of the frequency converter.

<u>Liquids</u> can be carried through the air and condense in the frequency converter and may cause corrosion of components and metal parts. Steam, oil, and salt water may cause corrosion of components and metal parts. In such environments, use equipment with enclosure rating IP 55. As an extra protection, coated printet circuit boards can be orded as an option.

Airborne <u>Particles</u> such as dust may cause mechanical, electrical, or thermal failure in the frequency converter. A typical indicator of excessive levels of airborne particles is dust particles around the frequency converter fan. In very dusty environments, use equipment with enclosure rating IP 55 or a cabinet for IP 00/IP 20/TYPE 1 equipment.





$_{--}$ Introduction to FC 300 $_{--}$

In environments with high temperatures and humidity, <u>corrosive gases</u> such as sulphur, nitrogen, and chlorine compounds will cause chemical processes on the frequency converter components.

Such chemical reactions will rapidly affect and damage the electronic components. In such environments, mount the equipment in a cabinet with fresh air ventilation, keeping aggressive gases away from the frequency converter.

An extra protection in such areas is a coating of the printed circuit boards, which can be ordered as an option.





NB!

Mounting frequency converters in aggressive environments increases the risk of stoppages and considerably reduces the life of the converter.

Before installing the frequency converter, check the ambient air for liquids, particles, and gases. This is done by observing existing installations in this environment. Typical indicators of harmful airborne liquids are water or oil on metal parts, or corrosion of metal parts.

Excessive dust particle levels are often found on installation cabinets and existing electrical installations. One indicator of aggressive airborne gases is blackening of copper rails and cable ends on existing installations.

The frequency converter has been tested according to a procedure based on the shown standards:

The frequency converter complies with requirements that exist for units mounted on the walls and floors of production premises, as well as in panels bolted to walls or floors.

IEC/EN 60068-2-6:Vibration (sinusoidal) - 1970IEC/EN 60068-2-64:Vibration, broad-band random



□ Control Principle

A frequency converter rectifies AC voltage from mains into DC voltage, after which this DC voltage is converted into a AC current with a variable amplitude and frequency.

The motor is supplied with variable voltage / current and frequency, which enables infinitely variable speed control of three-phased, standard AC motors and permanent magnet synchronous motors.

□ FC 300 Controls

The frequency converter is capable of controlling either the speed or the torque on the motor shaft. Setting par. 1-00 determines the type of control.

Speed control:

There are two types of speed control:

- Speed open loop control which does not require any feedback (sensorless).
- Speed closed loop control in the form of a PID control that requires a speed feedback to an input.
 A properly optimised speed closed loop control will have higher accuracy than a speed open loop control.

Selects which input to use as speed PID feedback in par. 7-00.

Torque control (FC 302 only):

Torque control is part of the motor control and correct settings of motor parameters are very important. The accuracy and settling time of the torque control are determined from *Flux with motor feedback* (par. 1-01 *Motor Control Principle*).

• Flux with encoder feedback offers superior performance in all four quadrants and at all motor speeds.

Speed / torque reference:

The reference to these controls can either be a single refrence or be the sum of various references including relatively scaled references. The handling of references is explained in detail later in this section.


☐ FC 301 vs. FC 302 Control Principle

FC 301 is a general purpose frequency converter for variable speed applications. The control principle is based on Voltage Vector Control (VVC^{plus}).

FC 301 can handle asynchronous motors only.

The current sensing principle in FC 301 is based on current measurement in the DC link or motor phase. The ground fault protection on the motor side is solved by a de-saturation circuit in the IGBTs connected to the control board.

Short circuit behaviour on FC 301 depends on the current transducer in the positive DC link and the desaturation protection with feedback from the 3 lower IGBT's and the brake.

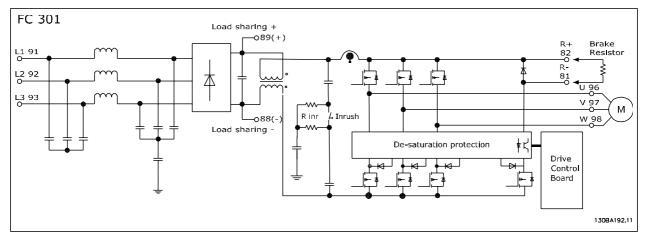






FC 302 is a high performance frequency converter for demanding applications. The frequency converter can handle various kinds of motor control principles such as U/f special motor mode, VVC^{plus} or Flux Vector motor control.

FC 302 is able to handle Permanent Magnet Synchronous Motors (Brushless servo motors) as well as normal squirrel cage asynchronous motors.


Short circuit behaviour on FC 302 depends on the 3 current transducers in the motor phases and the desaturation protection with feedback from the brake.



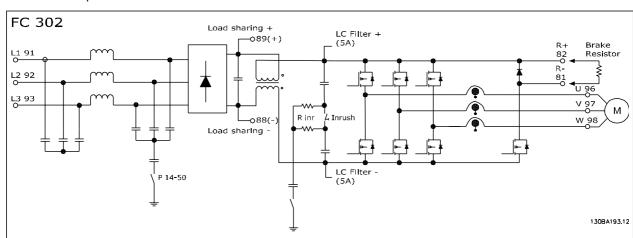

□ Control Structure in VVCplus

Control structure in VVC^{plus} open loop and closed loop configurations:

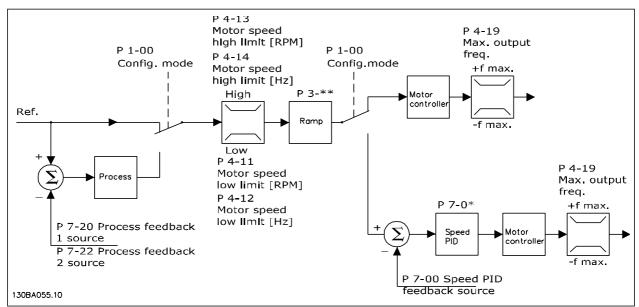

In the configuration shown in the illustration above, par. 1-01 *Motor Control Principle* is set to "VVC^{plus} [1]" and par. 1-00 is set to "Speed open loop [0]". The resulting reference from the reference handling system is received and fed through the ramp limitation and speed limitation before being sent to the motor control. The output of the motor control is then limited by the maximum frequency limit.

If par. 1-00 is set to "Speed closed loop [1]" the resulting reference will be passed from the ramp limitation and speed limitation into a speed PID control. The Speed PID control parameters are located in the par. group 7-0*. The resulting reference from the Speed PID control is sent to the motor control limited by the frequency limit.




$_{-}$ Introduction to FC 300 $\,$ -

Select "Process [3]" in par. 1-00 to use the process PID control for closed loop control of e.g. speed or pressure in the controlled application. The Process PID parameters are located in par. group 7-2* and 7-3*.

□ Control Structure in Flux Sensorless (FC 302 only)

Control structure in Flux sensorless open loop and closed loop configurations.

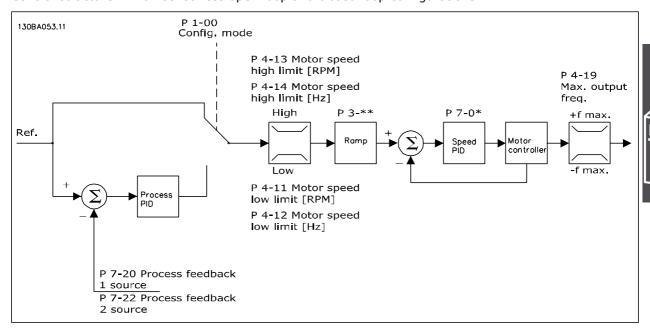


In the shown configuration, par. 1-01 *Motor Control Principle* is set to "Flux sensorless [2]" and par. 1-00 is set to "Speed open loop [0]". The resulting reference from the reference handling system is fed through the ramp and speed limitations as determined by the parameter settings indicated.

An estimated speed feedback is generated to the Speed PID to control the output frequency. The Speed PID must be set with its P,I, and D parameters (par. group 7-0*).

Select "Process [3]" in par. 1-00 to use the process PID control for closed loop control of i.e. speed or pressure in the controlled application. The Process PID parameters are found in par. group 7-2* and 7-3*.

□ Control Structure in Flux with Motor Feedback

Control structure in Flux with motor feedback configuration (only available in FC 302):

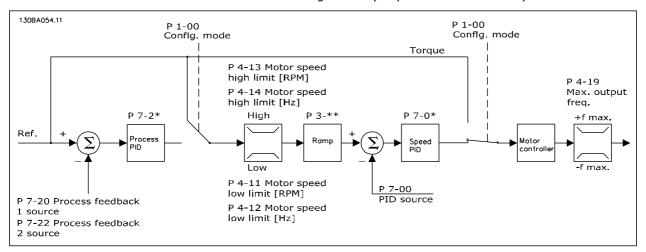



$_{-}$ Introduction to FC 300 $_{-}$

In the shown configuration, par. 1-01 *Motor Control Principle* is set to "Flux w motor feedb [3]" and par. 1-00 is set to "Speed closed loop [1]".

The motor control in this configuration relies on a feedback signal from an encoder mounted directly on the motor (set in par. 1-02 *Motor Shaft Encoder Source*).

Select "Speed closed loop [1]" in par. 1-00 to use the resulting reference as an input for the Speed PID control. The Speed PID control parameters are located in par. group 7-0*.

Select "Torque [2]" in par. 1-00 to use the resulting reference directly as a torque reference. Torque control can only be selected in the *Flux with motor feedback* (par. 1-01 *Motor Control Principle*) configuration. When this mode has been selected, the reference will use the Nm unit. It requires no torque feedback, since the actual torque is calculated on the basis of the current measurement of the frequency converter.

Select "Process [3]" in par. 1-00 to use the process PID control for closed loop control of e.g. speed or a process variable in the controlled application.

☐ Internal Current Control in VVCplus Mode

The frequency converter features an integral current limit control which is activated when the motor current, and thus the torque, is higher than the torque limits set in par. 4-16, 4-17 and 4-18.

When the frequency converter is at the current limit during motor operation or regenerative operation, the frequency converter will try to get below the preset torque limits as quickly as possible without losing control of the motor.

Local (Hand On) and Remote (Auto On) Control

The frequency converter can be operated manually via the local control panel (LCP) or remotely via analog and digital inputs and serial bus.

If allowed in par. 0-40, 0-41, 0-42, and 0-43, it is possible to start and stop the frequency converter via the LCP using the [Hand ON] and [Off] keys. Alarms can be reset via the [RESET] key. After pressing the [Hand On] key, the frequency converter goes into Hand mode and follows (as default) the Local reference that can be set using arrow key on the LCP.

After pressing the [Auto On] key, the frequency converter goes into Auto mode and follows (as default) the Remote reference. In this mode, it is possible to control the frequency converter via the digital inputs and various serial interfaces (RS-485, USB, or an optional fieldbus). See more about starting, stopping, changing ramps and parameter set-ups etc. in par. group 5-1* (digital inputs) or par. group 8-5* (serial communication).




Active Reference and Configuration Mode


The active reference can be either the local reference or the remote reference.

In par. 3-13 Reference Site the local reference can be permanently selected by selecting Local [2]. To permanently select the remote reference select Remote [1]. By selecting Linked to Hand/Auto [0] (default) the reference site will depend on which mode is active. (Hand Mode or Auto Mode).





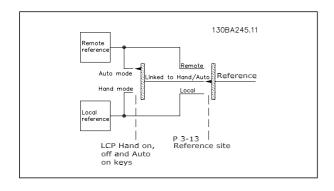

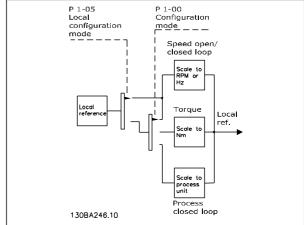

Hand On Auto LCP Keys	Reference Site Par. 3-13	Active Reference
Hand	Linked to Hand / Auto	Local
Hand -> Off	Linked to Hand / Auto	Local
Auto	Linked to Hand / Auto	Remote
Auto -> Off	Linked to Hand / Auto	Remote
All keys	Local	Local
All keys	Remote	Remote

The table shows under which conditions either the Local reference or the Remote reference is active. One of them is always active, but both can not be active at the same time.

Par. 1-00 *Configuration Mode* determines what kind of application control principle (i.e. Speed, Torque or Process Control) is used when the Remote reference is active (see table above for the conditions).

Par. 1-05 *Local Mode Configuration* determines the kind of application control principle that is used when the Local reference is made active.

Reference Handling Local Reference


Remote Reference

The reference handling system for calculating the Remote reference is shown in the illustration below.







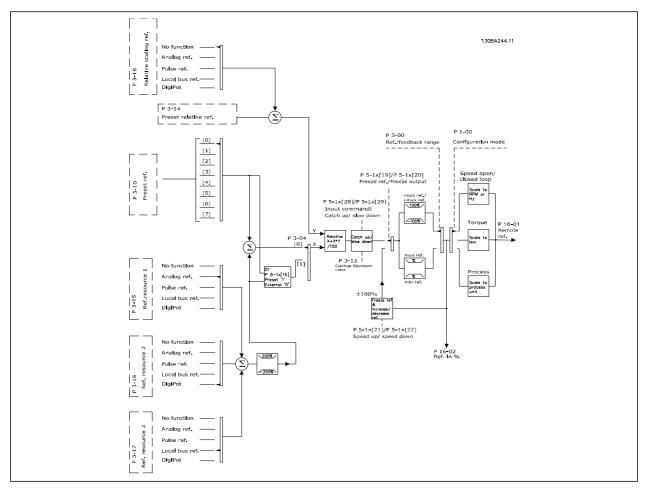

The Remote reference is calculated once every scan interval and initially consists of two parts:

- 1. X (the external reference): A sum (see par. 3-04) of up to four externally selected references, comprising any combination (determined by the setting of par. 3-15, 3-16 and 3-17) of a fixed preset reference (par. 3-10), variable analog references, variable digital pulse references, and various serial bus references in whatever unit the frequency converter is controlled ([Hz], [RPM], [Nm] etc.).
- 2. Y- (the relative reference): A sum of one fixed preset reference (par. 3-14) and one variable analog reference (par. 3-18) in [%].

The two parts are combined in the following calculation: Remote reference = X + X * Y / 100%. The catch up / slow down function and the freeze reference function can both be activated by digital inputs on the frequency converter. They are described in par. group 5-1*.

The scaling of analog references are described in par. groups 6-1* and 6-2*, and the scaling of digital pulse references are described in par. group 5-5*.

Reference limits and ranges are set in par. group 3-0*.

□ Reference Handling

References and feedback can be scaled in physical units (i.e. RPM, Hz, °C) or simply in % relating to the values of par. 3-02 *Minimum Reference* and par. 3-03 *Maximum Reference*.

In that case all analog and pulse inputs are scaled according to the following rules:

• When par. 3-00 *Reference Range*: [0] Min - Max 0% reference equals 0 [unit] where unit can be any unit e.g. rpm, m/s, bar etc. 100% reference equals the Max (abs (par. 3-03 *Maximum Reference*), abs (par. 3-02 *Minimum Reference*)).




$_{-}$ Introduction to FC 300 $_{-}$


• When par. 3-00 *Reference Range*: [1] -Max - +Max 0% reference equals 0 [unit] -100% reference equals -Max Reference 100% reference equals Max Reference.

Bus references are scaled according to the following rules:


- When par. 3-00 *Reference Range*: [0] Min Max. To obtain max resolution on the bus reference the scaling on the bus is: 0% reference equals Min Reference and 100% reference equals Max reference.
- When par. 3-00 *Reference Range*: [1] -Max +Max -100% reference equals -Max Reference 100% reference equals Max Reference.

Par. 3-00 Reference Range, 3-02 Minimum Reference and 3-03 Maximum Reference together define the allowed range of the sum of all references. The sum of all references are clamped when necessary. The relation between the resulting reference (after clamping) and the sum of all references is shown below.

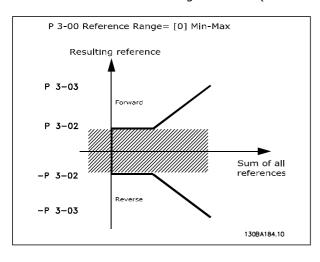

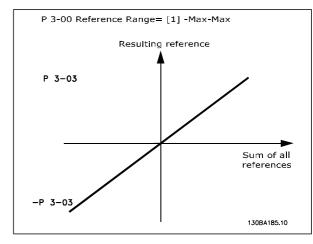

The value of par. 3-02 *Minimum Reference* can not be set to less than 0, unless the par. 1-00 *Configuration Mode* is set to [3] Process. In that case the following relations between the resulting reference (after clamping) and the sum of all references is as shown to the right.

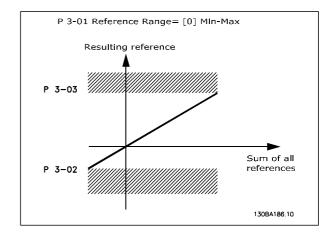


☐ Scaling of References and Feedback


References and feedback are scaled from analog and pulse inputs in the same way. The only difference is that a reference above or below the specified minimum and maximum "endpoints" (P1 and P2 in the graph below) are clamped whereas a feedback above or below is not.





$_$ Introduction to FC 300 $_$

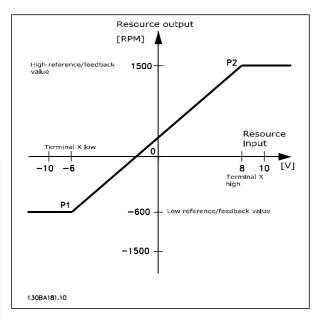

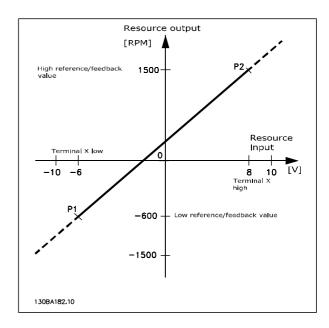

The endpoints P1 and P2 are defined by the following parameters depending on which analog or pulse input is used

	Analog 53	Analog 53	Analog 54	Analog 54	Pulse Input 29	Pulse Input 33
	S201=OFF	S201=ON	S202=OFF	S202=ON		·
P1 = (Minimum input value,	Minimum refere	ence value)				
Minimum reference value	Par. 6-14	Par. 6-14	Par. 6-24	Par. 6-24	Par. 5-52	Par. 5-57
Minimum input value	Par. 6-10 [V]	Par. 6-12 [mA]	Par. 6-20 [V]	Par. 6-22 [mA]	Par. 5-50 [Hz]	Par. 5-55 [Hz]
P2 = (Maximum input value, Maximum reference value)						
Maximum reference value	Par. 6-15	Par. 6-15	Par. 6-25	Par. 6-25	Par. 5-53	Par. 5-58
Maximum input value	Par. 6-11 [V]	Par. 6-13 [mA]	Par. 6-21 [V]	Par. 6-23 [mA]	Par. 5-51 [Hz]	Par. 5-56 [Hz]







□ Dead Band Around Zero

In some cases the reference (in rare cases also the feedback) should have a Dead Band around zero (i.e. to make sure the machine is stopped when the reference is "near zero"). To make the dead band active and to set the amount of dead band, the following settings must be done:

- Either Minimum Reference Value (see table above for relevant parameter) or Maximum Reference Value must be zero. In other words; Either P1 or P2 must be on the X-axis in the graph below.
- And both points defining the scaling graph are in the same quadrant.

The size of the Dead Band is defined by either P1 or P2 as shown in the graph below.

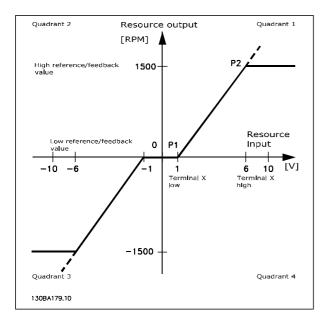

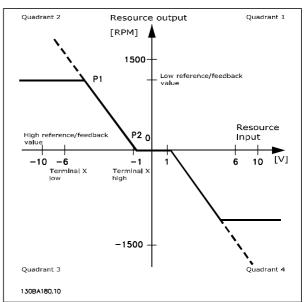


Thus a reference endpoint of P1 = (0 V, 0 RPM) will not result in any dead band, but a reference endpoint of e.g. P1 = (1V, 0 RPM) will result in a -1V to +1V dead band in this case provided that the end point P2 is placed in either Quadrant 1 or Quadrant 4.





Case 1: Positive Reference with Dead band, Digital input to trigger reverse This Case shows how Reference input with limits inside Min – Max limits clamps.

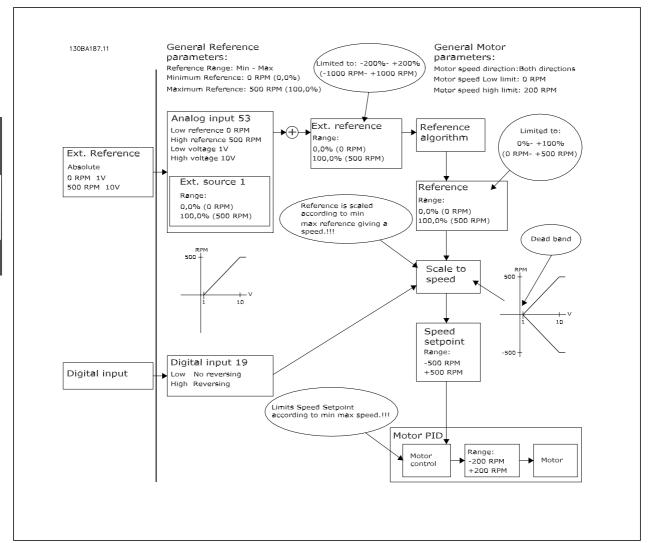






Case 2: Positive Reference with Dead band, Digital input to trigger reverse. Clamping rules.

This Case shows how Reference input with limits outside -Max - +Max limits clamps to the inputs low and high limits before addition to External reference. And how the External reference is clamped to -Max - +Max by the Reference algorithm.

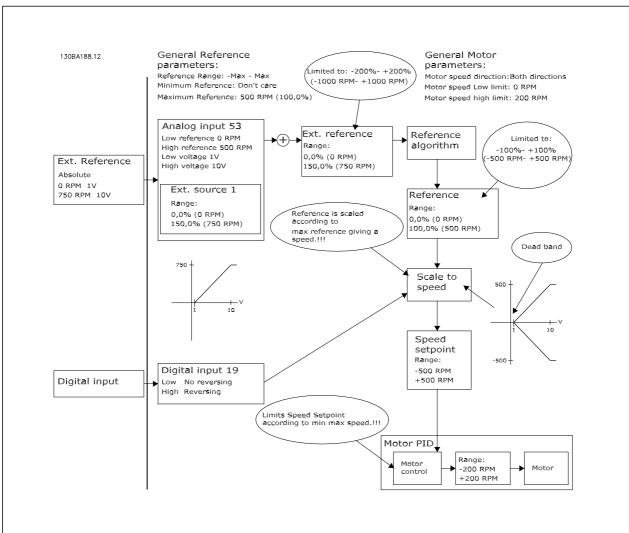






Introduction to FC 300

Case 3: Negative to positive reference with dead band, Sign determines the direction, -Max - +Max

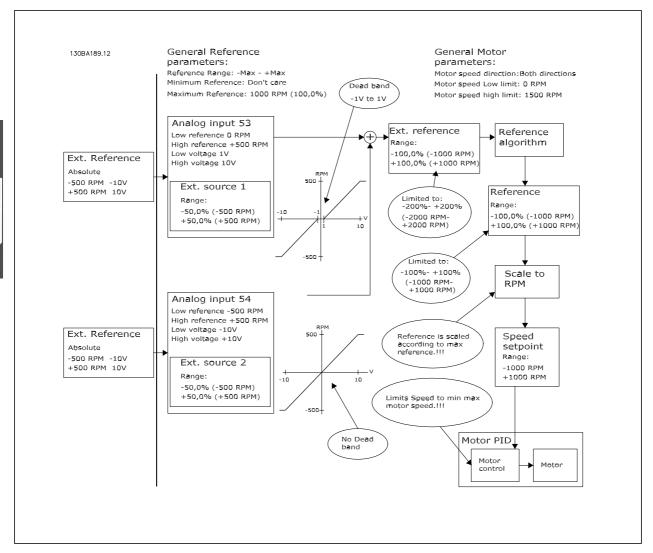





☐ Speed PID Control

The table shows the control configurations where the Speed Control is active.

Par. 1-00 Configura-	Par. 1-01 Motor Contro	ol Principle		
tion Mode	U/f	VVC ^{plus}	Flux Sensorless	Flux w/ enc. feedb
[0] Speed open loop	Not Active	Not Active	ACTIVE	N.A.
[1] Speed closed loop	N.A.	ACTIVE	N.A.	ACTIVE
[2] Torque	N.A.	N.A.	N.A.	Not Active
[3] Process		Not Active	ACTIVE	ACTIVE

Introduction to FC 300

Note: "N.A." means that the specific mode is not available at all. "Not Active" means that the specific mode is available but the Speed Control is not active in that mode.

Note: The Speed Control PID will work under the default parameter setting, but tuning the parameters is highly recommended to optimize the motor control performance. The two Flux motor control principles are specially dependent on proper tuning to yield their full potential.

The following parameters are relevant for the Speed Control:

Parameter	Description of function		
Feedback Par. 7-00	Select from which input t	<u>he Speed PID should get i</u>	ts feedback.
·	_	e quicker the control. How	vever, too high value may
7-02	lead to oscillations.		
Integral Time Par. 7-03	Eliminates steady state spever, too low value may l		eans quick reaction. How-
Differentiation Time Par. 7-04	Provides a gain proportio of zero disables the differ		of the feedback. A setting
		es in reference or feedbac	
Par. 7-05			e differentiator may soon
			changes in the error. The
		s, the stronger the differe	
	entiator gain can thus be limited to allow setting of the reasonable differen-		
	tiation time for slow changes and a suitably quick gain for quick changes.		
Lowpass Filter Time Par.	A low-pass filter that dampens oscillations on the feedback signal and im-		
7-06	proves steady state performance. However, too large filter time will deterio-		
	rate the dynamic performance of the Speed PID control.		
	Practical settings of Par 7-06 taken from the number of pulses per revolution		
	on from encoder (PPR):		
	Encoder PPR	Par. 7-06	
	512	10 ms	
	1024	5 ms	
	2048	2 ms	
	4096	1 ms	

Below is given an example of how to programme the Speed Control:


In this case the Speed PID Control is used to maintain a constant motor speed regardless of the changing load on the motor.

The required motor speed is set via a potentiometer connected to terminal 53. The speed range is 0 - 1500 RPM corresponding to 0 - 10V over the potentiometer.

Starting and stopping is controlled by a switch connected to terminal 18.

The Speed PID monitors the actual RPM of the motor by using a 24V (HTL) incremental encoder

as feedback. The feedback sensor is an encoder (1024 pulses per. revolution) connected to terminals 32 and 33.

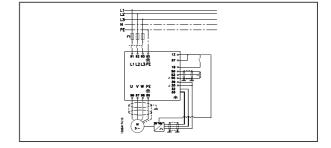

In the parameter list below it is assumed that all other parameters and switches remain at their default setting.





The following must be programmed in order shown - see explanation of settings in the section "How to programme".

Function	Par. no.	Setting
1) Make sure the motor runs properly. Do the fo	llowing:	
Set the motor parameters using name plate data		As specified by motor name plate
Have the VLT make an Automatic Motor Adapta-	1-29	[1] Enable complete AMA
tion		
2) Check the motor is running and the encoder i	s attached proper	ly. Do the following:
Press the "Hand On" LCP key. Check that the		Set a positive reference.
motor is running and note in which direction it is		
turning (henceforth referred to as the "positive		
direction").		
Go to par. 16-20. Turn the motor slowly in the		N.A. (read-only parameter) Note: An increasing
positive direction. It must be turned so slowly		value overflows at 65535 and starts again at 0.
(only a few RPM) that it can be determined if the		
value in par. 16-20 is increasing or decreasing.		
If par. 16-20 is decreasing then change the en-	5-71	[1] Counter clockwise (if par. 16-20 is decreasing)
coder direction in par. 5-71.		
3) Make sure the drive limits are set to safe value		
Set acceptable limits for the references.	3-02	0 RPM (default)
	3-03	1500 RPM (default)
Check that the ramp settings are within drive		default setting
capabilities and allowed application operating	3-42	default setting
specifications.		
Set acceptable limits for the motor speed and		0 RPM (default)
frequency.	4-13	1500 RPM (default)
4) C	4-19	60 Hz (default 132 Hz)
4) Configure the Speed Control and select the M		
Activation of Speed Control	1-00	[1] Speed closed loop
Selection of Motor Control Principle	1-01	[3] Flux w motor feedb
5) Configure and scale the reference to the Spec		Not no cooper (dofo. dt)
Set up Analog Input 53 as a reference Source	3-15	Not necessary (default)
Scale Analog Input 53 0 RPM (0 V) to 1500 RPM	0-1**	Not necessary (default)
(10V)	hadi far the Mote	or Control and the Cheed Control
6) Configure the 24V HTL encoder signal as feed Set up digital input 32 and 33 as encoder inputs		
Set up digital input 32 and 33 as encoder inputs	5-14	[0] No operation (default)
Chance terminal 22/22 as motor foodback	1-02	Not possessary (default)
Choose terminal 32/33 as motor feedback Choose terminal 32/33 as Speed PID feedback	7-00	Not necessary (default) Not necessary (default)
7) Tune the Speed Control PID parameters	7-00	Not flecessary (default)
Use the tuning guidelines when relevant or tune	7_0*	See the guidelines below
manually	/-0	See the guidelines below
8) Finished!		
Save the parameter setting to the LCP for safe	0-50	[1] All to LCP
keeping	0 30	[1] All to LCF
reching		

□ Tuning PID Speed Control

The following tuning guidelines are relevant when using one of the Flux motor control principles in applications where the load is mainly inertial (with a low amount of friction).

The value of par. 7-02 Proportional Gain is dependent on the combined inertia of the motor and load, and the selected bandwidth can be calculated using the following formula:

Par.
$$7 - 02 = \frac{Total \ inertia \left[kgm^2 \right] x \ Par. \ 1 - 25}{Par. \ 1 - 20 \ x \ 9550} \ x \ Bandwidth \left[rad / s \right]$$

Note: Par. 1-20 is the motor power in [kW] (i.e. enter '4' kW instead of '4000' W in the formula). A practical value for the Bandwith is 20 rad/s. Check the result of the par. 7-02 calculation against the following formula (not required if you are using a high resolution feedback such as a SinCos feedback):

Par.
$$7 - 02_{MAXIMUM} = \frac{0.01 \times 4 \times Encoder \ Resolution \times par. \ 7 - 06}{2 \times \pi} \times Max \ torque \ ripple \ [\%]$$

A good start value for par. 7-06 *Speed Filter Time* is 5 ms (lower encoder resolution calls for a higher filter value). Typically a Max Torque Ripple of 3 % is acceptable. For incremental encoders the Encoder Resolution is found in either par. 5-70 (24V HTL on standard drive) or par. 17-11 (5V TTL on MCB102 Option).





$_{-}$ Introduction to FC 300 $_{-}$

Generally the practical maximum limit of par. 7-02 is determined by the encoder resolution and the feedback filter time but other factors in the application might limit the par. 7-02 *Proportional Gain* to a lower value

To minimize the overshoot, par. 7-03 *Integral Time* could be set to approx. 2.5 s (varies with the application).

Par. 7-04 *Differential Time* should be set to 0 until everything else is tuned. If necessary finish the tuning by experimenting with small increments of this setting.


□ Process PID Control

The Process PID Control can be used to control application parameters that can be measured by a sensor (i.e. pressure, temperature, flow) and be affected by the connected motor through a pump, fan or otherwise.

The table shows the control configurations where the Process Control is possible. When a Flux Vector motor control principle is used, take care also to tune the Speed Control PID parameters. Refer to the section about the Control Structure to see where the Speed Control is active.

Par. 1-00 Configura-	Par. 1-01 Motor Control Principle			
tion Mode	U/f	VVC ^{plus}	Flux Sensorless	Flux w/ enc. feedb
[3] Process	N.A.	Process	Process & Speed	Process & Speed

Note: The Process Control PID will work under the default parameter setting, but tuning the parameters is highly recommended to optimise the application control performance. The two Flux motor control principles are specially dependant on proper Speed Control PID tuning (prior to tuning the Process Control PID) to yield their full potential.

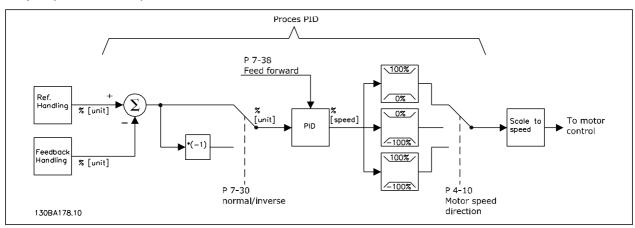

Process PID Control diagram





The following parameters are relevant for the Process Control


Parameter	Description of function
Feedback 1 Source Par. 7-20	Select from which Source (i.e. analog or pulse input) the Process PID should get its feedback
Feedback 2 Source Par. 7-22	Optional: Determine if (and from where) the Process PID should get an additional feedback signal. If an additional feedback source is selected the two feedback signals will be added together before being used in the Process PID Control.
Normal/inverse control Par. 7-30	Under [0] Normal operation the Process Control will respond with an increase of the motor speed if the feedback is getting lower than the reference. In the same situation, but under [1] Inverse operation, the Process Control will respond with a decreasing motor speed instead.
Anti Windup Par. 7-31	The anti windup function ensures that when either a frequency limit or a torque limit is reached, the integrator will be set to a gain that corresponds to the actual frequency. This avoids integrating on an error that cannot in any case be compensated for by means of a speed change. This function can be disabled by selecting [0] "Off".
Control Start Value Par. 7-32	In some applications, reaching the required speed/set point can take a very long time. In such applications it might be an advantage to set a fixed motor speed from the frequency converter before the process control is activated. This is done by setting a Process PID Start Value (speed) in par. 7-32.
Proportional Gain Par. 7-33	The higher the value - the quicker the control. However, too large value may lead to oscillations.
Integral Time Par. 7-34	Eliminates steady state speed error. Lower value means quick reaction. However, too small value may lead to oscillations.
Differentiation Time Par. 7-35	Provides a gain proportional to the rate of change of the feedback. A setting of zero disables the differentiator.
Differentiator Gain Limit Par. 7-36	If there are quick changes in reference or feedback in a given application - which means that the error changes swiftly - the differentiator may soon become too dominant. This is because it reacts to changes in the error. The quicker the error changes, the stronger the differentiator gain is. The differentiator gain can thus be limited to allow setting of the reasonable differentiation time for slow changes.
Feed Forward Factor Par. 7-38	In application where there is a good (and approximately linear) correlation between the process reference and the motor speed necessary for obtaining that reference, the Feed Forward Factor can be used to achieve better dynamic performance of the Process PID Control.
term. 29), Par. 5-59 (Pulse term. 33),	speed limit of the ripples occurring on the feedback signal. Example: If the low-pass filter has been set to 0.1s, the limit speed will be 10 RAD/sec. (the reciprocal of 0.1 s), corresponding to $(10/(2 \times \pi)) = 1.6$ Hz.
	This means that all currents/voltages that vary by more than 1.6 oscillations per second will be damped by the filter. The control will only be carried out on a feedback signal that varies by a frequency (speed) of less than 1.6 Hz. The low-pass filter improves steady state performance but selecting a too large filter time will deteriorate the dynamic performance of the Process PID Control.





☐ Example of Process PID Control

The following is an example of a Process PID Control used in a ventilation system:

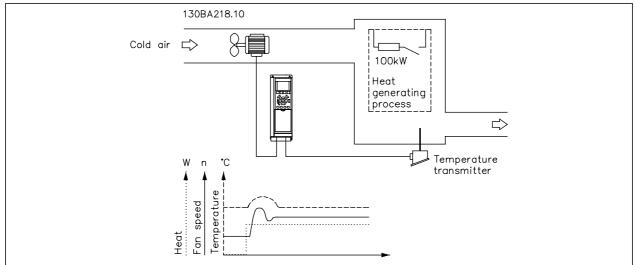


In a ventilation system, the temperature is to be settable from - 5 - 35°C with a potentiometer of 0-10 Volt. The set temperature must be kept constant, for which purpose the Process Control is to be used.

The control is of the inverse type, which means that when the temperature increases, the ventilation speed is increased as well, so as to generate more air. When the temperature drops, the speed is reduced. The transmitter used is a temperature sensor with a working range of -10-40°C, 4-20 mA. Min. / Max. speed 300 / 1500 RPM.



NB!

The example shows a two-wire transmitter.

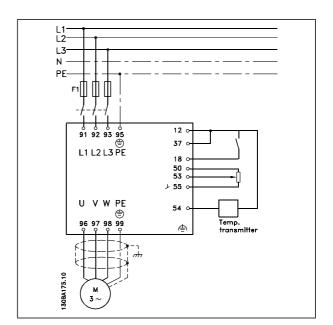

- 1. Start/Stop via switch connected to terminal 18.
- 2. Temperature reference via potentiometer (-5-35°C, 0-10 VDC) connected to terminal 53.
- 3. Temperature feedback via transmitter (-10-40°C, 4-20 mA) connected to terminal 54. Switch S202 set to ON (current input).

Example of Process PID Control set-up



Function	Par.	Setting
	no.	
Initialize the frequency converter	14-22	[2] Initialization - make a power cycling - press reset
1) Set motor parameters:		
Set the motor parameters according to	the motor parameters according to 1-2* As stated on motor	
name plate data Perform a full A utomation M otor A dapta- tion [1] Enable complete AMA		·
		[1] Enable complete AMA
2) Check that motor is running in the right direction.		
When motor is connected to frequency converter with straight forward phase order as U - U; V- V; W - W motor s		

usually turns clockwise seen into shaft end.

rection by applying a mandal reference.	
If motor turns opposite of required direc-	4-10
tion:	
1. Change motor direction in par. 4-10	

Select correct motor shaft direction

2. Turn off mains - wait for DC link to dis-
charge - switch two of the motor phases

Press "Hand On" LCP key. Check shaft direction by applying a manual reference.

Set configuration mode 1-00 [3] Process Set Local Mode Configuration 1-05 [0] Speed Open Loop

3) Set reference configuration, ie. the range for reference handling. Set scaling of analog input in par. 6-xx		
Set reference/feedback units	3-01	[60] ° C Unit shown on display
Set min. reference (10° C)	3-02	-5° C
Set max. reference (80° C)	3-03	35° C
If set value is determined from a preset	3-10	[0] 35%
value (array parameter), set other refer-		$P3 - 10_{(0)}$ (($P3 - 03$) ($P3 - 03$) 34.5° 6
ence sources to No Function		$Ref = \frac{75 \cdot 10(0)}{100} \times ((P3 - 03) - (P3 - 02)) = 24,5^{\circ} C$

			100
			Par. 3-14 to par. 3-18 [0] = No Function
4) Adjust limits for the frequency converter:			
	Set ramp times to an appropriate value as	3-41	20 sec.
	20 sec.	3-42	20 sec.
	Set min speed limits	4-11	300 RPM

4-13 1500 RPM Set motor speed max. limit Set max. output frequency 4-19 60 Hz Set S201 or S202 to wanted analog input function (Voltage (V) or milli-Amps (I)) NOTE! Switches are sensitive - Make a power cycling keeping default setting of V

5) Scale analog inputs used for reference a	nd feedb	ack
Set terminal 53 low voltage	6-10	0 V
Set terminal 53 high voltage	6-11	10 V
Set terminal 54 low feedback value	6-24	-5° C
Set terminal 54 high feedback value	6-25	35° C

7-20 [2] Analog input 54 Set feedback source

6) Basic PID settings		
Process PID Normal/Inverse	7-30	[0] Normal
Process PID Anti Wind-up	7-31	[1] On
Process PID start speed	7-37	300 rpm
Save parameters to LCP	0-50	[1] All to LCP



$_{-}$ Introduction to FC 300 $\,$ -

Optimisation of the process regulator

The basic settings have now been made; all that needs to be done is to optimise the proportional gain, the integration time and the differentiation time (par. 7-33, 7-34, 7-35). In most processes, this can be done by following the guidelines given below.

- 1. Start the motor
- 2. Set par. 7-33 (*Proportional Gain*) to 0.3 and increase it until the feedback signal again begins to vary continuously. Then reduce the value until the feedback signal has stabilised. Now lower the proportional gain by 40-60%.
- 3. Set par. 7-34 (Integration Time) to 20 sec. and reduce the value until the feedback signal again begins to vary continuously. Increase the integration time until the feedback signal stabilises, followed by an increase of 15-50%.
- 4. Only use par. 7-35 for very fast-acting systems only (differentiation time). The typical value is four times the set integration time. The differentiator should only be used when the setting of the proportional gain and the integration time has been fully optimised. Make sure that oscillations on the feedback signal is sufficiently dampened by the lowpass filter on the feedback signal.



NB!

If necessary, start/stop can be activated a number of times in order to provoke a variation of the feedback signal.

□ Ziegler Nichols Tuning Method

In order to tune the PID controls of the frequency converter, several tuning methods can be used. One approach is to use a technique which was developed in the 1950s but which has stood the test of time and is still used today. This method is known as the Ziegler Nichols tuning method.



NB!

The method described must not be used on applications that could be damaged by the oscillations created by marginally stable control settings.

The criteria for adjusting the parameters are based on evaluating the system at the limit of stability rather than on taking a step response. We increase the proportional gain until we observe continuous oscillations (as measured on the feedback), that is, until the system becomes marginally stable. The corresponding gain (K_u) is called the ultimate gain. The period of the oscillation (P_u) (called the ultimate period) is determined as shown in Figure 1.

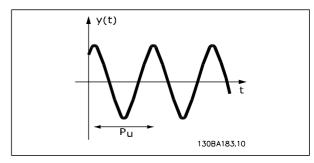


Figure 1: Marginally stable system

 P_u should be measured when the amplitude of oscillation is quite small. Then we "back off" from this gain again, as shown in Table 1.

 K_u is the gain at which the oscillation is obtained.

Type of Control	Proportional Gain	Integral Time	Differentiation Time
PI-control	0.45 * Ku	$0.833 * P_u$	-
PID tight control	0.6 * Ku	$0.5 * P_u$	$0.125 * P_u$
PID some overshoot	0.33 * Ku	0.5 * Pu	0.33 * Pu

Table 1: Ziegler Nichols tuning for regulator, based on a stability boundary.

Experience has shown that the control setting according to Ziegler Nichols rule provides a good closed loop response for many systems. The process operator can do the final tuning of the control iteratively to yield satisfactory control.



Step-by-step Description:

- **Step 1:** Select only Proportional Control, meaning that the Integral time is selected to the maximum value, while the differentiation time is selected to zero.
- **Step 2:** Increase the value of the proportional gain until the point of instability is reached (sustained oscillations) and the critical value of gain, K_u , is reached.
- Step 3: Measure the period of oscillation to obtain the critical time constant, P_u .
- Step 4: Use the table above to calculate the necessary PID control parameters.

□ General Aspects of EMC Emissions


Electrical interference is usually conducted at frequences in the range 150 kHz to 30 MHz. Airborne interference from the drive system in the range 30 MHz to 1 GHz is generated from the inverter, motor cable, and the motor.

As shown in the illustration below, capacitive currents in the motor cable coupled with a high dV/dt from the motor voltage generate leakage currents.

The use of a screened motor cable increases the leakage current (see illustration below) because screened cables have higher capacitance to earth than unscreened cables. If the leakage current is not filtered, it will cause greater interference on the mains in the radio frequency range below approx. $5 \, \text{MHz}$. Since the leakage current (I_1) is carried back to the unit through the screen (I_3), there will in principle only be a small electro-magnetic field (I_4) from the screened motor cable according to the below figure.

The screen reduces the radiated interference but increases the low-frequency interference on the mains. The motor cable screen must be connected to the frequency converter enclosure as well as on the motor enclosure. This is best done by using integrated screen clamps so as to avoid twisted screen ends (pigtails). These increase the screen impedance at higher frequencies, which reduces the screen effect and increases the leakage current (I₄).

If a screened cable is used for Fieldbus, relay, control cable, signal interface and brake, the screen must be mounted on the enclosure at both ends. In some situations, however, it will be necessary to break the screen to avoid current loops.

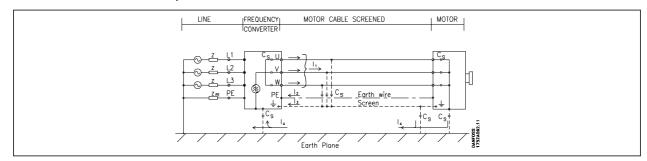

If the screen is to be placed on a mounting plate for the frequency converter, the mounting plate must be made of metal, because the screen currents have to be conveyed back to the unit. Moreover, ensure good electrical contact from the mounting plate through the mounting screws to the frequency converter chassis.



NB!

When unscreened cables are used, some emission requirements are not complied with, although the immunity requirements are observed.

In order to reduce the interference level from the entire system (unit + installation), make motor and brake cables as short as possible. Avoid placing cables with a sensitive signal level alongside motor and brake cables. Radio interference higher than 50 MHz (airborne) is especially generated by the control electronics.






Introduction to FC 300 —

EMC Test Results (Emission, Immunity)

The following test results have been obtained using an application with a frequency converter (with options if relevant), a screened control cable, a control box with potentiometer, as well as a motor and a screened motor cable.

	Cor	nducted emis	sion	Radiate	ed emission
	Industrial e	nvironment	Housing, trades and light indus- tries	Industrial en- vironment	Housing, trades and light indus- tries
	EN 55011	EN 55011	EN 55011	EN 55011	EN 55011 Class B
Setup	Class A2	Class A1	Class B	Class A1	
FC 301/FC 302 (H2)	_				
0-3.7 kW 200-240 V	5 m	No	No	No	No
0-7.5 kW 380-480/500 V	5 m	No	No	No	No
FC 301 (H1)					
0-3.7 kW 200-240 V	75 m	50 m	10 m	Yes	No
0-7.5 kW 380-480 V	75 m	50 m	10 m	Yes	No
FC 301 (H3)					
0-1.5 kW 200-240 V	50 m	25 m	2.5 m	Yes	No
0-1.5 kW 380-480 V	50 m	25 m	2.5 m	Yes	No
FC 302 (H1)					
0-3.7 kW 200-240 V	150 m	150 m	50 m	Yes	No
0-7.5 kW 380-500 V	150 m	150 m	50 m	Yes	No
FC 301/FC 302 (H2)					
11-22 kW 380-480/500 V	25 m	No	No	No	No
FC 301 (H1)					
11-22 kW 380-480 V	75 m	50 m	10 m	Yes	No
FC 302 (H1)					
11-22 kW 380-500 V	150 m	150 m	50 m	Yes	No
FC 302 (HX)					
0.75 - 7.5 kW					
550 - 600 V	No	No	No	No	No

 

HX - No EMC filters build in the frequency converter (600 V units only)



H1 - Integrated EMC filter. Fulfil Class A1/B

H2 - No additional EMC filter. Fulfil Class A2

 $[\]mbox{H3}$ - Integrated EMC filter. Fulfil class A1/B (Enclosure type A1 only)



$_{-}$ Introduction to FC 300 $\,$ -

□ Required Compliance Levels

Standard / environment	Housing, trade	s, and light industries	Industrial envi	ronment
	Conducted	Radiated	Conducted	Radiated
IEC 61000-6-3 (generic)	Class B	Class B		
IEC 61000-6-4			Class A1	Class A1
EN 61800-3 (restricted)	Class A1	Class A1	Class A1	Class A1
EN 61800-3 (unrestricted)	Class B	Class B	Class A2	Class A2

EN 55011: Threshold values and measuring methods for radio interference from industrial, scientific

and medical (ISM) high-frequency equipment.

Class A1: Equipment used in a public supply network. Restricted distribution.

Class A2: Equipment used in a public supply network.

Class B1: Equipment used in areas with a public supply network (dwellings, commerce, and light

industries). Unrestricted distribution.

EMC Immunity

In order to document immunity against electrical interference from electrical phenomena, the following immunity tests have been made on a system consisting of a frequency converter (with options, if relevant), a screened control cable, and a control box with potentiometer, motor cable, and motor.

The tests were performed in accordance with the following basic standards:

- EN 61000-4-2 (IEC 61000-4-2): Electrostatic discharges (ESD) Simulation of electrostatic discharges from human beings.
- EN 61000-4-3 (IEC 61000-4-3): Incoming electromagnetic field radiation, amplitude modulated Simulation of the effects of radar and radio communication equipment as well as mobile communications.
- **EN 61000-4-4 (IEC 61000-4-4): Burst transients** Simulation of interference brought about by switching with a contactor, relays, or similar devices.
- **EN 61000-4-5 (IEC 61000-4-5): Surge transients** Simulation of transients brouht e.g. by lightning that strikes near installations.
- EN 61000-4-6 (IEC 61000-4-6): RF Common mode Simulation of the effect from radiotransmitting equipment connected to connection cables.

See following EMC immunity form.

Immunity continued

FC 301/FC 302; 200-240 V, 380)-500 V				
Basic standard	Burst IEC 61000-4-4	Surge IEC 61000-4-5	ESD IEC 61000-4-2	Radiated electromagnetic field IEC 61000-4-3	RF common mode voltage IEC 61000-4-6
Acceptance criterion	В	В	В	A	Α
Line	4 kV CM	2 kV/2 Ω DM 4 kV/12 Ω CM	-	-	10 V _{RMS}
Motor	4 kV CM	4 kV/2 Ω ¹⁾	_	_	10 V _{RMS}
Brake	4 kV CM	4 kV/2 Ω ¹⁾	_	_	10 V _{RMS}
Load sharing	4 kV CM	4 kV/2 Ω ¹⁾	_	_	10 V _{RMS}
Control wires	2 kV CM	2 kV/2 Ω ¹⁾	_	_	10 V _{RMS}
Standard bus	2 kV CM	2 kV/2 Ω ¹⁾	_	_	10 V _{RMS}
Relay wires	2 kV CM	2 kV/2 Ω ¹⁾	_	_	10 V _{RMS}
Application and Fieldbus options	2 kV CM	2 kV/2 Ω ¹⁾	_	_	10 V _{RMS}
LCP cable	2 kV CM	2 kV/2 Ω ¹⁾	_	_	10 V _{RMS}
External 24 V DC	2 kV CM	0.5 kV/2 Ω DM 1 kV/12 Ω CM	_	_	10 V _{RMS}
Enclosure	-	_	8 kV AD 6 kV CD	10 V/m	_
AD. Air Diaghange					

AD: Air Discharge

CD: Contact Discharge CM: Common mode

DM: Differential mode

1. Injection on cable shield.



Danfoss

$_{-}$ Introduction to FC 300 $\,$ -

PELV offers protection by way of extra low voltage. Protection against electric shock is ensured when the electrical supply is of the PELV type and the installation is made as described in local/national regulations on PELV supplies.

All control terminals and relay terminals 01-03/04-06 comply with PELV (Protective Extra Low Voltage) (Does not apply to 525-600 V units and at grounded Delta leg above 300 V).


Galvanic (ensured) isolation is obtained by fulfilling requirements for higher isolation and by providing the relevant creapage/clearance distances. These requirements are described in the EN 61800-5-1 standard.

The components that make up the electrical isolation, as described below, also comply with the requirements for higher isolation and the relevant test as described in EN 61800-5-1.

The PELV galvanic isolation can be shown in six locations (see illustration):

In order to maintain PELV all connections made to the control terminals must be PELV, e.g. thermistor must be reinforced/double insulated.

- 1. Power supply (SMPS) incl. signal isolation of U_{DC} , indicating the intermediate current voltage.
- 2. Gate drive that runs the IGBTs (trigger transformers/opto-couplers).
- 3. Current transducers.
- 4. Opto-coupler, brake module.
- 5. Internal inrush, RFI, and temperature measurement circuits.
- 6. Custom relays.

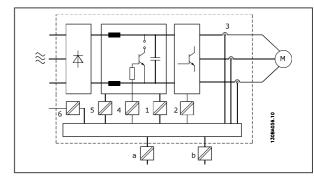

Galvanic isolation

The functional galvanic isolation (a and b on drawing) is for the 24 V back-up option and for the RS 485 standard bus interface.



☐ Earth Leakage Current



Warning:

Touching the electrical parts may be fatal - even after the equipment has been disconnected from mains.

Also make sure that other voltage inputs have been disconnected, such as load sharing (linkage of DC intermediate circuit), as well as the motor connection for kinetic back-up.

Using VLT AutomationDrive FC 300: wait at least 15 minutes.

Shorter time is allowed only if indicated on the nameplate for the specific unit.

Leakage Current

The earth leakage current from the FC 300 exceeds 3.5 mA. To ensure that the earth cable has a good mechanical connection to the earth connection (terminal 95), the cable cross section must be at least 10 mm^2 or 2 rated earth wires terminated separately.

Residual Current Device

This product can cause a d.c. current in the protective conductor. Where a residual current device (RCD) is used for extra protection, only an RCD of Type B (time delayed) shall be used on the supply side of this product. See also RCD Application Note MN.90.GX.02.

Protective earthing of the frequency converter and the use of RCD's must always follow national and local regulations.

□ Selection of Brake Resistor

To handle higher demands by generatoric braking a brake resistor is necessary. Using a brake resistor ensures that the energy is absorbed in the brake resistor and not in the frequency converter.

If the amount of kinetic energy transferred to the resistor in each braking period is not known, the average power can be calculated on the basis of the cycle time and braking time also called intermitted duty cycle. The resistor intermittent duty cycle is an indication of the duty cycle at which the resistor is active. The below figure shows a typical braking cycle.



NB!


Motor suppliers often use S5 when stating the permissible load which is an expression of intermittent duty cycle.

The intermittent duty cycle for the resistor is calculated as follows:

Duty cycle = t_b/T

T = cycle time in seconds

tb is the braking time in seconds (of the cycle time)

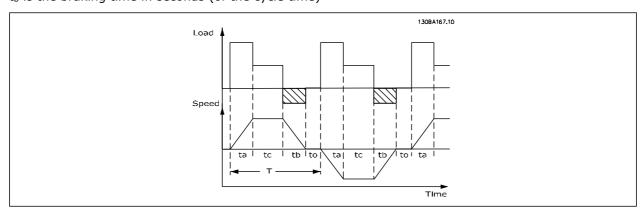

Danfoss offers brake resistors with duty cycle of 5%, 10% and 40%. If a 10% duty cycle is applied, the brake resistors are able to absorb brake power for 10% of the cycle time. The remaining 90% of the cycle time will be used on dissipating excess heat.



Danfoss

Introduction to FC 300 —

The max. permissible load on the brake resistor is stated as a peak power at a given intermittent duty cycle and can be calculated as:

The brake resistance is calculated as shown:

$$R_{br}[\Omega] = \frac{U_{dc}^2}{P_{peak}}$$

where

 $P_{peak} = P_{motor} \times M_{br} \times \eta_{motor} \times \eta_{VLT}[W]$

As can be seen, the brake resistance depends on the intermediate circuit voltage (U_{dc}). The FC 301 and FC 302 brake function is settled in 4 areas of mains:

Size	Brake active	Warning before cut out	Cut out (trip)
FC 301 / 302 3 x 200-240 V	390 V (UDC)	405 V	410 V
FC 301 3 x 380-480 V	778 V	810 V	820 V
FC 302 3 x 380-500 V	810 V	840 V	850 V
FC 302 3 x 525-600 V	943 V	965 V	975 V





NB!

Check that the brake resistor can cope with a voltage of 410 V, 820 V, 850 V or 975 V - unless Danfoss brake resistors are used.

Danfoss recommends the brake resistance R_{rec} , i.e. one that guarantees that the frequency converter is able to brake at the highest braking torque ($M_{br(\%)}$) of 160%. The formula can be written as:

$$R_{rec} [\Omega] = \frac{U_{dc}^2 \times 100}{P_{motor} \times M_{br} (\%) \times \eta_{VLT} \times \eta_{motor}}$$

n_{motor} is typically at 0.90

n_{VLT} is typically at 0.98

For 200 V, 480 V, 500 V and 600 V frequency converters, R_{rec} at 160% braking torque is written as:

$$200V : R_{rec} = \frac{107780}{P_{motor}} [\Omega]$$

480V :
$$R_{rec} = \frac{375300}{P_{motor}} [\Omega] 1)$$

480V:
$$R_{rec} = \frac{428914}{P_{motor}} [\Omega] ^{2}$$

$$500V$$
: $R_{rec} = \frac{464923}{P_{motor}}$ [Ω]

600
$$V$$
: $R_{rec} = \frac{630137}{P_{motor}} [\Omega]$

 
690V:
$$R_{rec} = \frac{832664}{P_{motor}} [\Omega]$$

- 1) For FC 300 frequency converters ≤ 7.5 kW shaft output
- 2) For FC 300 frequency converters > 7.5 kW shaft output



NB

The resistor brake circuit resistance selected should not be higher than that recommended by Danfoss. If a brake resistor with a higher ohmic value is selected, the 160% braking torque may not be achieved because there is a risk that the frequency converter cuts out for safety reasons.







NB!

If a short circuit in the brake transistor occurs, power dissipation in the brake resistor is only prevented by using a mains switch or contactor to disconnect the mains for the frequency converter. (The contactor can be controlled by the frequency converter).



NB!

Do not touch the brake resistor as it can get very hot while/after braking.

Control with Brake Function

The brake is to limit the voltage in the intermediate circuit when the motor acts as a generator. This occurs, for example, when the load drives the motor and the power accumulates on the DC link. The brake is built up as a chopper circuit with the connection of an external brake resistor. Placing the brake resistor externally offers the following advantages:

- The brake resistor can be selected on the basis of the application in question.
- The brake energy can be dissipated outside the control panel, i.e. where the energy can be utilized.
- The electronics of the frequency converter will not be overheated if the brake resistor is overloaded.

The brake is protected against short-circuiting of the brake resistor, and the brake transistor is monitored to ensure that short-circuiting of the transistor is detected. A relay/digital output can be used for protecting the brake resistor against overloading in connection with a fault in the frequency converter. In addition, the brake makes it possible to read out the momentary power and the mean power for the latest 120 seconds. The brake can also monitor the power energizing and make sure it does not exceed a limit selected in par. 2-12. In par. 2-13, select the function to carry out when the power transmitted to the brake resistor exceeds the limit set in par. 2-12.



NB!

Monitoring the brake power is not a safety function; a thermal switch is required for that purpose. The brake resistor circuit is not earth leakage protected.

Over voltage control (OVC) (exclusive brake resistor) can be selected as an alternative brake function in par. 2-17. This function is active for all units. The function ensures that a trip can be avoided if the DC link voltage increases. This is done by increasing the output frequency to limit the voltage from the DC link. It is a very useful function, e.g. if the ramp-down time is too short since tripping of the frequency converter is avoided. In this situation the ramp-down time is extended.


□ Mechanical Brakecontrol

For hoisting applications, it is necessary to be able to control an electro-magnetic brake. For controlling the brake, a relay output (relay1 or relay2) or a programmed digital output (terminal 27 or 29) is required. Normally, this output must be closed for as long as the frequency converter is unable to 'hold' the motor, e.g. because of too big load. In par. 5-40 (Array parameter), par. 5-30, or par. 5-31 (digital output 27 or 29), select *mechanical brake control* [32] for applications with an electro-magnetic brake.

When *mechanical brake control* [32] is selected, the mechanical brake relay stays closed during start until the output current is above the level selected in par. 2-20 *Release Brake Current*. During stop, the mechanical brake will close when the speed is below the level selected in par. 2-21 *Activate Brake Speed [RPM]*. If the frequency converter is brought into an alarm condition, i.e. over-voltage situation, the mechanical brake immediately cuts in. This is also the case during safe stop.



$_{-}$ Introduction to FC 300 $_{-}$

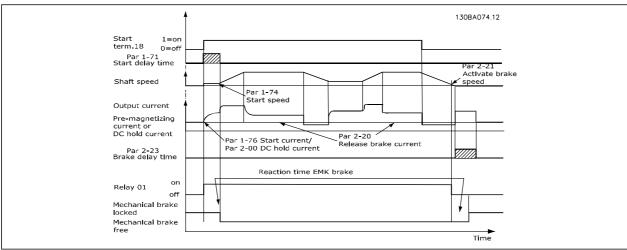

Step-by-step Description

In hoisting/lowering applications, it must be possible to control an electro-mehanical brake.

- To control the mechanical brake any relay output or digital output (terminal 27 or 29) can be used. If necessary use a suitable contactor.
- Ensure that the output is switched off as long as the frequency converter is unable to drive the
 motor, for example due to the load being too heavy or due to the fact that the motor has not
 been mounted yet.
- Select *Mechanical brake control* [32] in par. 5-4* (or in par. 5-3*) before connecting the mechanical brake.
- The brake is released when the motor current exceeds the preset value in par. 2-20.
- The brake is engaged when the output frequency is less than the frequency set in par. 2-21 or 2-22 and only if the frequency converter carries out a stop command.



NB!

For vertical lifting or hoisting applications it is strongly recommended to ensure that the load can be stopped in case of an emergency or a malfunction of a single part such as a contactor, etc.

If the frequency converter is in alarm mode or in an over voltage situation, the mechanical brake cuts in.



NB!

For hoisting applications make sure that the torque limits in par. 4-16 and 4-17 are set lower than the current limit in par. 4-18. Also it is recommendable to set par. 14-25, *Trip Delay at Torque Limit* to "0", par. 14-26, *Trip Delay at Inverter Fault* to "0" and par. 14-10, *Mains Failure* to "[3], *Coasting*".

☐ Hoist Mechanical Brake

The VLT Automation Drive FC 300 features a mechanical brake control specifically designed for hoisting applications. The main difference compared to the regular mechanical brake control, where a relay function monitoring the output current is used, is that the hoist mechanical brake function has direct control over the brake relay. This means that instead of setting a current for release of the brake, the torque applied against the closed brake before release is defined. Because the torque is defined directly the setup is more straightforward for hoisting applications.

By using the Proportional Gain Boost (par. 2-28) a quicker control when releasing the brake can be obtained. The hoist mechanical brake strategy is based on a 3-step sequence, where motor control and brake release are synchronized in order to obtain the smoothest possible brake release:



$_{-}$ Introduction to FC 300 $\,$ -

1. Pre-magnetize the motor


In order to ensure that there is a hold on the motor and to verify that it is mounted correctly, the motor is first pre-magnetized.

2. Apply torque against the closed brake

When the load is held by the mechanical brake, its size cannot be determined, only its direction. The moment the brake opens, the load must be taken over by the motor. To facilitate the take-over, a user defined torque, set in par. 2-26, is applied in hoisting direction. This will be used to initialize the speed controller that will finally take over the load. In order to reduce wear on the gearbox due to backlash, the torque is ramped up.

3. Release brake

When the torque reaches the value set in par. 2-26 *Torque Ref*, the brake is released. The value set in par. 2-25 *Brake Release Time* determines the delay before the load is released. In order to react as quickly as possible on the load-step that follows upon brake release, the speed-PID control can be boosted by increasing the proportional gain.

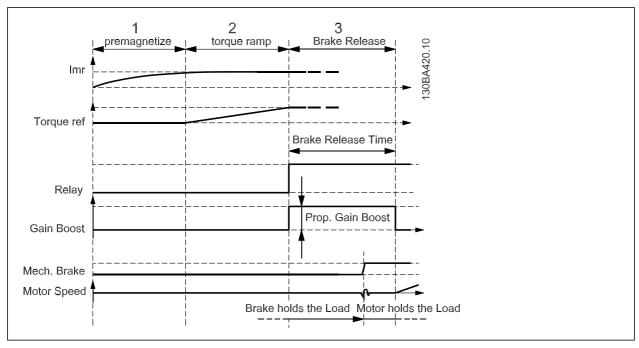

Brake release sequence for hoist mechanical brake control

Cabling

EMC (twisted cables/shielding)

To reduce the electrical noise from the wires between the brake resistor and the frequency converter, the wires must be twisted.

For enhanced EMC performance a metal screen can be used.

□ Smart Logic Control

The Smart Logic Control (SLC) is essentially a sequence of user defined actions (see par. 13-52) executed by the SLC when the associated user defined *event* (see par. 13-51) is evaluated as TRUE by the SLC. *Events* and *actions* are each numbered and are linked in pairs called states. This means that when *event* [1] is fulfilled (attains the value TRUE), *action* [1] is executed. After this, the conditions of *event* [2] will be evaluated and if evaluated TRUE, *action* [2]will be executed and so on. Events and actions are placed in array parameters.

Only one *event* will be evaluated at any time. If an *event* is evaluated as FALSE, nothing happens (in the SLC) during the present scan interval and no other *events* will be evaluated. This means that when the






Introduction to FC 300

SLC starts, it evaluates event [1] (and only event [1]) each scan interval. Only when event [1] is evaluated TRUE, the SLC executes action [1] and starts evaluating event [2].

It is possible to program from 0 to 20 events and actions. When the last event / action has been executed, the sequence starts over again from event [1] / action [1]. The illustration shows an example with three events / actions:

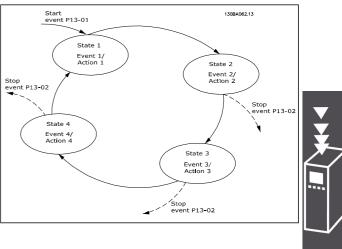



Short Circuit (Motor Phase - Phase)

The frequency converter is protected against short circuits by means of current measurement in each of the three motor phases or in the DC link. A short circuit between two output phases will cause an overcurrent in the inverter. The inverter will be turned off individually when the short circuit current exceeds the permitted value (Alarm 16 Trip Lock.

To protect the drive against a short circuit at the load sharing and brake outputs please see the design guidelines.

Switching on the Output

Switching on the output between the motor and the frequency converter is fully permitted. You cannot damage the frequency converter in any way by switching on the output. However, fault messages may appear.



Introduction to FC 300 —

Motor-generated Overvoltage

The voltage in the intermediate circuit is increased when the motor acts as a generator. This occurs in following cases:

- 1. The load drives the motor (at constant output frequency from the frequency converter), ie. the load generates energy.
- 2. During deceleration ("ramp-down") if the moment of inertia is high, the friction is low and the ramp-down time is too short for the energy to be dissipated as a loss in the frequency converter, the motor and the installation.
- 3. In-correct slip compensation setting may cause higher DC link voltage.

The control unit may attempt to correct the ramp if possible (par. 2-17 Over-voltage Control.

The inverter turns off to protect the transistors and the intermediate circuit capacitors when a certain voltage level is reached.

See par. 2-10 and par. 2-17 to select the method used for controlling the intermediate circuit voltage level.

Mains Drop-out

During a mains drop-out, the frequency converter keeps running until the intermediate circuit voltage drops below the minimum stop level, which is typically 15% below the frequency converter's lowest rated supply voltage.

The mains voltage before the drop-out and the motor load determines how long it takes for the inverter to coast.

Static Overload in VVCplus mode


When the frequency converter is overloaded (the torque limit in par. 4-16/4-17 is reached), the controls reduces the output frequency to reduce the load.

If the overload is excessive, a current may occur that makes the frequency converter cut out after approx. 5-10 s.

Operation within the torque limit is limited in time (0-60 s) in par. 14-25.

■ Motor Thermal Protection

The motor temperature is calculated on the basis of motor current, output frequency, and time or thermistor. See par. 1-90 in the chapter *How to Programme*.

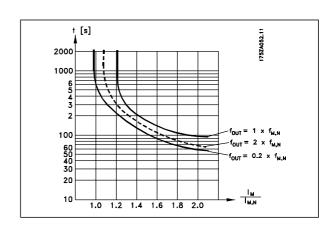

□ Safe Stop of FC 300

The FC 302, and also the FC301 in A1 enclosure, can perform the safety function *Safe Torque Off* (As defined by draft CD IEC 61800-5-2) or *Stop Category 0* (as defined in EN 60204-1).

FC 301 A1 enclosure: When Safe Stop is included in the drive, position 18 of Type Code must be either T or U. If position 18 is B or X, Safe Stop Terminal 37 is not included! Example:

Type Code for FC 301 A1 with Safe Stop: FC-301PK75T4**Z20**H4**T**GCXXXSXXXXA0BXCXXXXD0





$_{-}$ Introduction to FC 300 $\,$ -

It is designed and approved suitable for the requirements of Safety Category 3 in EN 954-1. This functionality is called Safe Stop. Prior to integration and use of Safe Stop in an installation, a thorough risk analysis on the installation must be carried out in order to determine whether the Safe Stop functionality and safety category are appropriate and sufficient. In order to install and use the Safe Stop function in accordance with the requirements of Safety Category 3 in EN 954-1, the related information and instructions of the FC 300 Design Guide MG.33.BX.YY must be followed! The information and instructions of the Operating Instructions are not sufficient for a correct and safe use of the Safe Stop functionality!






☐ Safe Stop Installation (FC 302 and FC 301 - A1 enclosure only)

To carry out an installation of a Category 0 Stop (EN60204) in conformance with Safety Category 3 (EN954-1), follow these instructions:


- The bridge (jumper) between Terminal 37 and 24 V DC must be removed. Cutting or breaking the jumper is not sufficient. Remove it entirely to avoid short-circuiting. See jumper on illustration.
- 2. Connect terminal 37 to 24 V DC by a short-circuit protected cable. The 24 V DC voltage supply must be interruptible by an EN954-1 Category 3 circuit interrupt device. If the interrupt device and the frequency converter are placed in the same installation panel, you can use a regular cable instead of a protected one.

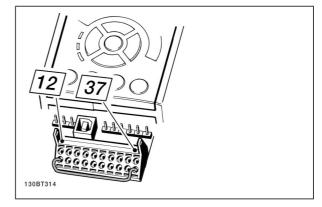


Bridge jumper between terminal 37 and 24 VDC

$_{-}$ Introduction to FC 300 $_{-}$

The illustration below shows a Stopping Category 0 (EN 60204-1) with safety Category 3 (EN 954-1). The circuit interrupt is caused by an opening door contact. The illustration also shows how to connect a non-safety related hardware coast.

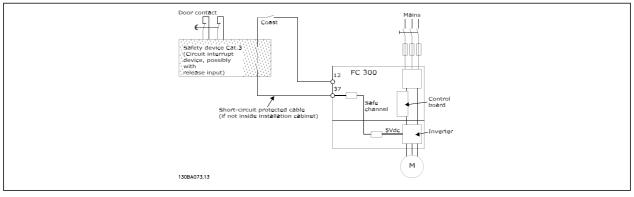

 

□ Safe Stop Commissioning Test

After installation and before first operation, perform a commissioning test of an installation or application making use of FC 300 Safe Stop.

Moreover, perform the test after each modification of the installation or application, which the FC 300 Safe Stop is part of.

The commissioning test:

- 1. Remove the 24 V DC voltage supply to terminal 37 by the interrupt device while the motor is driven by the FC 302 (i.e. mains supply is not interrupted). The test step is passed if the motor reacts with a coast and the mechanical brake (if connected) is activated.
- 2. Then send Reset signal (via Bus, Digital I/O, or [Reset] key). The test step is passed if the motor remains in the Safe Stop state, and the mechanical brake (if connected) remains activated.
- 3. Then reapply 24 V DC to terminal 37. The test step is passed if the motor remains in the coasted state, and the mechanical brake (if connected) remains activated.
- 4. Then send Reset signal (via Bus, Digital I/O, or [Reset] key). The test step is passed if the motor becomes operational again.
- 5. The commissioning test is passed if all four test steps are passed.



NB!

The Safe Stop function of FC 302 can be used for asynchronous and synchronous motors. It may happen that two faults occur in the frequency converter's power semiconductor. When using synchronous motors this may cause a residual rotation. The rotation can be calculated to Angle=360/(Number of Poles). The application using synchronous motors must take this into consideration and ensure that this is not a safety critical issue. This situation is not relevant for asynchronous motors.



NB!

In order to use the Safe Stop functionality in conformance with the requirements of EN-954-1 Category 3, a number of conditions must be fulfilled by the installation of Safe Stop. Please see section Safe Stop Installation for further information.





$_$ Introduction to FC 300 $_$



NB!


The frequency converter does not provide a safety-related protection against unintended or malicious voltage supply to terminal 37 and subsequent reset. Provide this protection via the interrupt device, at the application level, or organisational level. For more information - see section *Safe Stop Installation*.









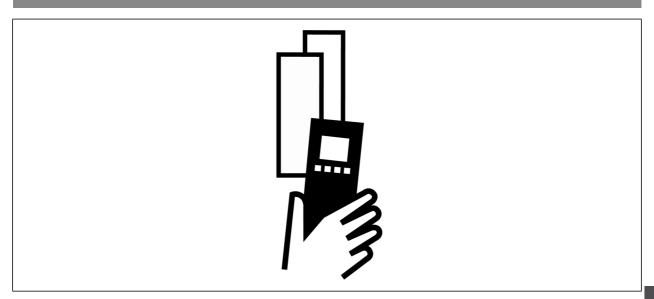

Electrical Data

Mains Supp FC 301/FC 3	oly 3 x 200 - 240 VAC	PK25	PK37	PK55	PK75	P1K1	P1K5	P2K2	P3K0	P3K7
1 0 001/1 0 0	Typical Shaft Output [kW]	0.25	0.37	0.55	0.75	1.1	1.5	2.2	3	3.7
	Enclosure IP 20/IP 21	A2	A2	A2	A2	A2	A2	A2	А3	А3
	Enclosure IP 20 (FC 301 only)	A1	A1	A1	A1	A1	A1	-	-	-
	Enclosure IP 55	A5	A5	A5	A5	A5	A5	A5	A5	A5
Output cur	rent									
	Continuous (3 x 200-240 V) [A]	1.8	2.4	3.5	4.6	6.6	7.5	10.6	12.5	16.7
(S)0	Intermittent (3 x 200-240 V) [A]	2.9	3.8	5.6	7.4	10.6	12.0	17.0	20.0	26.7
	Continuous KVA (208 V AC) [KVA]	0.65	0.86	1.26	1.66	2.38	2.70	3.82	4.50	6.00
	Max. cable size (mains, motor, brake) [AWG] ²⁾ [mm ²]					- 10 AW 2 - 4 mm	_			
Max. input	current									
	Continuous (3 x 200-240 V) [A]	1.6	2.2	3.2	4.1	5.9	6.8	9.5	11.3	15.0
	Intermittent (3 x 200-240 V) [A]	2.6	3.5	5.1	6.6	9.4	10.9	15.2	18.1	24.0
0000 0000	Max. pre-fuses ¹⁾ [A] Environment	10	10	10	10	20	20	20	32	32
→	Estimated power loss at rated max. load [W] 4)	21	29	42	54	63	82	116	155	185
	Weight, enclosure IP20 [kg]	4.7	4.7	4.8	4.8	4.9	4.9	4.9	6.6	6.6
በ 25 - 3 7 ៤	A1 (IP 20) Efficiency ⁴⁾ W only available as 160% hi	2.7 0.94 ab over	2.7 0.94 load	2.7 0.95	2.7 0.95	2.7 0.96	2.7 0.96	- 0.96	- 0.96	- 0.96
0.23 - 3.7 K	vv Only available as 100% III	gii uvei	ioau.							







Mains Supply 3 FC 301/FC 302	Mains Supply 3 x 200- 240 VAC FC 301/FC 302	P5K5	K 5	P7	P7K5	P11K	1K	P15K	ΣK	P18K5	K5	P22K	X	P30K	¥	P37K	¥
High/ Normal Load*	ad*	위	NO	НО	NO	P	NO	P	NO	Р	NO	P	NO	임	NO	P	NO
	Typical Shaft Output [kW]	5.5	7.5	7.5	11	11	15	15	18.5	18.5	22	22	30	30	37	37	45
	Enclosure IP21	B1	1	В	1	B	B2	C	1	S		C	_	C	0.1	2	
	Enclosure IP55	B1		B1	Ţ	Ω	2	Ü	_	ت		Ü		C	0.1	S	
Output current	ı																
	Continuous (3 x 200-240 V) [A]	24.2	30.8	30.8	46.2	46.2	59.4	59.4	74.8	74.8	88	88	115	115	143	143	170
	Intermittent (60 sec overload) (3 \times 200-240 V) [A]	38.7	33.9	49.3	50.8	73.9	65.3	89.1	82.3	112	8.96	132	127	173	157	215	187
	Continuous KVA (208 V AC) [KVA]	8.7	11.1	11.1	16.6	16.6	21.4	21.4	26.9	26.9	31.7	31.7	41.4	41.4	51.5	51.5	61.2
Max. input current	rent																
	Continuous (3 x 200-240 V) [A]	22	28	28	45	42	54	54	89	89	80	80	104	104	130	130	154
1	Intermittent (60 sec overload) (3 x 200-240 V) [A]	35.2	30.8	44.8	46.2	67.2	59.4	81	74.8	102	88	120	114	156	143	195	169
	Max. cable size fmm ² / AWGl ²⁾																
	Max. pre-fuses [A] ¹	9	63	9	63	80	80	125	īĊ	125	22	160	Q	200	0	250	0
	Estimated power loss at rated max. load [W] ⁴⁾	239	310	371	514	463	602	624	737	740	845	874	1140	1143	1353	1400	1636
	Weight, enclosure IP21, IP 55 [kq]	2	23	2	23	2	27	45	10	45	10	45	10	65	10	9	
* High overload	4 Efficiency ⁴⁾ 0.964 0.964 4 High overload = 160% torque during 60 s, Normal overload	0.9 3 60 s, №	0.964 s, Normal o		0.959 ad = 110%	0.9 torque (959 0.964 = 110% torque during 60 s	0.964 0 s	64	0.965	92	0.965	65	0.966	99	0.966	99

_ FC 300 Selection __



Mains Supply 3 x 380	Mains Supply 3 x 380 - 500 VAC (FC 302), 3 x 380 - 480		VAC (FC 301) K 37 PK 55	PK75	P1K1	P1K5	P2K2	P3K0	P4K0	P5K5	P7K5
FC 301/FC 302 Typical Shaft Output [kW]	5	0.37	0.55	0.75	1.1	1.5	2.2	က	4	5.5	7.5
Enclosure IP20/IP21		A2	A2	A2	A2	A2	A2	A2	A2	A3	A3
Enclosure IP20 (FC 301 only)		A1	A1	A1	A1	A1					
Enclosure IP55		A5	A5	A5	A5	A5	A5	A5	A5	A5	A5
Output current High overload 160% for 1 minute	or 1 minute										
	Shaft output [kW]	0.37	0.55	0.75	1.1	1.5	2.2	m	4	5.5	7.5
	Continuous (3 × 380-440 V) [A]	1.3	1.8	2.4	т	4.1	5.6	7.2	10	13	16
	Intermittent (3 x 380-440 V) [A]	2.1	2.9	3.8	8.4	9.9	9.0	11.5	16	20.8	25.6
A CONTRACTOR OF THE PROPERTY O	Continuous (3 x 440-500 V) [A]	1.2	1.6	2.1	2.7	3.4	8.4	6.3	8.2	11	14.5
	Intermittent $(3 \times 440-500 \text{ V}) [A]$	1.9	5.6	3.4	4.3	5.4	7.7	10.1	13.1	17.6	23.2
<u> </u>	Continuous KVA (400 V AC) [KVA]	6.0	1.3	1.7	2.1	2.8	3.9	5.0	6.9	9.0	11.0
	Continuous KVA (460 V AC) [KVA]	0.9	1.3	1.7	2.4	2.7	3.8	5.0	6.5	8.8	11.6
	Max. cable size (mains, motor, brake) [AWG] ²⁾ [mm²]				24 - 10 AWG 0.2 - 4 mm ²	(D.o.			24 0.2	24 - 10 AWG 0.2 - 4 mm ²	
Max. input current											
	Continuous (3 x 380-440 V) [A]	1.2	1.6	2.2	2.7	3.7	2.0	6.5	0.6	11.7	14.4
	Intermittent (3 x 380-440 V) [A]	1.9	5.6	3.5	4.3	5.9	8.0	10.4	14.4	18.7	23.0
	Continuous (3 × 440-500 V) [A]	1.0	1.4	1.9	2.7	3.1	4.3	5.7	7.4	6.6	13.0
	Intermittent $(3 \times 440-500 \text{ V}) [A]$	1.6	2.2	3.0	4.3	5.0	6.9	9.1	11.8	15.8	20.8
1	Max. pre-fuses ¹⁾ [A]	10	10	10	10	10	20	20	20	32	32
	Estimated power loss at rated max. load [W] ⁴⁾	35	42	46	28	62	88	116	124	187	255
	Weight, enclosure IP20	4.7	4.7	8.4	8.4	6.4	4.9	4.9	4.9	9.9	9.9
	Enclosure IP55 Efficiency ⁴⁾	13.5 0.93	13.5 0.95	13.5 0.96	13.5 0.96	13.5 0.97	13.5 0.97	13.5 0.97	13.5 0.97	14.2 0.97	14.2 0.97
0.37 - 7.5 kW only avail	0.37 - 7.5 kW only available as 160% high overload.										









Mains Supply 3 x 380 - 500 FC 301/FC 302	Mains Supply 3 x 380 - 500 VAC (FC 302), 3 x 380 - 480 PC 301/FC 302	VAC (FC 301))1) P11K	P15K	×	<u> </u>	P18K	P2	P22K
High/ Normal Load*		오	ON	오	ON	유	ON	유	NO
	Typical Shaft output [kW]	11	15			18.5	22.0		30.0
	Enclosure IP21		B1 B1	B1			B2 B2	ш а.	B2 B2
	Output current								
	Continuous (3 x 380-440 V) [A]	24	32	32	37.5	37.5	44	44	61
	Intermittent (60 sec overload) $(3 \times 380-440 \text{ V})$ [A]	38.4	35.2	51.2	41.3	09	48.4	70.4	67.1
	Continuous (3 x 440-500 V) [A]	21	27	27	34	34	40	40	52
	Intermittent (60 sec overload) (3 x 440-500 V) [A]	33.6	29.7	43.2	37.4	54.4	44	49	57.2
	Continuous KVA (400 V AC) [KVA]	16.6	22.2	22.2	26	26	30.5	30.5	42.3
	Continuous KVA (460 V AC) [KVA]		21.5		27.1		31.9		41.4
Max. input current									
	Continuous (3 x 380-440 V) [A]	22	29	59	34	34	40	40	55
	Intermittent (60 sec overload) (3 x 380-440 V) [A]	35.2	31.9	46.4	37.4	54.4	44	9	60.5
**	Continuous (3 x 440-500 V) [A]	19	25	25	31	31	36	36	47
	Intermittent (60 sec overload) (3 x 440-500 V) [A]	30.4	27.5	40	34.1	49.6	39.6	57.6	51.7
	Max. cable size [mm² / AWG] ²⁾		16/6	16/6	9	E.	35/2	35	35/2
	Max. pre-fuses $\left[A\right]^1$		63	63		v	63	ω	80
	Estimated power loss at rated max. load [W] ⁴⁾	291	392	379	465	444	525	547	739
	Weight, enclosure IP21, IP 55 [kq]		23	23			27	N	27
* High overload = 160% torq	load	0 = 110% torqu	0.977 110% torque during 60 s	0.978	82	0.0	0.979	0.0	0.978





over- 91.5 over- 78 42.3 over- 70.5	30 C1 37 C1	HO NO 37 C1 C1 C1 110 99 65 80 97.5 88 50.6 62.4 63.7 66 82 99 90.2 59 73 88.5 80.3	HO NO 45 C1 C1 C1 C1 C1 B0 106 B2 96 B2 96 T3 95 T3 95 T10 105 T3 95 T10 105	HO NO NO S5 C2	HO 75 75 147 147 118 118 1177 177	P75K NO 90 C2 C2 1177 1128 1128 1145 1145 1145 1160
ed power loss max. load [W] ⁴⁾	270 698	697 843	891 1083	1022 1384	4 1232	1474
Weight, enclosure IP21, IP 55 [ka]	45	45	45	65		65
efficiency ⁴⁾	0.983	0.983	0.982	0.983	0.0	0.985









Mains Supply	3 x 525 - 600 VAC (FC 30	2 only)								
FC 302		PK75	P1K1	P1K5	P2K2	P3K0	P3K 7	P4K0	P5K5	P7K5
	Typical Shaft Output [kW]	0.75	1.1	1.5	2.2	3	3.7	4	5.5	7.5
Output curre										
	Continuous (3 x 525-550 V) [A]	1.8	2.6	2.9	4.1	5.2	-	6.4	9.5	11.5
	Intermittent (3 x 525-550 V) [A]	2.9	4.2	4.6	6.6	8.3	-	10.2	15.2	18.4
	Continuous (3 x 525-600 V) [A]	1.7	2.4	2.7	3.9	4.9	-	6.1	9.0	11.0
(1000 (1000)	Intermittent (3 x 525-600 V) [A]	2.7	3.8	4.3	6.2	7.8	-	9.8	14.4	17.6
	Continuous kVA (525 V AC) [kVA]	1.7	2.5	2.8	3.9	5.0	-	6.1	9.0	11.0
	Continuous kVA (575 V AC) [kVA]	1.7	2.4	2.7	3.9	4.9	-	6.1	9.0	11.0
	Max. cable size (mains, motor, brake) [AWG] ²⁾ [mm ²]			- 10 AV 2 - 4 mr			-		- 10 AV 2 - 4 mi	
Max. input c	urrent									
	Continuous (3 x 525-600 V) [A]	1.7	2.4	2.7	4.1	5.2	-	5.8	8.6	10.4
	Intermittent (3 x 525-600 V) [A]	2.7	3.8	4.3	6.6	8.3	-	9.3	13.8	16.6
0000	Max. pre-fuses ¹⁾ [A]	10	10	10	20	20	-	20	32	32
	Environment Estimated power loss at rated max. load [W] 4) Enclosure IP 20	35	50	65	92	122	-	145	195	261
	Weight, enclosure IP20 [kg]	6.5	6.5	6.5	6.5	6.5	-	6.5	6.6	6.6
	Efficiency 4)	0.97	0.97	0.97	0.97	0.97	-	0.97	0.97	0.97

- 1) For type of fuse see section Fuses.
- 2) American Wire Gauge.
- 3) Measured using 5 m screened motor cables at rated load and rated frequency.
- 4) The typical power loss is at nominal load conditions and expected to be within +/-15% (tolerence relates to variety in voltage and cable conditions).

Values are based on a typical motor efficiency (eff2/eff3 border line). Motors with lower efficiency will also add to the power loss in the frequency converter and opposite.

If the switching frequency is raised from nominal the power losses may rise significantly.

LCP and typical control card power consumptions are included. Further options and customer load may add up to 30W to the losses. (Though typical only 4W extra for a fully loaded control card, or options for slot A or slot B, each).

Although measurements are made with state of the art equipment, some measurement inaccuracy must be allowed for (+/-5%).



General Specifications

Supply voltage	200-240 V ±10%
Supply voltage FC	301: 380-480 V / FC 302: 380-500 V ±10%
Supply voltage	FC 302: 525-600 V ±10%
Supply frequency	50/60 Hz
Max. imbalance temporary between mains phases	3.0 % of rated supply voltage
True Power Factor (λ)	≥ 0.9 nominal at rated load
Displacement Power Factor (cos φ) near unity	(> 0.98
Switching on input supply L1, L2, L3 (power-ups) \leq 7.5 kW	maximum 2 times/min
Switching on input supply L1, L2, L3 (power-ups) \geq 11 kW	maximum 1 time/min
Environment according to EN60664-1	overvoltage category III/pollution degree 2

The unit is suitable for use on a circuit capable of delivering not more than 100.000 RMS symmetrical Amperes, 240/500/600 V maximum.

Motor output (U, V, W):

Output voltage	0 - 100% of supply voltage
Output frequency	FC 301: 0.2 - 1000 Hz / FC 302: 0 - 1000 Hz
Switching on output	Unlimited
Ramp times	0.01 - 3600 sec.

Torque characteristics:

Starting torque (Constant torque)	maximum 160% for 60 sec.*
Starting torque	maximum 180% up to 0.5 sec.*
Overload torque (Constant torque)	maximum 160% for 60 sec.*
Starting torque (Variable torque)	maximum 110% for 60 sec.*
Overload torque (Variable torque)	maximum 110% for 60 sec.

^{*}Percentage relates to FC 300 nominal torque.

Cable lengths and cross sections:

Protection and Features:

The state of the s	
FC 301: 50 m / FC 301 (A1-encl.):	: 25 m / FC 302: 150
Max. motor cable length, screened/armoured	m
FC 301: 75 m / FC 301 (A1-ei	ncl.): 50 m / FC 302:
Max. motor cable length, unscreened/unarmoured	300 m
Max. cross section to motor, mains, load sharing and brake (see section Electrical Da	ta
in the FC 300 Design Guide MG.33.BX.YY for more information), (0.25 kW - 7.5 kW $$	V) 4 mm ² / 10 AWG
Max. cross section to motor, mains, load sharing and brake (see section Electrical Da	ta
in the FC 300 Design Guide MG.33.BX.YY for more information), (11-15 kW)	16 mm ² / 6 AWG
Max. cross section to motor, mains, load sharing and brake (see section Electrical Da	ta
in the FC 300 Design Guide MG.33.BX.YY for more information), (18.5-22 kW)	35 mm ² / 2 AWG
Maximum cross section to control terminals, flexible/ rigid wire without cable en	d
sleeves	1.5 mm ² /16 AWG
Maximum cross section to control terminals, flexible wire with cable end sleeves	1 mm ² /18 AWG
Maximum cross section to control terminals, flexible wire with cable end sleeves wit	:h
collar	0.5 mm ² /20 AWG
Minimum cross section to control terminals	0.25 mm ² / 24 AWG



Danfoss

50 mA rms

60 mA rms

400 nF

$_{-}\,$ FC 300 Selection $\,-\,$

- Electronic thermal motor protection against overload.
- Temperature monitoring of the heatsink ensures that the frequency converter trips if the temperature reaches 95 °C \pm 5°C. An overload temperature cannot be reset until the temperature of the heatsink is below 70 °C \pm 5°C (Guideline these temperatures may vary for different power sizes, enclosures etc.).
- The frequency converter is protected against short-circuits on motor terminals U, V, W.
- If a mains phase is missing, the frequency converter trips or issues a warning (depending on the load).
- Monitoring of the intermediate circuit voltage ensures that the frequency converter trips if the intermediate circuit voltage is too low or too high.
- The frequency converter constantly checks for critical levels of internal temperature, load current, high voltage on the intermediate circuit and low motor speeds. As a response to a critical level, the frequency converter can adjust the switching frequency and/ or change the switching pattern in order to ensure the performance of the drive.



Digital inputs:

Digital inputs.	
Programmable digital inputs	FC 301: 4 (5) / FC 302: 4 (6)
Terminal number	18, 19, 27 ¹⁾ , 29 ⁴⁾ , 32, 33,
Logic	PNP or NPN
Voltage level	0 - 24 V DC
Voltage level, logic'0' PNP	< 5 V DC
Voltage level, logic'1' PNP	> 10 V DC
Voltage level, logic '0' NPN ²⁾	> 19 V DC
Voltage level, logic '1' NPN ²⁾	< 14 V DC
Maximum voltage on input	28 V DC
Pulse frequency range	0 - 110 kHz
(Duty cycle) Min. pulse width	4.5 ms
Input resistance, R _i	approx. 4 kΩ
Safe stop Terminal 37 ³⁾ (Terminal 37 is fixed PNP logic):	
Voltage level	0 - 24 V DC
Voltage level, logic'0' PNP	< 4 V DC
Voltage level, logic'1' PNP	>20 V DC

All digital inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

- 1) Terminals 27 and 29 can also be programmed as output.
- 2) Except safe stop input Terminal 37.

Nominal input current at 24 V

Nominal input current at 20 V


Input capacitance

- 3) Terminal 37 is only available in FC 302 and FC 301 A1 with Safe Stop. It can only be used as safe stop input. Terminal 37 is suitable for category 3 installations according to EN 954-1 (safe stop according to category 0 EN 60204-1) as required by the EU Machinery Directive 98/37/EC. Terminal 37 and the Safe Stop function are designed in conformance with EN 60204-1, EN 50178, EN 61800-2, EN 61800-3, and EN 954-1. For correct and safe use of the Safe Stop function follow the related information and instructions in the Design Guide.
- 4) FC 302 and FC 301/ A1 with safe stop only.



Analog inputs: Number of analog inputs 2 Terminal number 53, 54 Modes Voltage or current Mode select Switch S201 and switch S202 Voltage mode Switch S201/switch S202 = OFF (U)Voltage level FC 301: 0 to + 10/ FC 302: -10 to +10 V (scaleable) Input resistance, Ri approx. $10 \text{ k}\Omega$ ± 20 V Max. voltage Current mode Switch S201/switch S202 = ON (I) Current level 0/4 to 20 mA (scaleable) Input resistance, Ri approx. 200 Ω Max. current 30 mA Resolution for analog inputs 10 bit (+ sign) Max. error 0.5% of full scale Accuracy of analog inputs FC 301: 20 Hz/ FC 302: 100 Hz Bandwidth

The analog inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

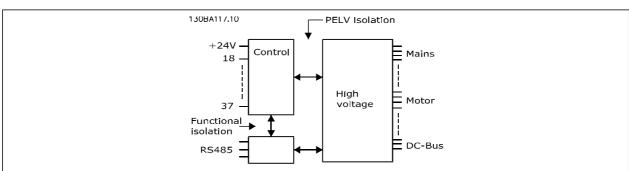



Pulse/encoder inputs:

· u.e.s, eeue.	
Programmable pulse/encoder inputs	2/1
Terminal number pulse/encoder	29 ³ , 33 ¹⁾ / 32 ² , 33 ^{2) 3)}
Max. frequency at terminal 29, 32, 33 ³⁾	110 kHz (Push-pull driven)
Max. frequency at terminal 29, 32, 33 ³⁾	5 kHz (open collector)
Min. frequency at terminal 29, 32, 33 3)	4 Hz
Voltage level	see section on Digital input
1aximum voltage on input 28	
Input resistance, R _i	approx. 4 kΩ
Pulse input accuracy (0.1 - 1 kHz)	Max. error: 0.1% of full scale
Encoder input accuracy (1 - 110 kHz)	Max. error: 0.05 % of full scale

The pulse and encoder inputs (terminals 29, 32, 33) are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

- 1) Pulse inputs are 29 and 33
- 2) Encoder inputs: 32 = A, and 33 = B
- 3) Terminal 29: Only FC 302



Analog output:

Number of programmable analog outputs	1
Terminal number	42
Current range at analog output	0/4 - 20 mA
Max. load GND - analog output	500 Ω
Accuracy on analog output	Max. error: 0.5 % of full scale
Resolution on analog output	12 bit

The analogue output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

Control card, RS 485 serial communication:

Terminal number	68 (P,TX+, RX+), 69 (N,TX-, RX-)
Terminal number 61	Common for terminals 68 and 69

The RS 485 serial communication circuit is functionally separated from other central circuits and galvanically isolated from the supply voltage (PELV).



Digital output:	
Programmable digital/pulse outputs	2
Terminal number	27, 29 ^{1) 2)}
Voltage level at digital/frequency output	0 - 24 V
Max. output current (sink or source)	40 mA
Max. load at frequency output	1 kΩ
Max. capacitive load at frequency output	10 nF
Minimum output frequency at frequency output	0 Hz
Maximum output frequency at frequency output	32 kHz
Accuracy of frequency output	Max. error: 0.1 % of full scale
Resolution of frequency outputs	12 bit

- 1) Terminal 27 and 29 can also be programmed as input.
- 2) Terminal 29: Only FC 302.

The digital output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

Control card, 24 V DC output:

Terminal number	12, 13
Output voltage	24 V +1, -3 V
Max. load	FC 301: 130 mA/ FC 302: 200 mA

The 24 V DC supply is galvanically isolated from the supply voltage (PELV), but has the same potential as the analog and digital inputs and outputs.

Relay outputs:

Programmable relay outputs	FC 301 ≤ 7.5 kW: 1 / FC 302 all kW: 2
Relay 01 Terminal number	1-3 (break), 1-2 (make)
Max. terminal load (AC-1) ¹⁾ on 1-3 (NC), 1-2 (NO) (Resistive lo	ad) 240 V AC, 2 A
Max. terminal load (AC-15) ¹⁾ (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Max. terminal load (DC-1) ¹⁾ on 1-2 (NO), 1-3 (NC) (Resistive lo	ad) 60 V DC, 1A
Max. terminal load (DC-13) ¹⁾ (Inductive load)	24 V DC, 0.1A
Relay 02 (FC 302 only) Terminal number	4-6 (break), 4-5 (make)
Max. terminal load (AC-1) ¹⁾ on 4-5 (NO) (Resistive load)	400 V AC, 2 A



Max. terminal load (AC-15) ¹⁾ on 4-5 (NO) (Inductive load @ cose	φ 0.4) 240 V AC, 0.2 A
Max. terminal load (DC-1) ¹⁾ on 4-5 (NO) (Resistive load)	80 V DC, 2 A
Max. terminal load (DC-13) ¹⁾ on 4-5 (NO) (Inductive load)	24 V DC, 0.1A
Max. terminal load (AC-1) ¹⁾ on 4-6 (NC) (Resistive load)	240 V AC, 2 A
Max. terminal load (AC-15) ¹⁾ on 4-6 (NC) (Inductive load @ cosc	φ 0.4) 240 V AC, 0.2A
Max. terminal load (DC-1) ¹⁾ on 4-6 (NC) (Resistive load)	50 V DC, 2 A
Max. terminal load (DC-13) ¹⁾ on 4-6 (NC) (Inductive load)	24 V DC, 0.1 A
Min. terminal load on 1-3 (NC), 1-2 (NO), 4-6 (NC), 4-5 (NO)	24 V DC 10 mA, 24 V AC 20 mA
Environment according to EN 60664-1 over	rvoltage category III/pollution degree 2

1) IEC 60947 part 4 and 5

The relay contacts are galvanically isolated from the rest of the circuit by reinforced isolation (PELV).

Control card, 10 V DC output:

Terminal number	50
Output voltage	10.5 V ±0.5 V
Max. load	15 mA

The 10 V DC supply is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

Control characteristics:

FC 301: +/- 0.013 Hz / FC 302: +/- 0.003 Hz
FC 301: ≤± 1ms / FC 302: ≤± 0.1 msec
FC 301: ≤ 10 ms / FC 302: ≤ 2 ms
1:100 of synchronous speed
1:1000 of synchronous speed
30 - 4000 rpm: error ±8 rpm
feedback de-
0 - 6000 rpm: error ±0.15 rpm

All control characteristics are based on a 4-pole asynchronous motor

Control card performance:

Scan interval		FC 301: 5 ms / FC 302: 1 ms
Surroundings:		
Enclosure ≤ 7.5 kW		IP 20, IP 55
Enclosure ≥ 11 kW		IP 21, IP 55
Enclosure kit available ≤ 7	7.5 kW	IP21/TYPE 1/IP 4X top
Vibration test		1.0 g RMS
Max. relative humidity	5% - 95%(IEC 60 721-	3-3; Class 3K3 (non-condensing) during operation
Aggressive environment (IEC 721-3-3), uncoated	class 3C2
Aggressive environment (IEC 721-3-3), coated	class 3C3
Test method according t	o IEC 60068-2-43 H2S (1	0
days)		Max. 50 °C (24-hour average maximum 45 °C)
Ambient temperature		Max. 50 °C (24-hour average maximum 45 °C)
Derating for high ambien	t temperature, see section (on special conditions
Minimum ambient temper	ature during full-scale oper	ation 0 °C
Minimum ambient temperature at reduced performance		ice - 10 °C
Temperature during stora	ge/transport	-25 - +65/70 °C
Maximum altitude above s	sea level	1000 m





Derating for high altitude, see section on special conditions

EMC standards, Emission EN 61800-3, EN 61000-6-3/4, EN 55011

EN 61800-3, EN 61000-6-1/2,

EMC standards, Immunity EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6 See section on special conditions

Control card, USB serial communication:

USB standard 1.1 (Full speed)

USB plug USB type B "device" plug

Connection to PC is carried out via a standard host/device USB cable.

The USB connection is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

The USB ground connection is not galvanically isolated from protection earth. Use only isolated laptop as PC connection to the USB connector on FC 300 drive.

□ Efficiency

Efficiency of FC 300 Series (η VLT)

The load on the frequency converter has little effect on its efficiency. In general, the efficiency is the same at the rated motor frequency f_{M,N}, even if the motor supplies 100% of the rated shaft torque or only 75%, i.e. in case of part loads.

This also means that the efficiency of the frequency converter does not change even if other U/f characteristics are chosen.

However, the U/f characteristics influence the efficiency of the motor.

The efficiency declines a little when the switching frequency is set to a value of above 5 kHz. The efficiency will also be slightly reduced if the mains voltage is 500 V, or if the motor cable is longer than 30 m.

Efficiency of the motor (η_{MOTOR})

The efficiency of a motor connected to the frequency converter depends on magnetising level. In general, the efficiency is just as good as with mains operation. The efficiency of the motor depends on the type of motor.

In the range of 75-100% of the rated torque, the efficiency of the motor is practically constant, both when it is controlled by the frequency converter and when it runs directly on mains.

In small motors, the influence from the U/f characteristic on efficiency is marginal. However, in motors from 11 kW and up, the advantages are significant.

In general, the switching frequency does not affect the efficiency of small motors. Motors from 11 kW and up have their efficiency improved (1-2%). This is because the sine shape of the motor current is almost perfect at high switching frequency.

Efficiency of the system (η_{SYSTEM})

To calculate the system efficiency, the efficiency of FC 300 Series (η_{VLT}) is multiplied by the efficiency of the motor (η_{MOTOR}):

 $\eta_{\text{SYSTEM}} = \eta_{\text{VLT}} \times \eta_{\text{MOTOR}}$

□ Acoustic Noise

The acoustic noise from the frequency converter comes from three sources:

- 1. DC intermediate circuit coils.
- 2. Integral fan.
- 3. RFI filter choke.



Danfoss

$_{-}$ FC 300 Selection $_{-}$

The typical values measured at a distance of 1 m from the unit:

FC 301/ FC 302 PK25-P7K5: @ 400 V PK25-P7K5 Reduced fan speed Full fan speed

IP20/IP21/NEMA TYPE 1 IP55/NEMA TYPE 12 51 dB(A) 60 dB(A)

When a transistor in the inverter bridge switches, the voltage across the motor increases by a dV/dt ratio depending on:

- the motor cable (type, cross-section, length screened or unscreened)
- inductance

The natural induction causes an overshoot U_{PEAK} in the motor voltage before it stabilises itself at a level depending on the voltage in the intermediate circuit. The rise time and the peak voltage U_{PEAK} affect the service life of the motor. If the peak voltage is too high, especially motors without phase coil insulation are affected. If the motor cable is short (a few metres), the rise time and peak voltage are lower. If the motor cable is long (100 m), the rise time and peak voltage increases.

In motors without phase insulation paper or other insulation reinforcement suitable for operation with voltage supply (such as a frequency converter), fit a sine-wave filter on the output of the FC 300.





Special Conditions

□ Purpose of derating

Derating must be taken into account when using the frequency converter at low air pressure (heights), at low speeds, with long motor cables, cables with a large cross section or at high ambient temperature. The required action is described in this section.

Derating for Ambient Temperature


The average temperature (T_{AMB, AVG}) measured over 24 hours must be at least 5 °C lower than the maximum allowed ambient temperature (T_{AMB,MAX}).

If the frequency converter is operated at high ambient temperatures, the continuous output current should be decreased.

The derating depends on the switching pattern, which can be set to 60 PWM or SFAVM in par. 14-00.


A enclosures

60 PWM - Pulse Width Modulation

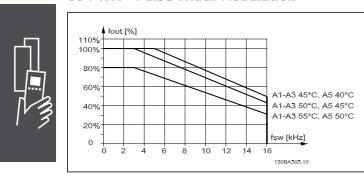


Derating of I_{out} for different $T_{\text{AMB, MAX}}$ for enclosure A, using 60 PWM

SFAVM - Stator Frequency Asyncron Vector Modulation

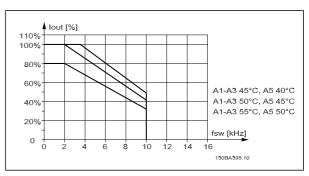


Derating of I_{out} for different $T_{\text{AMB, MAX}}$ for enclosure A, using SFAVM

In enclosure A, the length of the motor cable has a relatively high impact on the recommended derating. Therefore, the recommended derating for an application with max. 10 m motor cable is also shown.

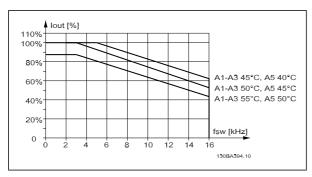

Derating of I_{Out} for different T_AMB, MAX for enclosure A, using 60 PWM and maximum 10 m motor cable

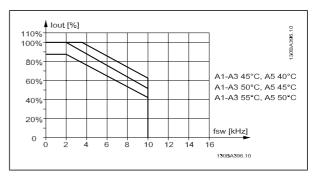


Derating of I_{out} for different Tamb, $_{\text{MAX}}$ for enclosure A, using SFAVM and maximum 10 m motor cable



B enclosures


For the B and C enclosures the derating also depends on the overload mode selected in par. 1-04

60 PWM - Pulse Width Modulation

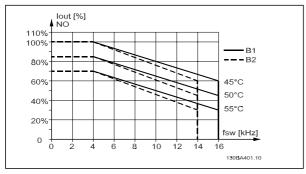


Derating of I_{out} for different T_{AMB} , $_{\text{MAX}}$ for enclosure B, using 60 PWM in Normal torque mode (110% over torque)




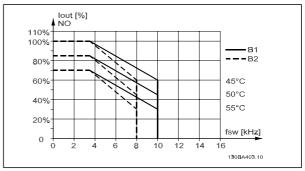

Derating of I_{out} for different T_{AMB} , $_{\text{MAX}}$ for enclosure B, using SFAVM in Normal torque mode (110% over torque)

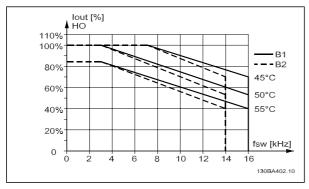


Derating of I_{out} for different T_{AMB} , MAX for enclosure B, using 60 PWM in High torque mode (160% over torque)

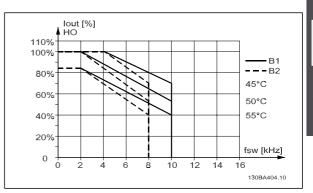

Derating of I_{out} for different $T_{AMB, MAX}$ for enclosure B, using SFAVM in High torque mode (160% over torque)


C enclosures

60 PWM - Pulse Width Modulation

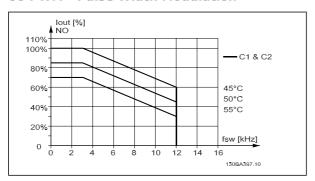


Derating of I_{out} for different Tamb, Max for enclosure C, using 60 PWM in Normal torque mode (110% over torque)


SFAVM - Stator Frequency Asyncron Vector Modulation

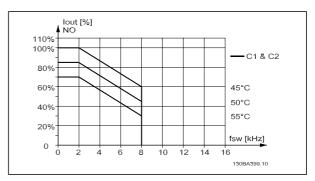


 Derating of I_{Out} for different Tamb, max for enclosure C, using SFAVM in Normal torque mode (110% over torque)



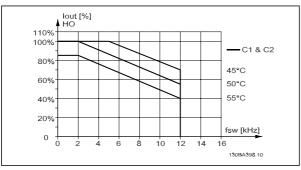



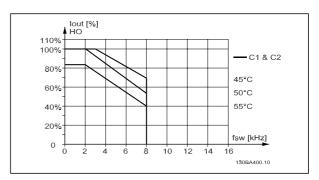


Derating of I_{out} for different $T_{\text{AMB, MAX}}$ for enclosure C, using SFAVM in High torque mode (160% over torque)

☐ Derating for Low Air Pressure

The cooling capability of air is decreased at lower air pressure.

Below 1000 m altitude no derating is necessary but above 1000 m the ambient temperature (T_{AMB}) or max. output current (I_{out}) should be derated in accordance with the shown diagram.



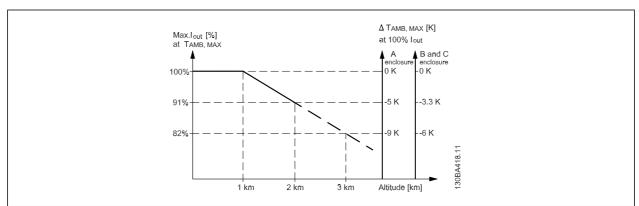

Derating of output current versus altitude at $T_{AMB, MAX}$. By altitudes above 2 km, please contact Danfoss Drives regarding PELV.

An alternative is to lower the ambient temperature at high altitudes and thereby ensure 100% output current at high altitudes. As an example of how to read the graph, the situation at 2 km is elaborated. At a temperature of 45° C ($T_{AMB, MAX}$ - 3.3 K), 91% of the rated output current is available. At a temperature of 41.7° C, 100% of the rated output current is available.

□ Derating for Running at Low Speed

When a motor is connected to a frequency converter, it is necessary to check that the cooling of the motor is adequate.

A problem may occur at low RPM values in constant torque applications. The motor fan may not be able to supply the required volume of air for cooling and this limits the torque that can be supported. Therefore, if the motor is to be run continuously at an RPM value lower than half of the rated value, the motor must be supplied with additional air-cooling (or a motor designed for this type of operation may be used).

An alternative is to reduce the load level of the motor by choosing a larger motor. However, the design of the frequency converter puts a limit to the motor size.

Derating for Installing Long Motor Cables or Cables with Larger Cross-Section

The maximum cable length for FC 301 is 75 m unscreened and 50 m screened cable. For FC302 it is 300 m unscreened and 150 m screened

The frequency converter has been designed to work using a motor cable with a rated cross-section. If a cable with a larger cross-section is used, reduce the output current by 5% for every step the cross-section is increased.



(Increased cable cross-section leads to increased capacity to earth, and thus an increased earth leakage current).

□ Automatic adaptations to ensure performance


The frequency converter constantly checks for critical levels of internal temperature, load current, high voltage on the intermediate circuit and low motor speeds. As a response to a critical level, the frequency converter can adjust the switching frequency and/ or change the switching pattern in order to ensure the performance of the drive.









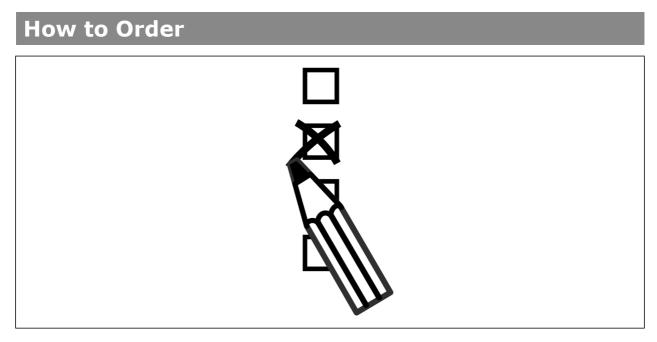

□ Drive Configurator

It is possible to design an FC 300 frequency converter according to the application requirements by using the ordering number system.

For the FC 300 Series, you can order standard drives and drives with integral options by sending a type code string describing the product to the local Danfoss sales office, i.e.:

FC-302PK75T5E20H1BGCXXXSXXXXA0BXCXXXXD0

The meaning of the characters in the string can be located in the pages containing the ordering numbers in the chapter *How to Select Your VLT*. In the example above, a Profibus DP V1 and a 24 V back-up option is included in the drive.

 
Ordering numbers for FC 300 standard variants can also be located in the chapter *How to Select Your VLT*.

From the Internet based Drive Configurator, you can configure the right drive for the right application and generate the type code string. The Drive Configurator will automatically generate an eight-digit sales number to be delivered to your local sales office.

Furthermore, you can establish a project list with several products and send it to a Danfoss sales representative.

The Drive Configurator can be found on the global Internet site: www.danfoss.com/drives.

□ Ordering Form Type Code







Danfoss

$-\!\!\!-$ How to Order $-\!\!\!\!-$

Product groups	1-3	
VLT series	4-6	
Power rating	8-10	
Phases	11	
Mains Voltage	12	$\overline{\triangleright}$
Enclosure	14-15	
Enclosure type		
Enclosure class		
Control supply voltage		
Hardware configuration		
RFI filter	16-17	$\overline{\nabla}$
Brake	18	
Display (LCP)	19	$\overline{\nabla}$
Coating PCB	20	$\overline{\nabla}$
Mains option	21	
Adaptation A	22	$\overline{\nabla}$
Adaptation B	23	$\overline{\nabla}$
Software release	24-27	
Software language	28	
A options	29-30	
B options	31-32	
C0 options, MCO	33-34	$\overline{\nabla}$
C1 options	35	
C option software	36-37	
D options	38-39	

1).	FC	301/	Δ1	enclosure only
т).	ı C	301/	ΥТ	enclosure only

2): Power sizes ≥ 11 kW only

Not all choices/options are available for each FC 301/FC 302 variant. To verify if the appropriate version is available, please consult the Drive Configurator on the Internet.

Description	Pos	Possible choise
Product group	1-3	FC 30x
Drive series	4-6	FC 301
Dames vation	0.10	FC 302
Power rating	8-10	0.25-75 kW Three phases (T)
Phases Mains voltage	11 11-12	T 2: 200-240 V AC
mains voitage	11-12	T 4: 380-480 V AC
		T 5: 380-500 V AC
		T 6: 525-600 V AC
Enclosure	14-15	E20: IP20
		E21: IP 21/NEMA Type 1
		E55: IP 55/NEMA Type 12
		Z20: IP 20 ¹⁾
		Z21: IP 21 ¹⁾
DET CIL	46.47	E66: IP 66
RFI filter	16-17	H1: RFI filter class A1/B1
		H2: No RFI filter, observes class A2
		H3:RFI filter class A1/B1 ¹⁾
		HX: No filter (600 V only)
Brake	18	B: Brake chopper included
		X: No brake chopper inclu-
		ded
		T: Safe Stop No brake1)
		U: Safe stop brake chop-
		per ¹⁾
Display	19	G: Graphical Local Control
		Panel (LCP)
		N: Numerical Local Control
		Panel (LCP)
Coating PCB	20	X: No Local Control Panel C: Coated PCB
Coating PCB	20	X. No coated PCB
Mains option	21	X: No mains option
Tiams option		1: Mains disconnect
		D: Load sharing ²⁾
		8: Mains disconnect and
		load
		Sharing ²⁾
Adaptation	22	Reserved
Adaptation	23	Reserved
Software release	24-27	Actual software
Software language A options	28 29-30	A0: MCA 101 Profibus DP
A options	29-30	V1
		A4: MCA 104 DeviceNet
		A6: MCA 105 CANOpen
		AX: No fieldbus
B options	31-32	BX: No option
-		BK: MCB 101 General pur-
		pose I/O option
		BR: MCB 102 Encoder op-
		tion
		BU: MCB 103 Resolver op-
		tion BP: MCB 105 Relay option
		BZ: MCB 108 Safety PLC
		Interface
C0 options	33-34	CX: No option
		C4: MCO 305, Programma-
		ble Motion Controller.
C1 options	35	
C option software	36-37	
D options	38-39	DX: No option
		DO: DC back-up
		D0: MCB 107 Ext. 24 V back-up
		buck up

— How to Order —

□ Ordering Numbers: Options and Accessories

Type Miscellaneous hardware	Description	Orde	ring no.
DC link connector	Terminal block for DC link connection on frame size A2/A3	130B1064	
IP 21/4X top/TYPE 1 kit	Enclosure, frame size A1: IP21/IP 4X Top/TYPE 1	130B1007	
IP 21/4X top/TYPE 1 kit	Enclosure, frame size A2: IP21/IP 4X Top/TYPE 1	130B1122	
IP 21/4X top/TYPE 1 kit	Enclosure, frame size A3: IP21/IP 4X Top/TYPE 1	130B1123	
Profibus D-Sub 9	D-Sub connector kit for IP20, frame sizes A1, A2 and A3	130B1112	
Profibus screen plate	Profibus screen plate kit for IP20, frame sizes A1, A2 and A3	130B0524	
Terminal blocks	Screw terminal blocks for replacing spring loaded terminals		
	1 pc 10 pin 1 pc 6 pin and 1 pc 3 pin connectors	130B1116	
Footmount frame for flat pack	resistors, frame size A2	175U0085	
Footmount frame for flat pack	resistors, frame size A3	175U0088	
Footmount frame for 2 flat page	ck resistors, frame size A2	175U0087	
Footmount frame for 2 flat page	ck resistors, frame size A3	175U0086	
LCP			
LCP 101	Numerical Local Control Panel (NLCP)	130B1124	
LCP 102	Graphical Local Control Panel (GLCP)	130B1107	
LCP cable	Separate LCP cable, 3 m	175Z0929	
LCP kit	Panel mounting kit including graphical LCP, fasteners, 3 m cable and gasket	130B1113	
LCP kit	Panel mounting kit including numerical LCP, fasteners and gasket	130B1114	
LCP kit	Panel mounting kit for all LCPs including fasteners, 3 m cable and gasket		
Options for Slot A	guance	Uncoated	Coated
MCA 101	Profibus option DP V0/V1	130B1100	130B1200
MCA 104	DeviceNet option	130B1102	130B1202
MCA 105	CANopen	130B1103	130B1205
Options for Slot B			
MCB 101	General purpose Input Output option	130B1125	130B1212
MCB 102	Encoder option	130B1115	130B1203
MCB 103	Resolver option	130B1127	130B1227
MCB 105	Relay option	130B1110	130B1210
MCB 108	Safety PLC interface (DC/DC Converter)	130B1120	130B1220
Options for Slot C			
MCO 305	Programmable Motion Controller	130B1134	130B1234
Mounting kit for frame size A2		130B7530	-
Mounting kit for frame size A5		130B7532	-
Mounting kit for frame size B a	and C	130B7533	-
Option for Slot D			
MCB 107	24 V DC back-up	130B1108	130B1208
External Options Ethernet IP	Ethornot magter	175N2584	
Spare Parts	Ethernet master	1/311/2304	
Control board FC 302	Coated version	_	130B1109
Control board FC 301	Coated version	_	130B1126
Fan A2	Fan, frame size A2	130B1009	-
Fan A3	Fan, frame size A3	130B1010	-
Fan option C	Tany mame size 70	130B7534	_
Backplate A5	Backplate A5 enclosures for	130B1098	
Connectors FC 300 Profibus	10 pieces Profibus connectors	130B1075	
	10 pieces DeviceNet connectors	130B1074	
Connectors FC 302 10 pole	10 pieces 10 pole spring loaded connectors	130B1073	
Connectors FC 301 8 pole	10 pieces 8 pole spring loaded connectors	130B1072	
Connectors FC 300 5 pole	10 pieces 5 pole spring loaded connectors	130B1071	
Connectors FC 300 RS485	10 pieces 3 pole spring loaded connectors for RS 485	130B1071	
Connectors FC 300 3 pole	10 pieces 3 pole connectors for relay 01	130B1070	
Connectors FC 302 3 pole	10 pieces 3 pole connectors for relay 02	130B1068	
Connectors FC 300 Mains	10 pieces mains connectors IP20/21	130B1067	
Connectors FC 300 Mains	10 pieces mains connctors IP 55	130B1067	
Connectors FC 300 Motor	10 pieces mains connectors	130B1065	
Connectors FC 300 Brake DC	10 pieces brake/load sharing connectors	130B1073	
bus Accessory bag A1	Accessory bag, frame size A1	130B1021	
Accessory bag A1 Accessory bag A5	Accessory bag, frame size A1 Accessory bag, frame size A5 (IP55)	130B1021 130B1023	
Accessory bag A2	Accessory bag, frame size A2/A3	130B1023	
Accessory bag B1	Accessory bag, frame size B1	130B1022	
	Accessory bag, frame size B1 Accessory bag, frame size B2	130B1024 130B1025	
Accessory had R)		1001070	
Accessory bag B2 Accessory bag MCO 305		130B7535	





X	
11	\
 	>

74

160%	160%
145%	145%
2X0992ª	2X0996ª
12	13
35Ω/200W 72Ω/200W	60Ω/200W
1924	1925
1.35	3.00
35	25
1824	1825
0.430	0.800
35	25
37.0	29.6
333	25
m m "	P3K7 3.7 25 29.6 2
P3K0	P3K7
	3 33 37.0 35 0.430 3 33 37.0 -

Order two pieces, resistors must be connected in parallel.
 Max. load with the resistor in Danfoss standard program.
 Rbr,nom is the nominal (recommended) resistor value that ensures a brake power on motor shaft of 145% / 160% for 1 minute.

$_{-}$ How to Order $_{-}$



										1		по		1								
		Max. torque load ^b	FC 302		160%	160%	160%	160%	160%	160%	160%	160%	160%	160%	160%	160%	160%	160%	160%			
		Max. torc	FC 301		137%	137%	137%	137%	137%	137%	137%	137%	137%	137%	137%	137%	137%	137%	137%			
		ack) IP65	Order no.	175Uxxxx	1000	1000	1001	0982	1002	0983	0984	2860	6860	2X0985ª	2X0986ª	2X0988ª	2X0990ª	2X0090a	2X0091 ^a			
		Aluminium Housed (Flatpack) IP65	Duty cycle	%	20	20	14	40	æ	20	16	6	5.5	12	11	6.5	4	6	9			
		Aluminium	Rrec per item	[2]	830Ω/ 100W	830Ω/ 100W	620Ω/ 100W	620Ω/ 200W	430Ω/ 100W	430Ω/ 200W	310Ω/ 200W	210Ω/ 200W	150Ω/ 200W	300Ω/ 200W	240Ω/ 200W	160Ω/ 200W	130Ω/ 200W	80Ω/240W	72Ω/240W			
		,	Order no.	175Uxxxx	1976	1976	1940	1	1941	1	1942	1943	1944	1	1945	1946	1947	1948	1949	1950	1951	
FC 301/302	resistor	Duty Cycle 40%	Pbr max	[kW]	0.450	0.450	0.260	ı	0.430	ı	0.800	1.35	2.00	ı	2.40	3.00	4.50	5.00	9.30	12.70	13.00	
FC 30	Selected resistor		Rrec	[8]	830	830	620	1	425	1	310	210	150	1	110	80	65	40	30	25	20	
1	Standard IP 20	Order no.	175Uxxxx	1840	1840	1840	1	1841	1	1842	1843	1844	1	1845	1846	1847	1848	1849	1850	1851		
		S Duty Cycle 10%	Pbr max	[kW]	0.065	0.065	0.065	ı	0.095		0.250	0.285	0.430	1	0.600	0:850	1.0	1.8	2.8	3.5	4.0	
	Duty Cv	Rrec	[හ]	620	620	970	1	425		310	210	150	,	110	08	9	40	30	25	20	arallel.	
			Rbr,nom ^c	[8]	1360.2	915.0	9.799	9'299	452.8	452.8	330.4	222.6	161.4	161.4	119.6	86.0	62.4	42.1	30.5	24.5	20.3	unnected in p
Mains 380-500 V / 380-480 V			R _{min}	[8]	620	620	601	601	408	408	267	200	145	145	108	<i>LL</i>	95	38	27	22	18	rs must be co
Mains 380-500 V / 380-480 V			Pmotor	[kW]	0.37	0.55	0.75	0.75	1.1	1.1	1.5	2.2	ю	ю	4	5.5	7.5	11	15	18.5	22	a Order two pieces, resistors must be connected in parallel.
Mains 380-5			FC 301/ FC 302		PK37	PK55	PK75	PK75	P1K1	P1K1	P1K5	P2K2	P3K0	P3K0	P4K0	P5K5	P7K5	P11K	P15K	P18K	P22K	a Order two pieces, resistors must be connected in parallel





□ Ordering Numbers: Harmonic Filters

Harmonic filters are used to reduce mains harmonics.

AHF 010: 10% current distortion
AHF 005: 5% current distortion

380-415V, 50	Hz			
I _{AHF} ,N	Typical Motor Used [kW]	Danfoss orde	ering number	FC 301/ FC 302
		AHF 005	AHF 010	
10 A	4, 5.5	175G6600	175G6622	P4K0, P5K5
19 A	7.5	175G6601	175G6623	P7K5
46 A	11	175G6602	175G6624	P11K
35 A	15, 18.5	175G6603	175G6625	P15K, P18K
43 A	22	175G6604	175G6626	P22K

440-480V, 60H	l z			
I _{AHF} ,N	Typical Motor Used	Danfoss orde	ering number	FC 301/ FC 302
	[HP]	AHF 005	AHF 010	
19 A	10, 15	175G6612	175G6634	P7K5
26 A	20	175G6613	175G6635	P15K
35 A	25, 30	175G6614	175G6636	P18K, P22K

500V, 50Hz	T : IM : II I			FG 201 / FG 202
I _{AHF} ,N	Typical Motor Used	Dantoss ord	lering number	FC 301/ FC 302
	[kW]	AHF 005	AHF 010	
10 A	4, 5.5	175G6644	175G6656	P4K0, P5K5
19 A	7.5, 11	175G6645	175G6634	P7K5, P11K
26 A	15, 18.5	175G6646	175G6635	P15K, P18K
35 A	22	175G6647	175G6636	P22K
35 A	22	175G6647	175G6636	P22K

Matching the frequency converter and filter is pre-calculated based on 400V/480V and on a typical motor load (4 pole) and 160% torque.

Ordering Numbers: Sine-wave Filter Modules, 200-240 VAC

Mains supply	3 x 200-240 V					
FC 301/ FC 302	Rated current at 200 V	Max. torque at CT/VT	Max. output frequency	Power dissipa- tion	Ordering no. IP00	Ordering no. IP20
PK25 - PK37	2.5 A	160%	120 Hz	60 W	130B2404	130B2439
PK55	4.5 A	160%	120 Hz	70 W	130B2406	130B2441
PK75 - P1K5	8 A	160%	120 Hz	80 W	130B2408	130B2443
P2K2 - P3K7	17 A	160%	120 Hz	125 W	130B2411	130B2446



NB!

When using Sine-wave filters, the switching frequency must be minimum 4.5 kHz (see par. 14-01).



$_$ How to Order $_$

□ Ordering Numbers: Sine-wave Filter Modules, 380-500 VAC

Mains supply	3 x 380 - 500 V								
FC 301/ FC	Rated current at	Max. torque at	Max. output	Power dissi-	Ordering	Ordering			
302	380 V	CT/VT	frequency	pation	no.IP00	no.IP20			
PK37 - PK75	2.5 A	160%	120 Hz	60 W	130B2404	130B2439			
PP1K1 - P1K5	4.5 A	160%	120 Hz	70 W	130B2406	130B2441			
P2K2 - P3K0	8 A	160%	120 Hz	80 W	130B2408	130B2443			
P4K0	10A	160%	120 Hz	95 W	130B2409	130B2444			
P5K5 - P7K5	16 A	160%	120 Hz	125 W	130B2411	130B2446			
High overload	torque								
P11K	24 A	160%	60 Hz	150 W	130B2412	130B2447			
P15K - P18K	38 A	160%	60 Hz	180 W	130B2413	130B2448			
P22K	48 A	160%	60 Hz	270 W	130B2281	130B2307			
Normal overload torque									
P11K - P15K	38 A	110%	60 Hz	180 W	130B2413	130B2448			
P18K	48 A	110%	60 Hz	270 W	130B2281	130B2307			
P22K	62 A	110%	60 Hz	310 W	130B2282	130B2308			



NB!

When using Sine-wave filters, the switching frequency must be minimum $4.5\ kHz$ (see par. 14-01).

□ Ordering Numbers: Sine-wave Filter Modules, 525-690 VAC

Mains supply	3 x 525-690 V					
FC 301/ FC 302	Rated current at 525V	Max. torque at CT/VT	Max. output frequency	Power dissipa- tion	Ordering no. IP00	Ordering no. IP20
PK75 - P7K5	13 A	160%	60 Hz	170 W	130B2321	130B2341



NB!


When using Sine-wave filters, the switching frequency must be minimum $4.5\ kHz$ (see par. 14-01).








How to Install

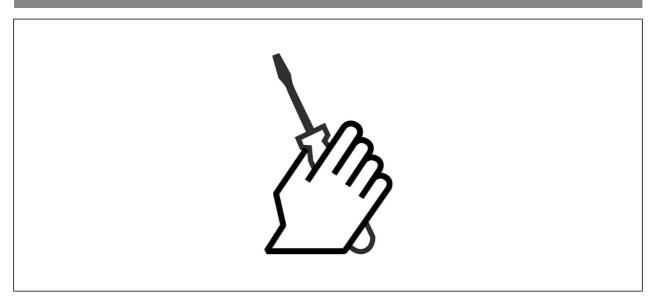


Mechanical Dimension

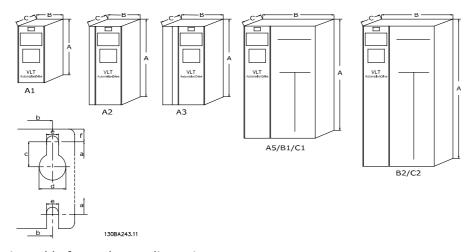

 See the following table for enclosure dimensions







					Mechanical	Mechanical dimensions						
Frame size		A1	1	A2	٥.	A3	3	A5	B1	B2	CI	C2
		0.25-1.5 kW (200-240 V) 0.37-1.5 kW (380-480 V)	.5 kW) 0.37-1.5 -480 V)	0.25-3 kW (200-240 V) 0.37-4.0 kW (380-480/ 500 V) 0.75-4 kW (525-600 V)	(200-240) .0 kW 480/ V) v) 1 kW 00 V)	3.7 kW (200-240 V) 5.5-7.5 kW (380-480/ 5.00 V) 5.5-7.5 kW (525-600 V)	kW 240 V) 55 kW 480/ V) 5 kW	0.25-3.7 kW (200-240 V) 0.37-7.5 kW (380-480/ 500 V) 0.75-7.5 kW	5.5-7.5 kW (200-240 V) 11-15 kW (380-480/500 V)	11 kW (200-240 V) 18.5-22 kW (380-480/ 500 V)	15-22 kW (200-240 V) 30-45 kW (380-480/ 500 V)	30-37 kW (200-240 V) 55-75 kW (380-480/ 500 V)
IP NEMA		20 Chassis	21 Type 1	20 Chassis	н	20 Chassis	21 Type 1	55/66 Type 12	21/ 55/66 Type 1/Type 12	21/55/66 Type 1/Type 12	21/55/66 Type 1/Type 12	21/55/66 Type 1/Type 12
Height of back	⋖	200 mm		268 mm	375 mm	268 mm	375 mm	420 mm	480 mm	650 mm	680 mm	770 mm
Height with de-coupling plate	∢	316 mm	1	374 mm		374 mm	1					
Distance be- tween mount- ing holes	ю	190 mm		257 mm	350 mm	257 mm	350 mm	402 mm	454 mm	624 mm	648 mm	739 mm
Width												
Width of back plate	В	75 mm		mm 06	90 mm	130 mm	130 mm	242 mm	242 mm	242 mm	308 mm	370 mm
Width of back plate with one C option	В			130 mm	130 mm	170 mm	170 mm	242 mm	242 mm	242 mm	308 mm	370 mm
Width of back plate with two C options	В			150 mm	150 mm	190 mm	190 mm	242 mm	242 mm	242 mm	308 mm	370 mm
Distance be- tween mount- ing holes	q	90 mm		70 mm	70 mm	110 mm	110 mm	215 mm	210 mm	210 mm	272 mm	334 mm
Depth												
Depth without option A/B	O	205 mm		205 mm	205 mm	205 mm	205 mm	195 mm	260 mm	260 mm	310 mm	335 mm
With option A/B	O	220 mm		220 mm	220 mm	220 mm	220 mm	195 mm	260 mm	260 mm	310 mm	335 mm
Without option A/B	*	207 mm			207 mm		207 mm		•		ı	٠
With option A/B	*0	222 mm			222 mm		222 mm		ı		ı	ı
Screw holes												
	o d o	6.0 mm ø8 mm ø5 mm		8.0 mm ø11 mm ø5.5 mm	8.0 mm ø11 mm ø5.5 mm	8.0 mm ø11 mm ø5.5 mm	8.0 mm ø11 mm ø5.5 mm	8.25 mm ø12 mm ø6.5 mm	12 mm ø19 mm ø9 mm	12 mm ø19 mm ø9 mm	12 mm ø19 mm ø9.8 mm	12 mm ø19 mm ø9.8 mm
Max weight	-	5 mm		9 mm	9 mm	9 mm	9 mm	9 mm 13.5/14.2 kg	9 mm 23 kg	9 mm	17.6 mm 43 kg	18 mm 61 kg
		5		6	0	6	5	C /2:21	5.	5.	5.	5.

 Max weight
 2.7 kg
 4.9 kg
 5.3 kg
 6.6 kg
 7.0 kg
 13.5/14.2 kg
 23 kg
 27 kg
 43 kg
 61 kg

 * The front of the frequency converter is slightly convex. C is the shortest distance from back to front (i.e. measured from corner to corner) of the frequency converter. D is the longest distance from back to front (i.e. measured in the middle) of the frequency converter.






Mechanical Installation

□ Accessory Bag

Find the following parts included in the FC 100/300 Accessory Bag.

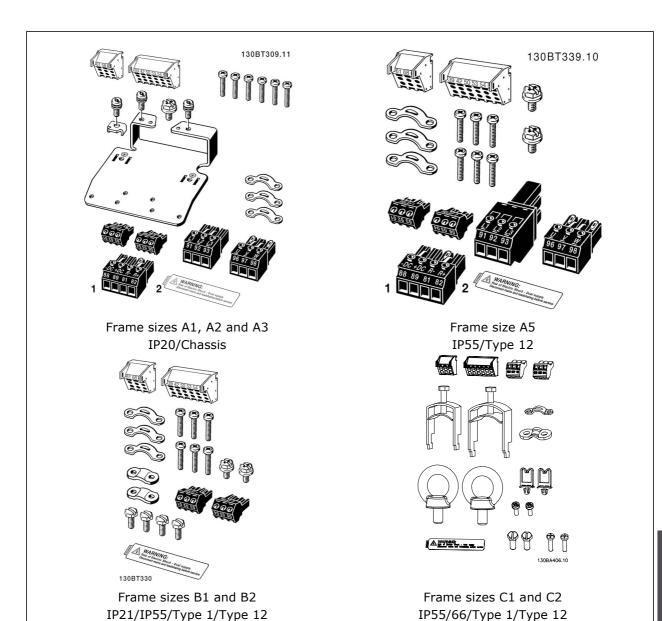

1+2 only available in units with brake chopper. Only one relay connector is included for FC 101/301 units. For DC link connection (Load sharing) the connector 1 can be ordered separately (Code no 130B1064)

An eight pole connector is included in accessory bag for FC 101/301 without Safe Stop.



oxdot How to Install oxdot




□ Mechanical mounting


FC 300 IP20 Frame sizes A1, A2 and A3 as well as IP21/ IP55 Frame sizes A5, B1, B2, C1 and C2 allow side-by-side installation. Due to , there must be a minimum of 100 mm free air passage above and below the FC 300.

If the IP 21 Enclosure kit (130B1122 or 130B1123) is used there must be a clearance between the drives of min 50 mm.


For optimal cooling conditions allow a free air passage above and below the frequency converter. See table below.

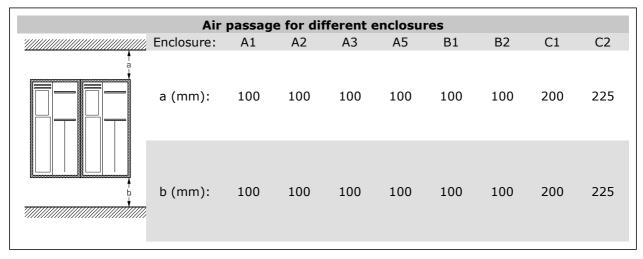

- 1. Drill holes in accordance with the measurements given.
- 2. You must provide screws suitable for the surface on which you want to mount the FC 300. Retighten all four screws.

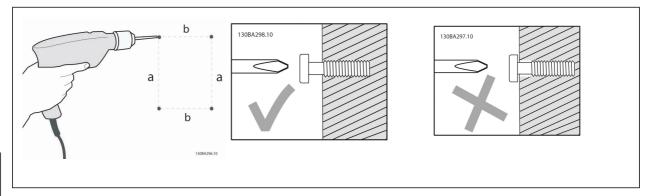

Mounting frame sizes A1, A2 and A3:

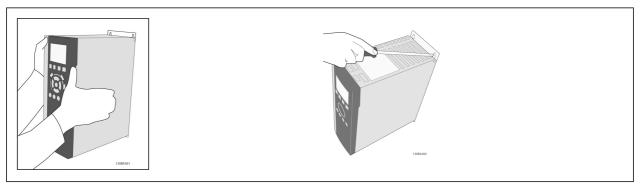




Danfoss

$_$ How to Install $_$


Mounting frame sizes A5, B1, B2, C1 and C2:

The back wall must always be solid for optimum cooling.

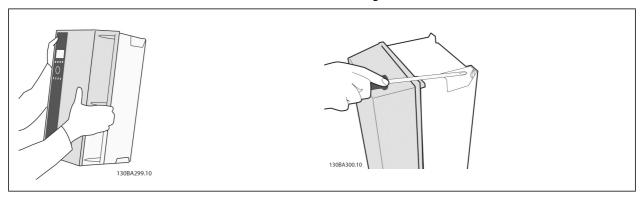

Mounting frame sizes A5, B1, B2, C1 and C2 on a non-solid back wall, the drive must be provided

with a back plate A due to insufficient cooling air over the heat sink.

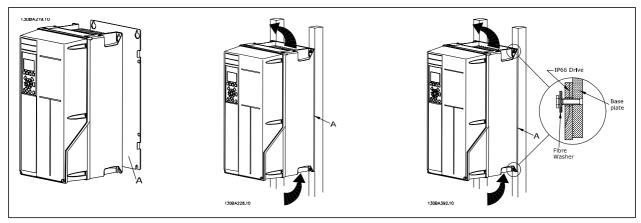

□ Safety Requirements of Mechanical Installation



Pay attention to the requirements that apply to integration and field mounting kit. Observe the information in the list to avoid serious damage or injury, especially when installing large units.

The frequency converter is cooled by means of air circulation.

To protect the unit from overheating, it must be ensured that the ambient temperature *does not exceed* the maximum temperature stated for the frequency converter and that the 24-hour average temperature is not exceeded. Locate the maximum temperature and 24-hour average in the paragraph *Derating for Ambient Temperature*.

If the ambient temperature is in the range of 45 °C - 55 ° C, derating of the frequency converter will become relevant, see $Derating\ for\ Ambient\ Temperature$.

The service life of the frequency converter is reduced if derating for ambient temperature is not taken into account.

☐ Field Mounting

For field mounting the IP 21/IP 4X top/TYPE 1 kits or IP 54/55 units are recommended.





Electrical Installation



NB!

Cables General

All cabling must comply with national and local regulations on cable cross-sections and ambient temperature. Copper (60/75°C) conductors are recommended.

Aluminium Conductors

Terminals can accept aluminium conductors but the conductor surface has to be clean and the oxidation must be removed and sealed by neutral acid-free Vaseline grease before the conductor is connected. Furthermore the terminal screw must be retightened after two days due to softness of the aluminium. It is crucial to keep the connection a gas tight joint, otherwise the aluminium surface will oxidize again.

Tightening-up	Torque					
FC size	200 - 240 V	380 - 500 V	525 - 600 V	Cable for:		Tightening up torque
A1	0.25-1.5 kW	0.37-1.5 kW	-	Line, Brake resistor, I	load	0.5-0.6 Nm
A2	0.25-2.2 kW	0.37-4 kW	0.75-4 kW	sharing, Motor cables		
A3	3-3.7 kW	5.5-7.5 kW	5.5-7.5 kW			
A5	3-3.7 kW	5.5-7.5 kW	0.75-7.5 kW			
B1	5.5-7.5 kW	11-15 kW	-	Line, Brake resistor, I sharing, Motor cables	load	1.8 Nm
				Relay		0.5-0.6 Nm
				Earth		2-3 Nm
B2	11 kW	18.5-22 kW	-	Line, Brake resistor, I sharing cables	load	4.5 Nm
				Motor cables		4.5 Nm
				Relay		0.5-0.6 Nm
				Earth		2-3 Nm
C1	15-22 kW	30-45 kW	-	Line, Brake resistor, I sharing cables	load	10 Nm
				Motor cables		10 Nm
				Relay		0.5-0.6 Nm
				Earth		2-3 Nm
C2	30-37 kW	55-75 kW	-	Line, Brake resistor, I sharing cables	load	14 Nm
				Motor cables		10 Nm
				Relay		0.5-0.6 Nm
				Earth		2-3 Nm

□ Removal of Knockouts for Extra Cables

- 1. Remove cable entry from the frequency converter (Avoiding foreign parts falling into the frequency converter when removing knockouts)
- 2. Cable entry has to be supported around the knockout you intend to remove.
- 3. The knockout can now be removed with a strong mandrel and a hammer.
- 4. Remove burrs from the hole.
- 5. Mount Cable entry on frequency converter.



$_{-}$ How to Install $\,\,\,\,\,\,\,\,$



□ Connection to Mains and Earthing



NB!

The plug connector for power is plugable on FC 300 up to 7.5 kW.

- 1. Fit the two screws in the de-coupling plate, slide it into place and tighten the screws.
- 2. Make sure the FC 300 is properly earthed. Connect to earth connection (terminal 95). Use screw from the accessory bag.
- 3. Place plug connector 91(L1), 92(L2), 93(L3) from the accessory bag onto the terminals labelled MAINS at the bottom of FC 300.
- 4. Attach mains wires to the mains plug connector.
- 5. Support the cable with the supporting enclosed brackets.



NB!

Check that mains voltage corresponds to the mains voltage of the FC 300 name plate.


IT Mains

Do not connect 400 V frequency converters with RFI-filters to mains supplies with a voltage between phase and earth of more than 440 V.



The earth connection cable cross section must be at least 10 mm^2 or 2 x rated mains wires terminated separately according to EN 50178.

The mains connection is fitted to the mains switch if this is included.

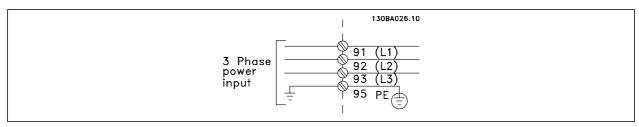





$_{-}$ How to Install $\,\,\,\,\,\,\,\,$



Mains connection for frame sizes A1, A2 and A3:

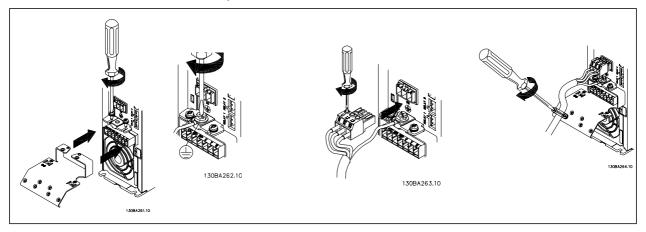


Mains connector A5 (IP 55/66) Enclosure

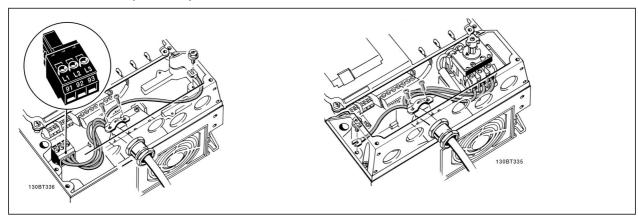


When disconnector is used (A5 enclosure) the PE must be mounted on the left side of the drive.

Mains connection B1 and B2 (IP 21/NEMA Type 1 and IP 55/66/ NEMA Type 12) enclosures

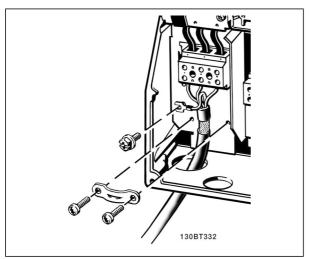

Mains connection C1 and C2 (IP 21/ NEMA Type 1 and IP 55/66/ NEMA Type 12) enclosures

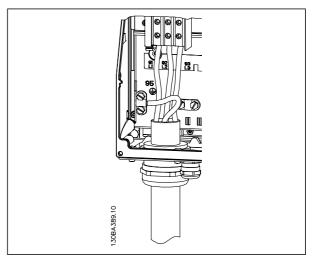

Usually the power cables for mains are unshielded cables.





■ Motor Connection



NB!

Motor cable must be screened/armoured. If an unscreened/unarmoured cable is used, some EMC requirements are not complied with. Use a screened/armoured motor cable to comply with EMC emission specifications. For more information, see *EMC specifications* in the *VLT*[®] *AutomationDrive FC 300 Design Guide*.

See section General Specifications for correct dimensioning of motor cable cross-section and length.

Screening of cables: Avoid installation with twisted screen ends (pigtails). They spoil the screening effect at higher frequencies. If it is necessary to break the screen to install a motor isolator or motor contactor, the screen must be continued at the lowest possible HF impedance. Connect the motor cable screen to both the decoupling plate of the FC 300 and to the metal

Make the screen connections with the largest possible surface area (cable clamp). This is done by using the supplied installation devices in the FC 300.


housing of the motor.

If it is necessary to split the screen to install a motor isolator or motor relay, the screen must be continued with the lowest possible HF impedance.

Cable-length and cross-section: The frequency converter has been tested with a given length of cable and a given cross-section of that cable. If the cross-section is increased, the cable capacitance - and thus the leakage current - may increase, and the cable length must be reduced correspondingly. Keep the motor cable as short as possible to reduce the noise level and leakage currents.

Switching frequency: When frequency converters are used together with Sine-wave filters to reduce the acoustic noise from a motor, the switching frequency must be set according to the Sine-wave filter instruction in Par. 14-01.


- Fasten decoupling plate to the bottom of FC 300 with screws and washers from the accessory bag.
- Attach motor cable to terminals 96 (U), 97
 (V), 98 (W).
- 3. Connect to earth connection (terminal 99) on decoupling plate with screws from the accessory bag.
- Insert plug connectors 96 (U), 97 (V), 98
 (W) (up to 7.5 kW) and motor cable to terminals labelled MOTOR.
- Fasten screened cable to decoupling plate with screws and washers from the accessory bag.

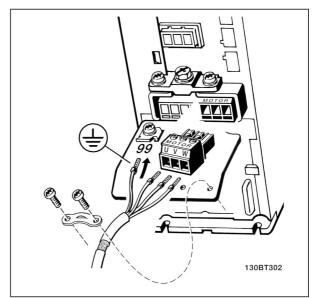


Motor connection for A1, A2 and A3





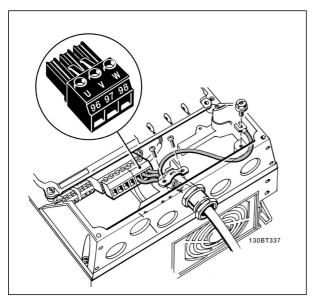


Motor connection for A5 (IP 55/66/NEMA Type 12) enclosure

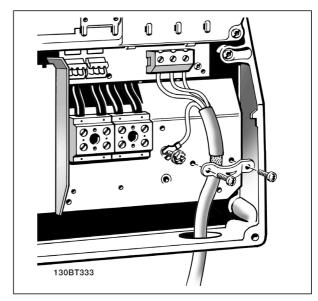

Motor connection for B1 and B2 (IP 21/ NEMA Type 1, IP 55/ NEMA Type 12 and IP66/ NEMA Type 4X) enclosure

All types of three-phase asynchronous standard motors can be connected to the FC 300. Normally, small motors are star-connected (230/400 V, Y). Large motors are normally delta-connected (400/690 V, Δ). Refer to the motor name plate for correct connection mode and voltage.

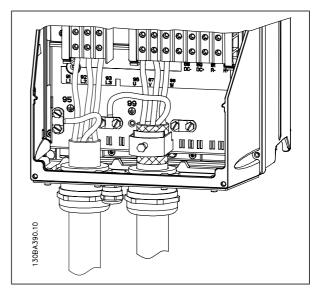

Motor connection C1 and C2 (IP 21/ NEMA Type 1 and IP 55/66/ NEMA Type 12) enclosure




Term. no.	96	97	98	99	
	U	V	W	PE ¹⁾	Motor voltage 0-100% of mains voltage.
					3 wires out of motor
	U1	V1	W1	PE ¹⁾	Delta-connected
	W2	U2	V2	PE+/	6 wires out of motor
	U1	V1	W1	PE ¹⁾	Star-connected U2, V2, W2
					U2, V2 and W2 to be interconnected separately.

¹⁾Protected Earth Connection

$_$ How to Install $_$



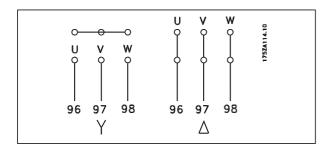



NB!

In motors without phase insulation paper or other insulation reinforcement suitable for operation with voltage supply (such as a frequency converter), fit aSine-wave filter on the output of the FC 300.

□ Fuses

Branch circuit protection:

In order to protect the installation against electrical and fire hazard, all branch circuits in an installation, switch gear, machines etc., must be short-circuited and overcurrent protected according to national/international regulations.

Short-circuit protection:

The frequency converter must be protected against short-circuit to avoid electrical or fire hazard. Danfoss recommends using the fuses mentioned below to protect service personnel and equipment in case of an internal failure in the drive. The frequency converter provides full short-circuit protection in case of a short-circuit on the motor output.

Overcurrent protection:

Provide overload protection to avoid fire hazard due to overheating of the cables in the installation. The frequency converter is equipped with an internal overcurrent protection that can be used for upstream overload protection (UL-applications excluded). See par. 4-18. Moreover, fuses or circuit breakers can be used to provide the overcurrent protection in the installation. Overcurrent protection must always be carried out according to national regulations.

Fuses must be designed for protection in a circuit capable of supplying a maximum of $100,000 \text{ A}_{rms}$ (symmetrical), 500 V maximum.

Non UL compliance

If UL/cUL is not to be complied with, we recommend using the following fuses, which will ensure compliance with EN50178:

In case of malfunction, not following the recommendation may result in unnecessary damage to the frequency converter.

FC 300	Max. fuse size ¹⁾	Voltage	Type
K25-K75	10A	200-240 V	type gG
1K1-2K2	20A	200-240 V	type gG
3K0-3K7	32A	200-240 V	type gG
5K5-7K5	63A	380-500 V	type gG
11K	80A	380-500 V	type gG
15K-18K 5	125A	380-500 V	type gG
22K	160A	380-500 V	type aR
30K	200A	380-500 V	type aR
37K	250A	380-500 V	type aR

Max. fuse size¹⁾ FC 300 Type Voltage 380-500 V K37-1K5 10A type gG 2K2-4K0 20A 380-500 V type gG 5K5-7K5 32A 380-500 V type gG 11K-18K 380-500 V 63A type aG 22K 80A 380-500 V type qG 30K 100A 380-500 V type gG 37K 125A 380-500 V type gG 380-500 V 45K 160A type aR 55K-75K 380-500 V 250A type aR



1) Max. fuses - see national/international regulations for selecting an applicable fuse size.





UL Compliance

200-240 V

FC 300	Bussmann	Bussmann	Bussmann	SIBA	Littel fuse	Ferraz- Shawmut	Ferraz- Shawmut
kW	Type RK1	Type J	Type T	Type RK1	Type RK1	Type CC	Type RK1
K25-K75	KTN-R10	JKS-10	JJN-10	5017906-010	KLN-R10	ATM-R10	A2K-10R
1K1-2K2	KTN-R20	JKS-20	JJN-20	5017906-020	KLN-R20	ATM-R20	A2K-20R
3K0-3K7	KTN-R30	JKS-30	JJN-30	5012406-032	KLN-R30	ATM-R30	A2K-30R
5K5	KTN-R50	KS-50	JJN-50	5014006-050	KLN-R50		A2K-50R
7K5	KTN-R60	JKS-60	JJN-60	5014006-063	KLN-R60		A2K-60R
11K	KTN-R80	JKS-80	JJN-80	5014006-080	KLN-R80		A2K-80R
15K-18K5	KTN-R125	JKS-150	JJN-125	2028220-125	KLN-R125		A2K-125R
22K	FWX-150			2028220-150	L25S-150		A25X-150
30K	FWX-200			2028220-200	L25S-200		A25X-200
37K	FWX-250			2028220-250	L25S-250		A25X-250

380-500 V, 525-600 V

FC 300	Bussmann	Bussmann	Bussmann	SIBA	Littel fuse	Ferraz- Shawmut	Ferraz- Shawmut
kW	Type RK1	Type J	Type T	Type RK1	Type RK1	Type CC	Type RK1
K37-1K5	KTS-R10	JKS-10	JJS-10	5017906-010	KLS-R10	ATM-R10	A6K-10R
2K2-4K0	KTS-R20	JKS-20	JJS-20	5017906-020	KLS-R20	ATM-R20	A6K-20R
5K5-7K5	KTS-R30	JKS-30	JJS-30	5012406-032	KLS-R30	ATM-R30	A6K-30R
11K	KTS-R40	JKS-40	JJS-40	5014006-040	KLS-R40		A6K-40R
15K	KTS-R50	JKS-50	JJS-50	5014006-050	KLS-R50		A6K-50R
18K	KTS-R60	JKS-60	JJS-60	5014006-063	KLS-R60		A6K-60R
22K	KTS-R80	JKS-80	JJS-80	2028220-100	KLS-R80		A6K-80R
30K	KTS-R100	JKS-100	JJS-100	2028220-125	KLS-R100		A6K-100R
37K	KTS-R125	JKS-150	JJS-150	2028220-125	KLS-R125		A6K-125R
45K	KTS-R150	JKS-150	JJS-150	2028220-150	KLS-R150		A6K-150R
55K	FWH-220	-	_	2028220-200	L50S-225		A50-P225
75K	FWH-250	=	-	2028220-250	L50S-250		A50-P250

KTS-fuses from Bussmann may substitute KTN for 240 V frequency converters.

FWH-fuses from Bussmann may substitute FWX for 240 V frequency converters.

KLSR fuses from LITTEL FUSE may substitute KLNR fuses for 240 V frequency converters.

L50S fuses from LITTEL FUSE may substitute L50S fuses for 240 V frequency converters.

A6KR fuses from FERRAZ SHAWMUT may substitute A2KR for 240 V frequency converters.


A50X fuses from FERRAZ SHAWMUT may substitute A25X for 240 V frequency converters.






□ Access to Control Terminals

All terminals to the control cables are located underneath the terminal cover on the front of the frequency converter. Remove the terminal cover by means of a screwdriver (see illustration).

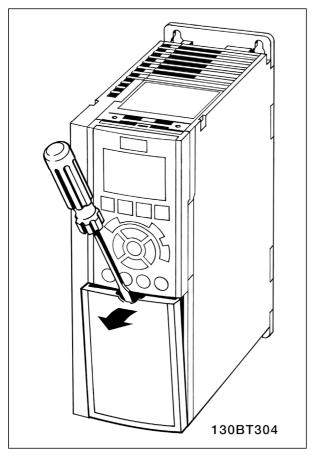

A1, A2 and A3 enclosures

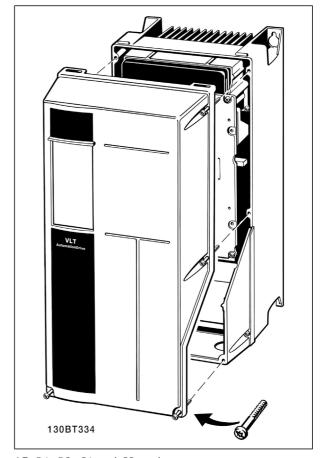

A5, B1, B2, C1 and C2 enclosures

□ Control Terminals

Control Terminals, FC 301


Drawing reference numbers:

- 1. 8 pole plug digital I/O.
- 2. 3 pole plug RS485 Bus.
- 3. 6 pole analog I/O.
- 4. USB Connection.

Control Terminals, FC 302

Drawing reference numbers:

- 1. 10 pole plug digital I/O.
- 2. 3 pole plug RS485 Bus.
- 3. 6 pole analog I/O.
- 4. USB Connection.

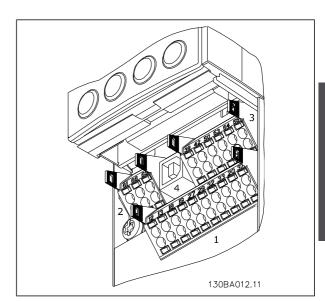

Control terminals (all enclosures)



$_{-}$ How to Install $_{-}$




☐ Electrical Installation, Control Terminals


To mount the cable to the terminal:

- 1. Strip isolation of 9-10 mm
- 2. Insert a screw driver¹⁾ in the square hole.
- 3. Insert the cable in the adjacent circular hole.
- 4. Remove the screw driver. The cable is now mounted to the terminal.

To remove the cable from the terminal:


- 1. Insert a screw driver¹⁾ in the square hole.
- 2. Pull out the cable.

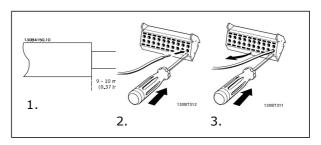

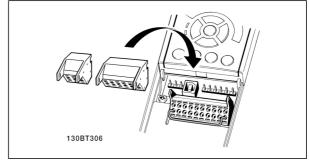

Assembling of IP55 / NEMA Type 12 (A5 housing) with mains disconnector

Mains switch is placed on left side on B1, B2, C1 and C2 enclosures. Mains switch on A5 enclosure is placed on right side

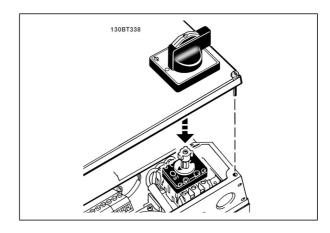

□ Basic Wiring Example


- 1. Mount terminals from the accessory bag to the front of the FC 300.
- 2. Connect terminals 18, 27 and 37 (FC 302 only) to +24 V (terminal 12/13)

Default settings:

18 = Start, Par 5-10 [9]

27 = Stop inverse, Par 5-12 [6]

37 = safe stop inverse

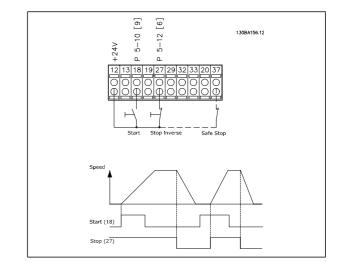



¹⁾ Max. 0.4 x 2.5 mm

$_{-}$ How to Install $\,\,\,\,\,\,\,\,$



☐ Electrical Installation, Control Cables

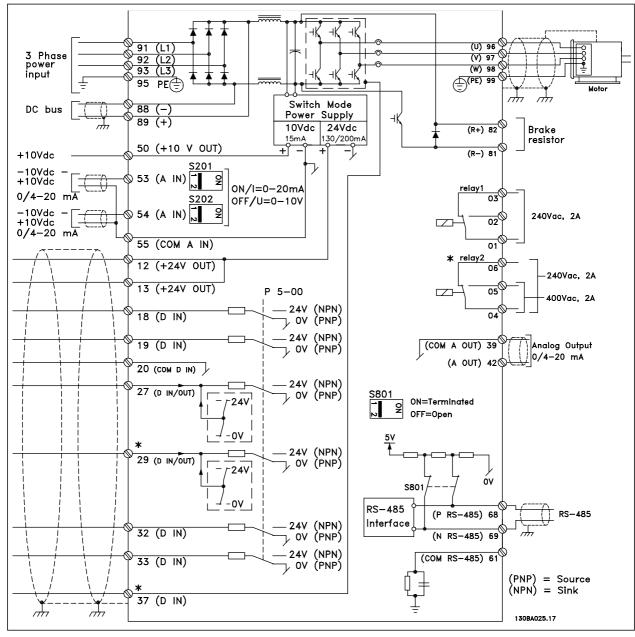


Diagram showing all electrical terminals without options.

Terminal 37 is the input to be used for Safe Stop. For instructions on Safe Stop installation please refer to the section *Safe Stop Installation* in the FC 300 Design Guide.

* Terminal 37 is not included in FC 301 (Except FC 301 A1, which includes Safe Stop). Terminal 29 and Relay 2, are not included in FC 301.






oxdot How to Install oxdot


Very long control cables and analogue signals may in rare cases and depending on installation result in 50/60 Hz earth loops due to noise from mains supply cables.

If this occurs, it may be necessary to break the screen or insert a 100 nF capacitor between screen and chassis.

The digital and analogue in- and outputs must be connected separately to the FC 300 common inputs (terminal 20, 55, 39) to avoid ground currents from both groups to affect other groups. For example, switching on the digital input may disturb the analog input signal.

Input polarity of control terminals

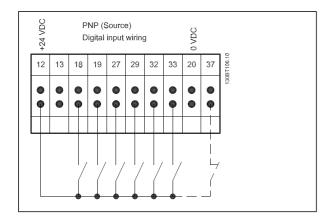

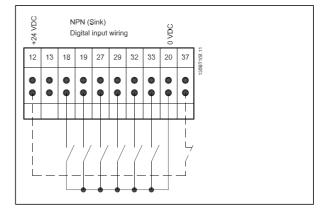




NB!

Control cables must be screened/armoured.

See section entitled *Earthing of Screened/Armoured Control Cables* for the correct termination of control cables.

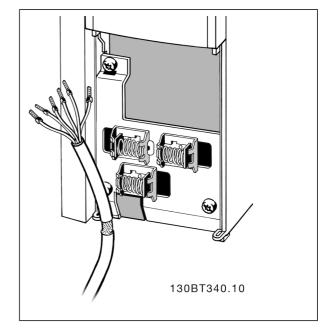



__ How to Install __



□ Motor Cables

See section General Specifications for correct dimensioning of motor cable cross-section and length.

- Use a screened/armoured motor cable to comply with EMC emission specifications.
- Keep the motor cable as short as possible to reduce the noise level and leakage currents.
- Connect the motor cable screen to both the decoupling plate of the FC 300 and to the metal cabinet of the motor.
- Make the screen connections with the largest possible surface area (cable clamp). This is done by using the supplied installation devices in the FC 300.
- Avoid mounting with twisted screen ends (pigtails), which will spoil high frequency screening effects.
- If it is necessary to split the screen to install a motor isolator or motor relay, the screen must be continued with the lowest possible HF impedance.

☐ Electrical Installation of Motor Cables

Screening of cables

Avoid installation with twisted screen ends (pigtails). They spoil the screening effect at higher frequencies.

If it is necessary to break the screen to install a motor isolator or motor contactor, the screen must be continued at the lowest possible HF impedance.

Cable length and cross-section

The frequency converter has been tested with a given length of cable and a given cross-section of that cable. If the cross-section is increased, the cable capacitance - and thus the leakage current - may increase, and the cable length must be reduced correspondingly.

Switching frequency

When frequency converters are used together with Sine-wave filters to reduce the acoustic noise from a motor, the switching frequency must be set according to the Sine-wave filter instruction in *Par. 14-01*.

Aluminium conductors

Aluminium conductors are not recommended. Terminals can accept aluminium conductors but the conductor surface has to be clean and the oxidation must be removed and sealed by neutral acid free Vaseline grease before the conductor is connected.

Furthermore, the terminal screw must be retightened after two days due to the softness of the aluminium. It is crucial to keep the connection a gas tight joint, otherwise the aluminium surface will oxidize again.







☐ Switches S201, S202, and S801

Switches S201 (A53) and S202 (A54) are used to select a current (0-20 mA) or a voltage (-10 to 10 V) configuration of the analog input terminals 53 and 54 respectively.

Switch S801 (BUS TER.) can be used to enable termination on the RS-485 port (terminals 68 and 69).

See drawing *Diagram showing all electrical terminals* in section *Electrical Installation*.

Default setting:


S201 (A53) = OFF (voltage input)

S202 (A54) = OFF (voltage input)

S801 (Bus termination) = OFF



When changing the function of S201, S202 or S801 be careful not to use force for the switch over. It is recommended to remove the LCP fixture (cradle) when operating the switches. The switches must not be operated with power on the frequency converter.

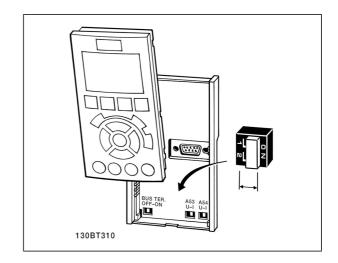



$_$ How to Install $_$



☐ Final Set-Up and Test


To test the set-up and ensure that the frequency converter is running, follow these steps.

Step 1. Locate the motor name plate.



NB!

The motor is either star- (Y) or delta-connected (Δ) . This information is located on the motor name plate data.

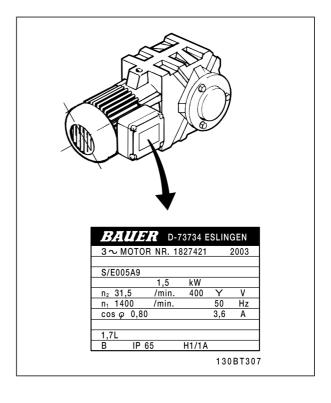

Step 2. Enter the motor name plate data in this parameter list.

To access this list first press the [QUICK MENU] key then select "Q2 Quick Setup".

1.	Motor Power [kW] or Motor Power [HP]	par. 1-20 par. 1-21
2.	Motor Voltage	par. 1-22
3.	Motor Frequency	par. 1-23
4.	Motor Current	par. 1-24
5.	Motor Nominal Speed	par. 1-25

Step 3. Activate the Automatic Motor Adaptation (AMA)

Performing an AMA will ensure optimum performance. The AMA measures the values from the motor model equivalent diagram.

- 1. Connect terminal 37 to terminal 12 (if terminal 37 is available).
- 2. Connect terminal 27 to terminal 12 or set par. 5-12 to 'No function' (par. 5-12 [0])
- 3. Activate the AMA par. 1-29.
- 4. Choose between complete or reduced AMA. If a Sine-wave filter is mounted, run only the reduced AMA, or remove the Sine-wave filter during the AMA procedure.
- 5. Press the [OK] key. The display shows "Press [Hand on] to start".
- 6. Press the [Hand on] key. A progress bar indicates if the AMA is in progress.

Stop the AMA during operation

1. Press the [OFF] key - the frequency converter enters into alarm mode and the display shows that the AMA was terminated by the user.



— How to Install —



Successful AMA

- 1. The display shows "Press [OK] to finish AMA".
- 2. Press the [OK] key to exit the AMA state.

Unsuccessful AMA

- 1. The frequency converter enters into alarm mode. A description of the alarm can be found in the *Troubleshooting* section.
- 2. "Report Value" in the [Alarm Log] shows the last measuring sequence carried out by the AMA, before the frequency converter entered alarm mode. This number along with the description of the alarm will assist you in troubleshooting. If you contact Danfoss for service, make sure to mention number and alarm description.



NB!

Unsuccessful AMA is often caused by incorrectly registered motor name plate data or too big difference between the motor power size and the FC 300 power size.

Step 4. Set speed limit and ramp time

Set up the desired limits for speed and ramp time.

Minimum Reference	par. 3-02
Maximum Reference	par. 3-03

Motor Speed Low Limit	par. 4-11 or 4-12
Motor Speed High Limit	par. 4-13 or 4-14

Ramp-up Time 1 [s]	par. 3-41
Ramp-down Time 1 [s]	par. 3-42



oxdot How to Install oxdot



Additional Connections

□ DC bus connection

The DC bus terminal is used for DC back-up, with the intermediate circuit being supplied from an external source.

Terminal numbers: 88, 89

Please contact Danfoss if you require further information.

□ Installation of Load sharing

The connection cable must be screened and the max. length from the frequency converter to the DC bar is 25 metres.



NB!

DC bus and load sharing calls for extra equipment and safety considerations. For further information, see Load sharing Instructions MI.50.NX.YY.



NB!

Voltages up to 975 V DC (@ 600 V AC) may occur between the terminals.

☐ Brake Connection Option

The connection cable to the brake resistor must be screened/armoured.

No	81	82	Brake resistor
	R-	R+	terminals



NB!

Dynamic brake calls for extra equipment and safety considerations. For further information, please contact Danfoss.

- 1. Use cable clamps to connect the screen to the metal cabinet of the frequency converter and to the decoupling plate of the brake resistor.
- 2. Dimension the cross-section of the brake cable to match the brake current.



NB!

 
Voltages up to 975 V DC (@ 600 V AC) may occur between the terminals.



NBI

If a short circuit in the brake IGBT occurs, prevent power dissipation in the brake resistor by using a mains switch or contactor to disconnect the mains for the frequency converter. Only the frequency converter shall control the contactor.










□ Relay Connection

To set relay output, see par. group 5-4* Relays.

No.	01 - 02	make (normally open)
	01 - 03	break (normally closed)
	04 - 05	make (normally open)
	04 - 06	break (normally closed)

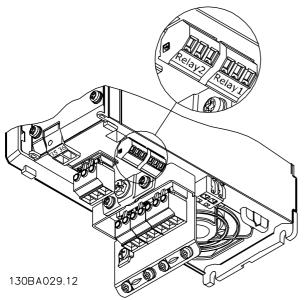

 

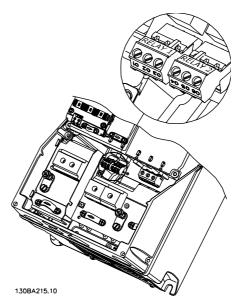

Terminals for relay connection (Frame sizes A5, B1, B2, C1 and C2).



$_{-}$ How to Install $\,\,\,\,\,\,\,\,$



□ Relay Output

Relay 1

• Terminal 01: common

Terminal 02: normal open 240 V AC

• Terminal 03: normal closed 240 V AC

Relay 2 (Not FC 301 ≤7.5 kW)


Terminal 04: common

• Terminal 05: normal open 400 V AC

Terminal 06: normal closed 240 V AC

Relay 1 and relay 2 are programmed in par. 5-40, 5-41, and 5-42.

Additional relay outputs by using option module MCB 105.

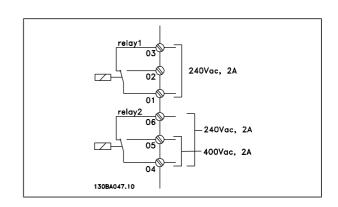

□ Parallel Connection of Motors

The frequency converter can control several parallel-connected motors. The total current consumption of the motors must not exceed the rated output current I_{INV} for the frequency converter. This is only recommended when U/f is selected in

par. 1-01.




NB!

Installations with cables connected in a common joint as in illustration 1 is only recommended for short cable lengths.



NB!

When motors are connected in parallel, par. 1-02 *Automatic Motor Adaptation (AMA)* cannot be used, and par. 1-01 *Motor Control Principle* must be set to *Special motor characteristics (U/f)*.

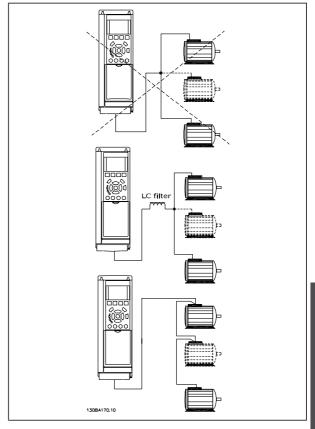



Problems may arise at start and at low RPM values if motor sizes are widely different because small motors' relatively high ohmic resistance in the stator calls for a higher voltage at start and at low RPM values.

The electronic thermal relay (ETR) of the frequency converter cannot be used as motor protection for the individual motor of systems with parallel-connected motors. Provide further motor protection by e.g. thermistors in each motor or individual thermal relays. (Circuit breakers are not suitable as protection).




□ Direction of Motor Rotation

The default setting is clockwise rotation with the frequency converter output connected as follows.

Terminal 96 connected to U-phase Terminal 97 connected to V-phase Terminal 98 connected to W-phase

The direction of motor rotation is changed by switching two motor phases.

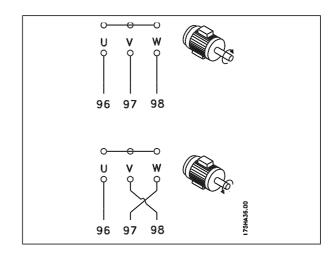

■ Motor Thermal Protection

The electronic thermal relay in FC 300 has received the UL-approval for single motor protection, when par. 1-90 *Motor Thermal Protection* is set for *ETR Trip* and par. 1-24 *Motor current,* $I_{M,N}$ is set to the rated motor current (see motor name plate).

☐ Installation of Brake Cable

(Only for frequency converters ordered with brake chopper option).

The connection cable to the brake resistor must be screened.

 Connect the screen by means of cable clamps to the conductive back plate on the frequency converter and to the metal cabinet of the brake resistor.

No.	Function	
81, 82	Brake resistor terminals	

2. Size the brake cable cross-section to match the brake torque.

See Brake instructions, MI.90.FX.YY and MI.50.SX.YY for more information about safe installation.




NB!

Voltages up to 960 V DC, depending on the supply voltage, may occur on the terminals.

□ RS 485 Bus Connection

One or more frequency converters can be connected to a control (or master) using the RS485 standardized interface. Terminal 68 is connected to the P signal (TX+, RX+), while terminal 69 is connected to the N signal (TX-,RX-).

If more than one frequency converter is connected to a master, use parallel connections.

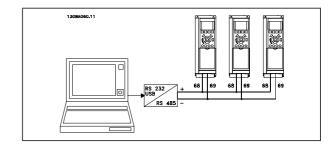



$_{-}$ How to Install $\,\,\,\,\,\,\,\,\,\,$



In order to avoid potential equalizing currents in the screen, earth the cable screen via terminal 61, which is connected to the frame via an RC-link.

Bus termination

The RS485 bus must be terminated by a resistor network at both ends. For this purpose, set switch S801 on the control card for "ON".

For more information, see the paragraph Switches S201, S202, and S801.



NB!

Communication protocol must be set to FC MC par. 8-30.

☐ How to Connect a PC to the FC 300


To control the frequency converter from a PC, install the MCT 10 Set-up Software.

The PC is connected via a standard (host/device) USB cable, or via the RS485 interface as shown in the section *Bus Connection* in the chapter *How to Programme*.



NB!

The USB connection is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals. The USB connection is connected to protection earth on the frequency converter. Use only isolated laptop as PC connection to the USB connector on the FC 300 drive.

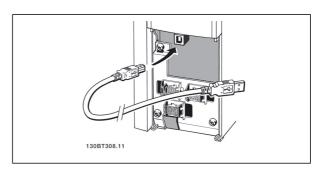

USB connection.

□ The FC 300 Software Dialog Data storage in PC via MCT 10 Set-Up Software:

- 1. Connect a PC to the unit via USB com port
- 2. Open MCT 10 Set-up Software
- 3. Choose "Read from drive"
- 4. Choose "Save as"

All parameters are now stored.

Data transfer from PC to drive via MCT 10 Set-Up Software:

- 1. Connect a PC to the unit via USB com port
- 2. Open MCT 10 Set-up software
- 3. Choose "Open" stored files will be shown
- 4. Open the appropriate file
- 5. Choose "Write to drive"

All parameters are now transferred to the drive.

A separate manual for MCT 10 Set-up Software is available.



$_{-}$ How to Install $\,\,\,\,\,\,\,\,\,$



☐ High Voltage Test

Carry out a high voltage test by short-circuiting terminals U, V, W, L_1 , L_2 and L_3 . Energize by max. 2.15 kV DC for one second between this short-circuit and the chassis.



NB!

When running high voltage tests of the entire installation, interrupt the mains and motor connection if the leakage currents are too high.

□ Safety Earth Connection

The frequency converter has a high leakage current and must be earthed appropriately for safety reasons acording to EN 50178.



The earth leakage current from the frequency converter exceeds 3.5 mA. To ensure a good mechanical connection from the earth cable to the earth connection (terminal 95), the cable cross-section must be at least 10 mm2 or 2 rated earth wires terminated separately.

☐ Electrical Installation - EMC Precautions

The following is a guideline to good engineering practice when installing frequency converters. Follow these guidelines to comply with EN 61800-3 *First environment*. If the installation is in EN 61800-3 *Second environment*, i.e. industrial networks, or in an installation with its own transformer, deviation from these guidelines is allowed but not recommended. See also paragraphs *CE Labelling*, *General Aspects of EMC Emission* and *EMC Test Results*.

Good engineering practice to ensure EMC-correct electrical installation:

- Use only braided screened/armoured motor cables and braided screened/armoured control cables. The screen should provide a minimum coverage of 80%. The screen material must be metal, not limited to but typically copper, aluminium, steel or lead. There are no special requirements for the mains cable.
- Installations using rigid metal conduits are not required to use screened cable, but the motor
 cable must be installed in conduit separate from the control and mains cables. Full connection of
 the conduit from the drive to the motor is required. The EMC performance of flexible conduits
 varies a lot and information from the manufacturer must be obtained.
- Connect the screen/armour/conduit to earth at both ends for motor cables as well as for control
 cables. In some cases, it is not possible to connect the screen in both ends. If so, connect the
 screen at the frequency converter. See also Earthing of Braided Screened/Armoured Control Cables.
- Avoid terminating the screen/armour with twisted ends (pigtails). It increases the high frequency
 impedance of the screen, which reduces its effectiveness at high frequencies. Use low impedance
 cable clamps or EMC cable glands instead.
- Avoid using unscreened/unarmoured motor or control cables inside cabinets housing the drive (s), whenever this can be avoided.


Leave the screen as close to the connectors as possible.

The illustration shows an example of an EMC-correct electrical installation of an IP 20 frequency converter. The frequency converter is fitted in an installation cabinet with an output contactor and connected to a PLC, which is installed in a separate cabinet. Other ways of doing the installation may have just as good an EMC performance, provided the above guide lines to engineering practice are followed.

If the installation is not carried out according to the guideline and if unscreened cables and control wires are used, some emission requirements are not complied with, although the immunity requirements are fulfilled. See the paragraph *EMC test results*.



Danfoss

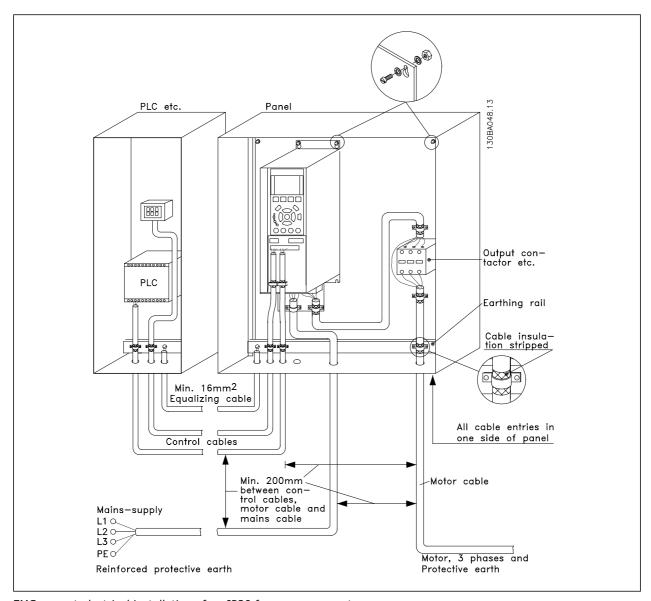

How to Install __

 ${\small EMC-correct\ electrical\ installation\ of\ an\ IP20\ frequency\ converter.}$



$_{-}$ How to Install $\,\,\,\,\,\,\,\,$



□ Use of EMC-Correct Cables


Danfoss recommends braided screened/armoured cables to optimise EMC immunity of the control cables and the EMC emission from the motor cables.

The ability of a cable to reduce the in- and outgoing radiation of electric noise depends on the transfer impedance (Z_T). The screen of a cable is normally designed to reduce the transfer of electric noise; however, a screen with a lower transfer impedance (Z_T) value is more effective than a screen with a higher transfer impedance (Z_T).

Transfer impedance (Z_T) is rarely stated by cable manufacturers but it is often possible to estimate transfer impedance (Z_T) by assessing the physical design of the cable.

Transfer impedance (Z_T) can be assessed on the basis of the following factors:

- The conductibility of the screen material.
- The contact resistance between the individual screen conductors.
- The screen coverage, i.e. the physical area of the cable covered by the screen often stated as a percentage value.
- Screen type, i.e. braided or twisted pattern.
- a. Aluminium-clad with copper wire.
- b. Twisted copper wire or armoured steel wire cable.
- Single-layer braided copper wire with varying percentage screen coverage.
 This is the typical Danfoss reference cable
- d. Double-layer braided copper wire.
- e. Twin layer of braided copper wire with a magnetic, screened/armoured intermediate layer.
- f. Cable that runs in copper tube or steel tube.
- g. Lead cable with 1.1 mm wall thickness.

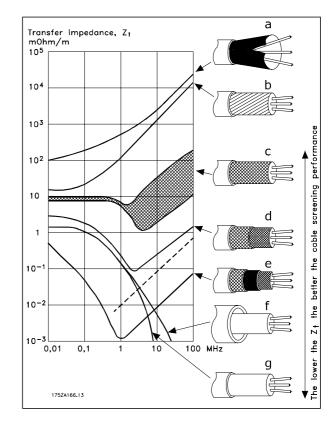





□ Earthing of Screened/Armoured Control Cables

Generally speaking, control cables must be braided screened/armoured and the screen must be connected by means of a cable clamp at both ends to the metal cabinet of the unit.

The drawing below indicates how correct earthing is carried out and what to do if in doubt.

a. Correct earthing

Control cables and cables for serial communication must be fitted with cable clamps at both ends to ensure the best possible electrical contact.

b. Wrong earthing

Do not use twisted cable ends (pigtails). They increase the screen impedance at high frequencies.

c. Protection with respect to earth potential between PLC and VLT


If the earth potential between the frequency converter and the PLC (etc.) is different, electric noise may occur that will disturb the entire system. Solve this problem by fitting an equalising cable, next to the control cable. Minimum cable cross-section: 16 mm².

d. For 50/60 Hz earth loops

If very long control cables are used, 50/60 Hz earth loops may occur. Solve this problem by connecting one end of the screen to earth via a 100nF capacitor (keeping leads short).

e. Cables for serial communication Eliminate low-frequency noise currents between two frequency converters by connecting one end of the screen to terminal 61. This terminal is connected to earth via an internal RC link. Use twistedpair cables to reduce the differential mode

interference between the conductors.

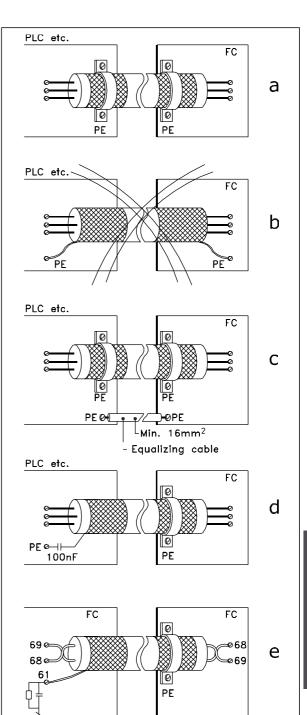



130BA051.11

oxdot How to Install oxdot




□ Mains Supply Interference/Harmonics

A frequency converter takes up a non-sinusoidal current from mains, which increases the input current I_{RMS} . A non-sinusoidal current is transformed by means of a Fourier analysis and split up into sine-wave currents with different frequencies, i.e. different harmonic currents I_N with 50 Hz as the basic frequency:

Harmonic currents	I_1	I 5	I ₇
Hz	50 Hz	250 Hz	350 Hz

 The harmonics do not affect the power consumption directly but increase the heat losses in the installation (transformer, cables). Consequently, in plants with a high percentage of rectifier load, maintain harmonic currents at a low level to avoid overload of the transformer and high temperature in the cables.





NB!

Some of the harmonic currents might disturb communication equipment connected to the same transformer or cause resonance in connection with power-factor correction batteries.

Harmonic currents compared to the RMS input current:

	Input current
IRMS	1.0
I ₁	0.9
I ₅	0.4
I ₇	0.2
I ₁₁₋₄₉	< 0.1

To ensure low harmonic currents, the frequency converter is equipped with intermediate circuit coils as standard. This normally reduces the input current I $_{RMS}$ by 40%.

The voltage distortion on the mains supply depends on the size of the harmonic currents multiplied by the mains impedance for the frequency in question. The total voltage distortion THD is calculated on the basis of the individual voltage harmonics using this formula:

$$THD\% = \sqrt{U\frac{2}{5} + U\frac{2}{7} + ... + U\frac{2}{N}} (U_N\% \text{ of } U)$$



□ Residual Current Device


You can use RCD relays, multiple protective earthing or earthing as extra protection, provided that local safety regulations are complied with.

If an earth fault appears, a DC content may develop in the faulty current.

If RCD relays are used, you must observe local regulations. Relays must be suitable for protection of 3-phase equipment with a bridge rectifier and for a brief discharge on power-up see section *Earth Leakage Current* for further information.



Application Examples

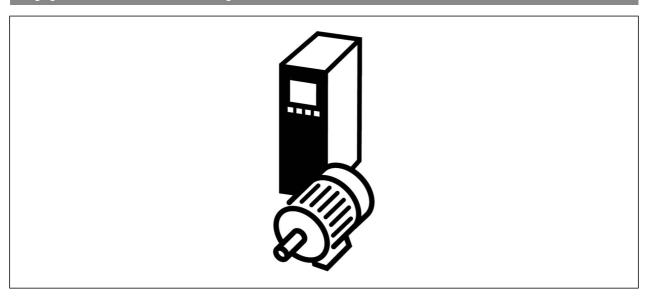


☐ Start/Stop

Terminal 18 = Par. 5-10 [8] *Start*


Terminal 27 = Par. 5-12 [0] *No operation* (Default *coast inverse*)

Terminal 37 = Safe stop (FC 302 and FC 301 A1 only)

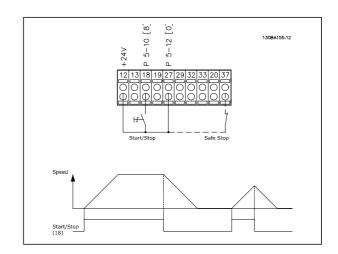

☐ Pulse Start/Stop

Terminal 18 = Par. 5-10 [9] Latched start
Terminal 27= Par. 5-12 [6] Stop inverse
Terminal 37 = Safe stop (FC 302 and FC 301 A1 only)

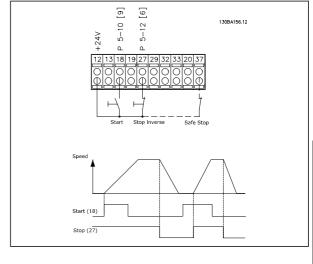





$_$ Application Examples $_$

□ Potentiometer Reference

Voltage reference via a potentiometer.

Reference Source 1 = [1] *Analogue input* 53 (default)


Terminal 53, Low Voltage = 0 Volt

Terminal 53, High Voltage = 10 Volt

Terminal 53, Low Ref./Feedback = 0 RPM

Terminal 53, High Ref./Feedback = 1500 RPM


Switch S201 = OFF(U)

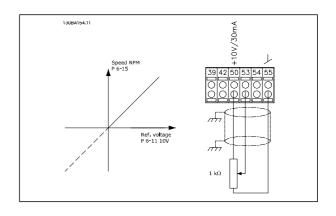

□ Encoder Connection


The purpose of this guideline is to ease the set-up of encoder connection to FC 302. Before setting up the encoder the basic settings for a closed loop speed control system will be shown.

Encoder Connection to FC 302

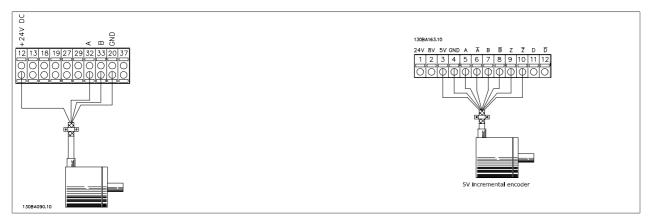

□ Encoder Direction

The direction of encoder is determined by which order the pulses are entering the drive. Clockwise direction means channel A is 90 electrical degrees before channel B. Counter Clockwise direction means channel B is 90 electrical degrees before A. The direction determined by looking into the shaft end.

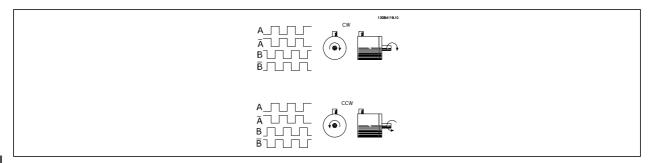



Danfoss


$_$ Application Examples $_$

□ Closed Loop Drive System

A drive system consist usually of more elements as:

- Motor
- Add
 (Gearbox)
 (Mechanical Brake)
- FC 302 AutomationDrive
- · Encoder as feed-back system
- Brake resistor for dynamic braking
- Transmission
- Load

Applications demanding mechanical brake control will usually need a brake resistor.

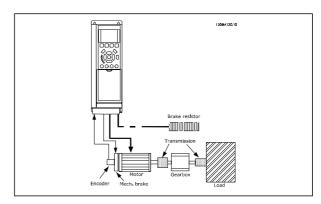

Basic Set-up for FC 302 Closed Loop Speed Control

□ Programming of Torque Limit and Stop

In applications with an external electro-mechanical brake, such as hoisting applications, it is possible to stop the frequency converter via a 'standard' stop command and simultaneously activate the external electro-mechanical brake.

The example given below illustrates the programming of frequency converter connections.


The external brake can be connected to relay 1 or 2, see paragraph *Control of Mechanical Brake*. Program terminal 27 to Coast, inverse [2] or Coast and Reset, inverse [3], and program terminal 29 to Terminal mode 29 Output [1] and Torque limit & stop [27].

Description:

If a stop command is active via terminal 18 and the frequency converter is not at the torque limit, the motor ramps down to 0 Hz.

If the frequency converter is at the torque limit and a stop command is activated, terminal 29 Output (programmed to Torque limit and stop [27]) is activated. The signal to terminal 27 changes from 'logic 1' to 'logic 0', and the motor starts to coast, thereby ensuring that the hoist stops even if the frequency converter itself cannot handle the required torque (i.e. due to excessive overload).

- Start/stop via terminal 18 Par. 5-10 Start [8]
- Quickstop via terminal 27
 Par. 5-12 Coasting Stop, Inverse [2]
- Terminal 29 Output
 Par. 5-02 Terminal 29 Mode Output [1]
 Par. 5-31 Torque Limit & Stop [27]
- Relay output [0] (Relay 1)
 Par. 5-40 Mechanical Brake Control [32]

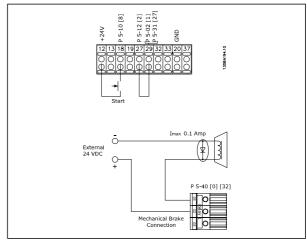





$_{-}$ Application Examples $_{-}$

☐ Automatic Motor Adaptation (AMA)

AMA is an algorithm to measure the electrical motor parameters on a motor at standstill. This means that AMA itself does not supply any torque.

AMA is useful when commissioning systems and optimising the adjustment of the frequency converter to the applied motor. This feature is particularly used where the default setting does not apply to the connected motor.

Par. 1-29 allows a choice of complete AMA with determination of all electrical motor parameters or reduced AMA with determination of the stator resistance Rs only.

The duration of a total AMA varies from a few minutes on small motors to more than 15 minutes on large motors.

Limitations and preconditions:

- For the AMA to determine the motor parameters optimally, enter the correct motor nameplate data in par. 1-20 to 1-26.
- For the best adjustment of the frequency converter, carry out AMA on a cold motor. Repeated AMA runs may lead to a heating of the motor, which results in an increase of the stator resistance, Rs. Normally, this is not critical.
- AMA can only be carried out if the rated motor current is minimum 35% of the rated output current of the frequency converter. AMA can be carried out on up to one oversize motor.
- It is possible to carry out a reduced AMA test with a Sine-wave filter installed. Avoid carrying out a complete AMA with a Sine-wave filter. If an overall setting is required, remove the Sine-wave filter while running a total AMA. After completion of the AMA, reinsert the Sine-wave filter.
- If motors are coupled in parallel, use only reduced AMA if any.
- Avoid running a complete AMA when using synchronous motors. If synchronous motors are applied, run a reduced AMA and manually set the extended motor data. The AMA function does not apply to permanent magnet motors.
- The frequency converter does not produce motor torque during an AMA. During an AMA, it is imperative that the application does not force the motor shaft to run, which is known to happen with e.g. wind milling in ventilation systems. This disturbs the AMA function.

□ Smart Logic Control Programming

A new useful facility in FC 302 is the Smart Logic Control (SLC).

In applications where a PLC is generating a simple sequence the SLC may take over elementary tasks from the main control.

SLC is designed to act from event sent to or generated in the FC 302. The frequency converter will then perform the pre-programmed action.




Danfoss

Application Examples —

□ SLC Application Example

One sequence 1:

Start – ramp up – run at reference speed 2 sec – ramp down and hold shaft until stop.

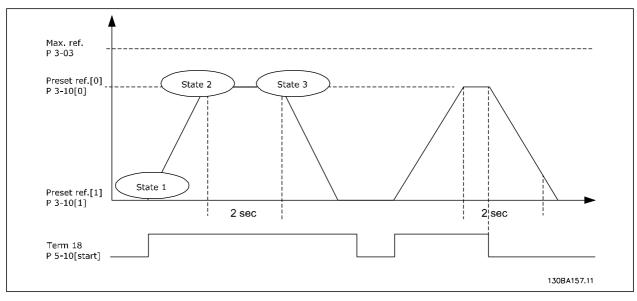

Set the ramping times in par. 3-41 and 3-42 to the wanted times

$$t_{ramp} = \frac{t_{acc} \times n_{norm} (par. 1 - 25)}{\Delta ref [RPM]}$$

Set term 27 to No Operation (par. 5-12)

Set Preset reference 0 to first preset speed (par. 3-10 [0]) in percentage of Max reference speed (par.

3-03). Ex.: 60%

Set preset reference 1 to second preset speed (par. 3-10 [1] Ex.: 0 % (zero).

Set the timer 0 for constant running speed in par. 13-20 [0]. Ex.: 2 sec.

Set Event 1 in par. 13-51 [1] to *True* [1]

Set Event 2 in par. 13-51 [2] to On Reference [4]

Set Event 3 in par. 13-51 [3] to *Time Out 0* [30]

Set Event 4 in par. 13-51 [1] to False [0]

Set Action 1 in par. 13-52 [1] to Select preset 0 [10]

Set Action 2 in par. 13-52 [2] to *Start Timer 0* [29]


Set Action 3 in par. 13-52 [3] to Select preset 1 [11]

Set Action 4 in par. 13-52 [4] to No Action [1]





$_$ Application Examples $_$

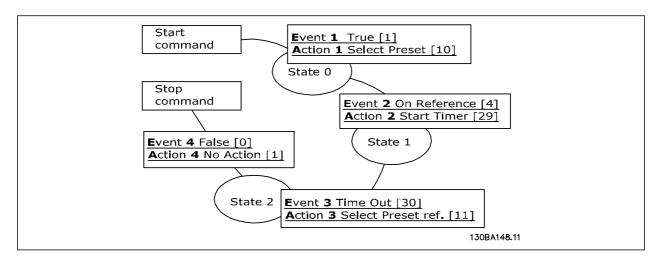

Set the Smart Logic Control in par. 13-00 to ON.

Start / stop command is applied on terminal 18. If stop signal is applied the frequency converter will ramp down and go into free mode.





Options and Accessories


Danfoss offers a wide range of options and accessories for VLT AutomationDrive FC 300 Series.

☐ Mounting of Option Modules in Slot B


The power to the frequency converter must be disconnected.

It is strongly recommended to make sure the parameter data is saved (i.e. by MCT10 software) before option modules are inserted/removed from the drive.

- Remove the LCP (Local Control Panel), the terminal cover, and the LCP frame from the frequency converter.
- Fit the MCB10x option card into slot B.
- Connect the control cables and relieve the cable by the enclosed cable strips.
 - * Remove the knock out in the extended LCP frame, so that the option will fit under the extended LCP frame.
- Fit the extended LCP frame and terminal cover.
- Fit the LCP or blind cover in the extended LCP frame.
- Connect power to the frequency converter.
- Set up the input/output functions in the corresponding parameters, as mentioned in the section *General Technical Data*.

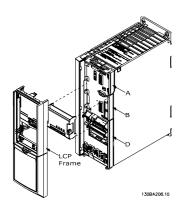

Frame sizes A1, A2 and A3

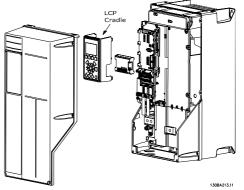


Frame sizes A5, B1, B2, C1 and C2

☐ General Purpose Input Output Module MCB 101

MCB 101 is used for extension of digital and analog inputs and outputs of FC 301 and FC 302 AutomationDrive.

Contents: MCB 101 must be fitted into slot B in the AutomationDrive.

- MCB 101 option module
- Extended fixture for LCP
- Terminal cover

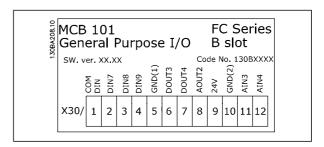




$_{-}$ Options and Accessories $\,\,\,\,\,\,\,$

☐ Galvanic Isolation In The MCB 101

Digital/analog inputs are galvanically isolated from other inputs/outputs on the MCB 101 and in the control card of the drive. Digital/analogue outputs in the MCB 101 are galvanically isolated from other inputs/outputs on the MCB 101, but not from these on the control card of the drive.

If the digital inputs 7, 8 or 9 are to be switched by use of the internal 24 V power supply (terminal 9) the connection between terminal 1 and 5 which is illustrated in the drawing has to be established.

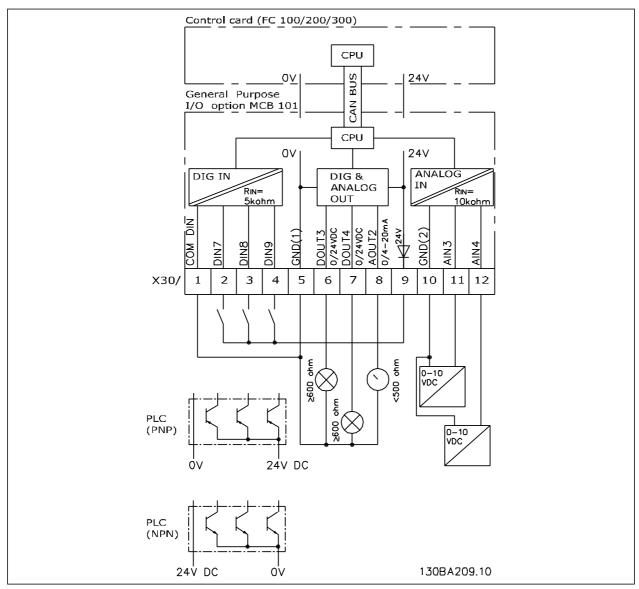

Principle Diagram

Digital inputs - Terminal X30/1-4

Digital input:

Digital input:	
Number of digital inputs	3
Terminal number	X30.2, X30.3, X30.4
Logic	PNP or NPN
Voltage level	0 - 24 V DC
Voltage level, logic'0' PNP (GND = 0 V)	< 5 V DC
Voltage level, logic'1' PNP (GND = 0 V)	> 10 V DC
Voltage level, logic '0' NPN (GND = 24V)	< 14 V DC



Options and Accessories —

Voltage level, logic '1' NPN (GND = 24 V)	> 19 V DC
Maximum voltage on input	28 V continous
Pulse frequency range	0 - 110 kHz
Duty cycle, min. pulse width	4.5 ms
Input impedance	> 2 kΩ

Analog inputs - Terminal X30/11, 12:

Ana	امما	in	nut	
Alla	ıоч	1111	υuι	

Number of analog inputs	2
Terminal number	X30.11, X30.12
Modes	Voltage
Voltage level	0 - 10 V
Input impedance	> 10 kΩ
Max. voltage	20 V
Resolution for analog inputs	10 bit (+ sign)
Accuracy of analog inputs	Max. error 0.5% of full scale
Bandwidth	FC 301: 20 Hz/ FC 302: 100 Hz

Digital outputs - Terminal X30/6, 7:

Digital output:

g.ca. oacpac.	
Number of digital outputs	2
Terminal number	X30.6, X30.7
Voltage level at digital/frequency output	0 - 24 V
Max. output current	40 mA
Max. load	≥ 600 Ω
Max. capacitive load	< 10 nF
Minimum output frequency	0 Hz
Maximum output frequency	≤ 32 kHz
Accuracy of frequency output	Max. error: 0.1 % of full scale

Analog output - Terminal X30/8:

Analog output:

Number of analog outputs	1
Terminal number	X30.8
Current range at analog output	0 - 20 mA
Max. load GND - analog output	500 Ω
Accuracy on analog output	Max. error: 0.5 % of full scale
Resolution on analog output	12 bit

☐ Encoder Option MCB 102

The encoder module can be used as feedback source for closed loop Flux control (par. 1-02) as well as closed loop speed control (par. 7-00). Configure encoder option in parameter group 17-xx

Used for:

- VVC^{plus} closed loop
- Flux Vector Speed control
- Flux Vector Torque control
- Permanent magnet motor

Supported encoder types:

Incremental encoder: 5 V TTL type, RS422, max. frequency: 410 kHz

Incremental encoder: 1Vpp, sine-cosine

Hiperface® Encoder: Absolute and Sine-Cosine (Stegmann/SICK)

EnDat encoder: Absolute and Sine-Cosine (Heidenhain) Supports version 2.1



$_$ Options and Accessories $_$

SSI encoder: Absolute Encoder monitor:

The 4 encoder channels (A, B, Z, and D) are monitored, open and short circuit can be detected. There is a green LED for each channel which lights up when the channel is OK.



NB!

The LEDs are only visible when removing the LCP. Reaction in case of an encoder error can be selected in par. 17-61: None, Warning or Trip.


When the encoder option kit is ordered separately the kit includes:


- Encoder module MCB 102
- Enlarged LCP fixture and enlarged terminal cover

The encoder option does not support FC 302 frequency converters manufactured before week 50/2004. Min. software version: 2.03 (par. 15-43)

Connector Designation X31	Incremental Encoder (please refer to Graphic A)	SinCos Encoder Hiperface® (please refer to Graphic B)	EnDat Encoder	SSI Encoder	Description
1	NC			24 V	24 V Output
2	NC	8 Vcc			8 V Output
3	5 VCC		5 Vcc	5 V	5 V Output
4	GND		GND	GND	GND
5	A input	+COS	+COS	A input	A input
6	A inv input	REFCOS	REFCOS	A input inv.	A inv input
7	B input	+SIN	+SIN	B input	B input
8	B inv input	REFSIN	REFSIN	B input inv.	B inv input
9	Z input	+Data RS485	Clock out	Clock out	Z input OR +Data RS485
10	Z inv input	-Data RS485	Clock out inv.	Clock out inv.	Z input OR -Data RS485
11	NC	NC	Data in	Data in	Future use
12	NC	NC	Data in inv.	Data in inv.	Future use

Max. 5V on X31.5-12

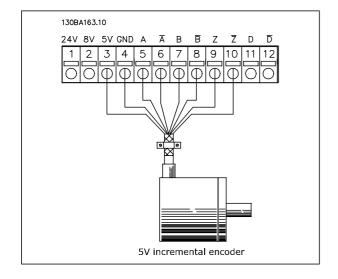

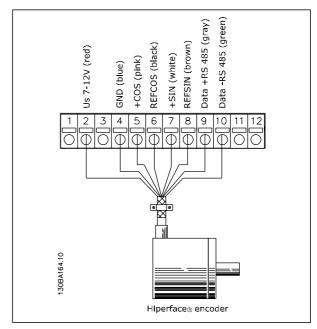



Options and Accessories —


□ Resolver Option MCB 103


MCB 103 Resolver option is used for interfacing resolver motor feedback to FC 300 Automation-Drive. Resolvers are used basically as motor feedback device for Permanent Magnet brushless synchronous motors. When the Resolver option is ordered separately the kit includes:

- Resolver option MCB 103
- Enlarged LCP fixture and enlarged terminal cover

Selection of parameters: 17-5x resolver Interface.

MCB 103 Resolver Option supports a various number of resolver types.

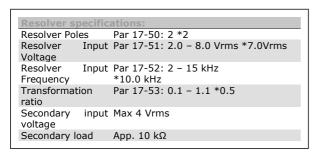

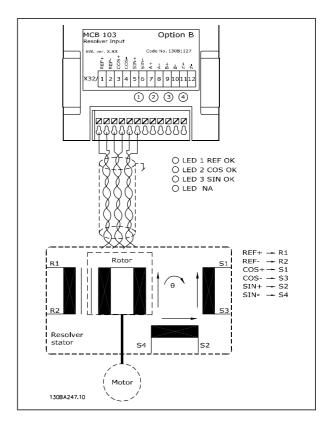

9

NB!

The resolver option MCB 103 can only be used with rotor-supplied resolver types. Stator-supplied resolvers cannot be used.


LED indicators

LED 1 is on when the reference signal is OK to resolver

LED 2 is on when Cosinus signal is OK from resolver

LED 3 is on when Sinus signal is OK from resolver

The LEDs are active when par. 17-61 is set to *Warning* or *Trip*.

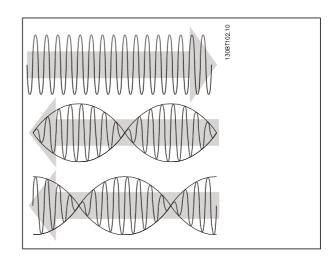



Options and Accessories —

Set-up example

In this example a Permanent Magnet (PM) Motor is used with resolver as speed feedback. A PM motor must usually operate in flux mode.

Wiring:

The max cable length is 150 m when a twisted pair type of cable is used.



NB!

Resolver cables must be screened and separated from the motor cables.



NB!

The screen of the resolver cable must be correctly connected to the de-coupling plate and connected to chassis (earth) on the motor side.



NB!

Always use screened motor cables and brake chopper cables.

Adjust follow	ving parameters:	
Par. 1-00	Configuration Mode	Speed closed loop [1]
Par. 1-01	Motor Control Principle	Flux with feedback [3]
Par. 1-10	Motor Construction	PM, non salient SPM [1]
Par. 1-24	Motor Current	Nameplate
Par. 1-25	Motor Nominal Speed	Nameplate
Par. 1-26	Motor Cont. Rated Torque	Nameplate
AMA is not p	oossible on PM motors	
Par. 1-30	Stator Resistance	Motor data sheet
Par. 1-37	d-axis Inductance (Ld)	Motor data sheet (mH)
Par. 1-39	Motor Poles	Motor data sheet
Par. 1-40	Back EMF at 1000 RPM	Motor data sheet
Par. 1-41	Motor Angle Offset	Motor data sheet (Usually zero)
Par. 17-50	Poles	Resolver data sheet
Par. 17-51	Input Voltage	Resolver data sheet
Par. 17-52	Input Frequency	Resolver data sheet
Par. 17-53	Transformation Ratio	Resolver data sheet
Par. 17-59	Resolver Interface	Enabled [1]



$_{-}$ Options and Accessories $\,\,\,\,\,\,\,$

□ Relay Option MCB 105

The MCB 105 option includes 3 pieces of SPDT contacts and must be fitted into option slot B.

Electrical Data:


Max terminal load (AC-1) 1) (Resistive load)	240 V AC 2A
Max terminal load (AC-15) ¹⁾ (Inductive load @ cosφ 0.4)	240 V AC 0.2 A
Max terminal load (DC-1) 1) (Resistive load)	24 V DC 1 A
Max terminal load (DC-13) 1) (Inductive load)	24 V DC 0.1 A
Min terminal load (DC)	5 V 10 mA
Max switching rate at rated load/min load	6 min ⁻¹ /20 sec ⁻¹

1) IEC 947 part 4 and 5

When the relay option kit is ordered separately the kit includes:

- Relay Module MCB 105
- Enlarged LCP fixture and enlarged terminal cover
- Label for covering access to switches S201, S202 and S801
- Cable strips for fastening cables to relay module

The relay option does not support FC 302 frequency converters manufactured before week 50/2004. Min. software version: 2.03 (par. 15-43).

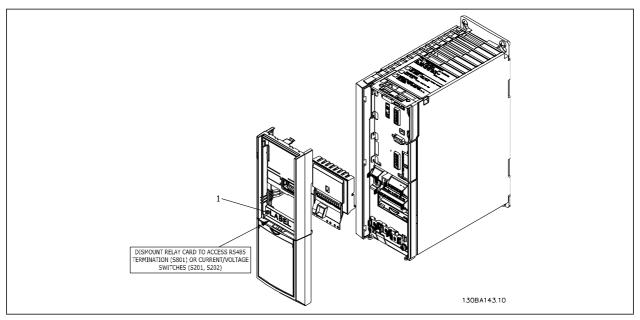


Frame sizes A1, A2 and A3 IMPORTANT

1. The label MUST be placed on the LCP frame as shown (UL approved).



$_$ Options and Accessories $_$

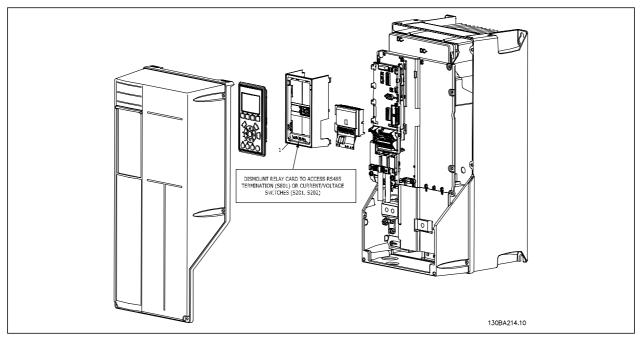

Frame sizes A5, B1, B2, C1 and C2

1. The label MUST be placed on the LCP frame as shown (UL approved).

 



Warning Dual supply


How to add the MCB 105 option:

- The power to the frequency converter must be disconnected.
- The power to the live part connections on relay terminals must be disconnected.
- Remove the LCP, the terminal cover and the LCP fixture from the FC 30x.
- Fit the MCB 105 option in slot B.
- Connect the control cables and fasten the cables with the enclosed cable strips.
- Make sure the length of the stripped wire is correct (see the following drawing).
- Do not mix live parts (high voltage) with control signals (PELV).
- Fit the enlarged LCP fixture and enlarged terminal cover.
- Replace the LCP.
- Connect power to the frequency converter.
- Select the relay functions in par. 5-40 [6-8], 5-41 [6-8] and 5-42 [6-8].

NB (Array [6] is relay 7, array [7] is relay 8, and array [8] is relay 9)




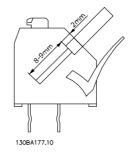

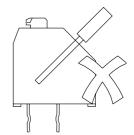



$_$ Options and Accessories $_$

 



Do not combine 24/ 48 V systems with high voltage systems.



Options and Accessories —

□ 24 V Back-Up Option MCB 107 (Option D)

External 24 V DC Supply

An external 24 V DC supply can be installed for low-voltage supply to the control card and any option card installed. This enables full operation of the LCP (including the parameter setting) without connection to mains.

External 24 V DC supply specification:

Input voltage range 24 V DC ±15 % (max. 37 \	
Max. input current	2.2 A
Average input current for FC 302	0.9 A
Max cable length	75 m
Input capacitance load	< 10 uF
Power-up delay	< 0.6 s

The inputs are protected.

Terminal numbers:


Terminal 35: - external 24 V DC supply.

Terminal 36: + external 24 V DC supply.


Follow these steps:

- 1. Remove the LCP or Blind Cover
- 2. Remove the Terminal Cover
- 3. Remove the Cable Decoupling Plate and the plastic cover underneath
- 4. Insert the 24 V DC Back-up External Supply Option in the Option Slot
- 5. Mount the Cable Decoupling Plate
- 6. Attach the Terminal Cover and the LCP or Blind Cover.

When MCB 107, 24 V back-up option is supplying the control circuit, the internal 24 V supply is automatically disconnected.

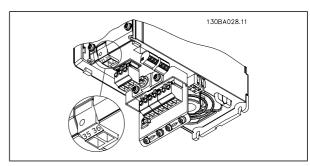

Connection to 24 V back-up supply on frame sizes A2 and A3.

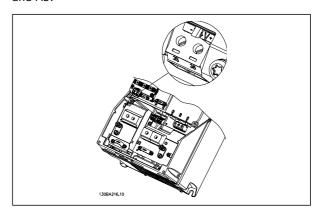

Connection to 24 V back-up supply on frame sizes A5, B1, B2, C1 and C2.



Options and Accessories


□ Brake Resistors


In applications where the motor is used as a brake, energy is generated in the motor and send back into the frequency converter. If the energy can not be transported back to the motor it will increase the voltage in the converter DC-line. In applications with frequent braking and/or high inertia loads this increase may lead to an over voltage trip in the converter and finally a shut down. Brake resistors are used to dissipate the excess energy resulting from the regenerative braking. The resistor is selected in respect to its ohmic value, its power dissipation rate and its physical size. Danfoss offers a wide verity of different resistors that are specially designed to our drive code numbers can be found in section How to order.


□ Remote mounting Kit for LCP


The Local Control Panel can be moved to the front of a cabinet by using the remote build in kit. The enclosure is the IP65. The fastening screws must be tightened with a torque of max. 1 Nm.

Technical data	
Enclosure:	IP 65 front
Max. cable length between VLT and	
unit:	3 m
Communication std:	RS 485

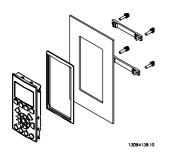

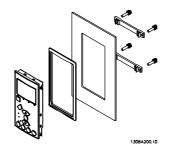

 

 

130BA139.11

☐ IP 21/IP 4X/ TYPE 1 Enclosure Kit

IP 20/IP 4X top/ TYPE 1 is an optional enclosure element available for IP 20 Compact units. If the enclosure kit is used, an IP 20 unit is upgraded to comply with enclosure IP 21/4X top/TYPE 1.

The IP 4X top can be applied to all standard IP 20 FC 30X variants.



Options and Accessories ____

☐ IP 21/Type 1 Enclosure Kit

A - Top cover

B - Brim


C - Base part

D - Base cover

E - Screw(s)

Place the top cover as shown. If an A or B option is used the brim must be fitted to cover the top inlet. Place the base part C at the bottom of the drive and use the clamps from the accessory bag to correctly fasten the cables. Holes for cable glands:

Size A2: 2x M25 and 3xM32 Size A3: 3xM25 and 3xM32

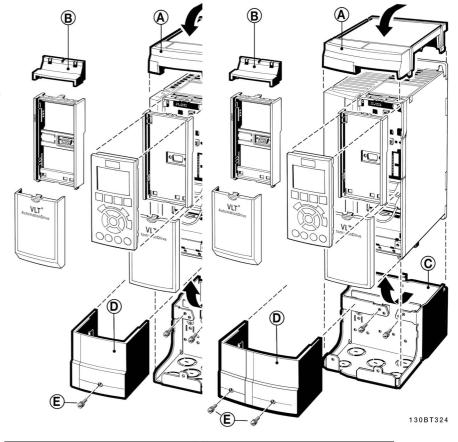

□ Sine-wave Filters

When a motor is controlled by a frequency converter, resonance noise will be heard from the motor. This noise, which is the result of the design of the motor, arises every time an inverter switch in the frequency converter is activated. The frequency of the resonance noise thus corresponds to the switching frequency of the frequency converter.

For the FC 300 Series, Danfoss can supply a Sine-wave filter to dampen the acoustic motor noise.

The filter reduces the ramp-up time of the voltage, the peak load voltage U_{PEAK} and the ripple current ΔI to the motor, which means that current and voltage become almost sinusoidal. Consequently, the acoustic motor noise is reduced to a minimum.

The ripple current in the Sine-wave Filter coils, will also cause some noise. Solve the problem by integrating the filter in a cabinet or similar.

RS-485 Installation and Set-up



RS-485 Installation and Set-up

□ Overview

RS-485 is a two-wire bus interface compatible with multi-drop network topology, i.e. nodes can be connected as a bus, or via drop cables from a common trunk line. A total of 32 nodes can be connected to one network segment.

Network segments are divided up by repeaters. Please note that each repeater functions as a node within the segment in which it is installed. Each node connected within a given network must have a unique node address, across all segments.

Terminate each segment at both ends, using either the termination switch (S801) of the frequency converters or a biased termination resistor network. Always use screened twisted pair (STP) cable for bus cabling, and always follow good common installation practice.

Low-impedance ground connection of the screen at every node is very important, including at high frequencies. This can be achieved by connecting a large surface of the screen to ground, for example by means of a cable clamp or a conductive cable gland. It may be necessary to apply potential-equalizing cables to maintain the same ground potential throughout the network, particularly in installations where there are long lengths of cable.

To prevent impedance mismatch, always use the same type of cable throughout the entire network. When connecting a motor to the frequency converter, always use screened motor cable.

Cable: Screened twisted pair (STP)

Impedance: 120 Ohm

Cable length: Max. 1200 m (including drop lines)

Max. 500 m station-to-station



$_{-}$ RS-485 Installation and Set-up $\,\,\,\,\,\,\,\,\,$

□ Network Connection


Connect the frequency converter to the RS-485 network as follows (see also diagram):

- 1. Connect signal wires to terminal 68 (P+) and terminal 69 (N-) on the main control board of the frequency converter.
- 2. Connect the cable screen to the cable clamps.



NB!

Screened, twisted-pair cables are recommended in order to reduce noise between conductors.

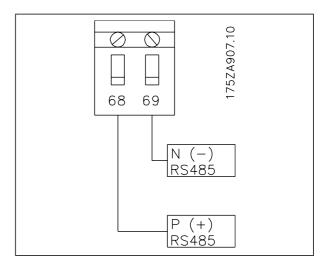

Network Terminal Connection

 
☐ FC 300 Hardware Setup

Use the terminator dip switch on the main control board of the frequency converter to terminate the RS-485 bus.



NB!

The factory setting for the dip switch is OFF.



Terminator Switch Factory Setting



Danfoss

□ FC 300 Parameter Settings for Modbus Communication

The following parameters apply to the RS-485 interface (FC-port):

Parameter Number	Parameter name	Function
8-30	Protocol	Select the application protocol to run on the RS-485 interface
8-31	Address	Set the node address. Note: The address range depends on the protocol selected in par. 8-30
8-32	Baud Rate	Set the baud rate. Note: The default baud rate depends on the protocol selected in par. 8-30
8-33	PC port parity/Stop bits	Set the parity and number of stop bits. Note: The default selection depends on the protocol selected in par. 8-30
8-35	Min. response delay	Specify a minimum delay time between receiving a request and transmitting a response. This can be used for overcoming modem turnaround delays.
8-36	Max. response delay	Specify a maximum delay time between transmitting a request and receiving a response.
8-37	Max. inter-char delay	Specify a maximum delay time between two received bytes to ensure timeout if transmission is interrupted.


□ EMC Precautions

The following EMC precautions are recommended in order to achieve interference-free operation of the RS-485 network.



NB!

Relevant national and local regulations, for example regarding protective earth connection, must be observed. The RS-485 communication cable must be kept away from motor and brake resistor cables to avoid coupling of high frequency noise from one cable to another. Normally a distance of 200 mm (8 inches) is sufficient, but keeping the greatest possible distance between the cables is generally recommended, especially where cables run in parallel over long distances. When crossing is unavoidable, the RS-485 cable must cross motor and brake resistor cables at an angle of 90 degrees.

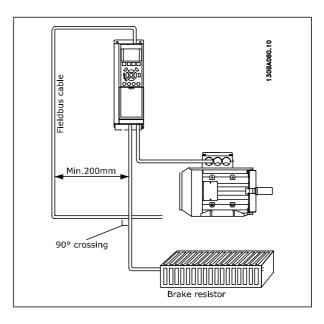

[//h]



$_{\scriptscriptstyle -}$ RS-485 Installation and Set-up $_{\scriptscriptstyle -}$

The FC protocol, also referred to as FC bus or Standard bus, is the Danfoss Drives standard fieldbus. It defines an access technique according to the master-slave principle for communications via a serial bus. One master and a maximum of 126 slaves can be connected to the bus. The individual slaves are selected by the master via an address character in the telegram. A slave itself can never transmit without first being requested to do so, and direct message transfer between the individual slaves is not possible. Communications occur in the half-duplex mode.

The master function cannot be transferred to another node (single-master system).

The physical layer is RS-485, thus utilizing the RS-485 port built into the frequency converter. The FC protocol supports different telegram formats; a short format of 8 bytes for process data, and a long format of 16 bytes that also includes a parameter channel. A third telegram format is used for texts.

Network Configuration

☐ FC 300 Frequency Converter Set-up

Set the following parameters to enable the FC protocol for the FC 300.

Parameter Number	Parameter name	Setting
8-30	Protocol	FC
8-31	Address	1 - 126
8-32	Baud Rate	2400 - 115200
8-33	Parity/Stop bits	Even parity, 1 stop bit (default)

 




□ FC Protocol Message Framing Structure - FC 300

☐ Content of a Character (byte)


Each character transferred begins with a start bit. Then 8 data bits are transferred, corresponding to a byte. Each character is secured via a parity bit, which is set at "1" when it reaches parity (i.e. when there is an equal number of 1's in the 8 data bits and the parity bit in total). A character is completed by a stop bit, thus consisting of 11 bits in all.



[////]

□ Telegram Structure

 Each telegram begins with a start character (STX)=02 Hex, followed by a byte denoting the telegram length (LGE) and a byte denoting the frequency converter address (ADR). A number of data bytes (variable, depending on the type of telegram) follows. The telegram is completed by a data control byte (BCC).



□ Telegram Length (LGE)

The telegram length is the number of data bytes plus the address byte ADR and the data control byte BCC.

The length of telegrams with 4 data bytes is

LGE = 4 + 1 + 1 = 6 bytes

The length of telegrams with 12 data bytes is

LGE = 12 + 1 + 1 = 14 bytes

The length of telegrams containing texts is

101)+n bytes

☐ Frequency Converter Address (ADR)

Two different address formats are used.

The address range of the frequency converter is either 1-31 or 1-126.

1. Address format 1-31:

Bit 7 = 0 (address format 1-31 active)

Bit 6 is not used

Bit 5 = 1: Broadcast, address bits (0-4) are not used

Bit 5 = 0: No Broadcast

Bit 0-4 = Frequency converter address 1-31

2. Address format 1-126:

Bit 7 = 1 (address format 1-126 active)

Bit 0-6 = Frequency converter address 1-126

Bit 0-6 = 0 Broadcast

The slave returns the address byte unchanged to the master in the response telegram.

□ Data Control Byte (BCC)

The checksum is calculated as an XOR-function. Before the first byte in the telegram is received, the Calculated Checksum is 0.

¹⁾ The 10 represents the fixed characters, while the "n'" is variable (depending on the length of the text).





☐ The Data Field

The structure of data blocks depends on the type of telegram. There are three telegram types, and the type applies for both control telegrams (master=>slave) and response telegrams (slave=>master).

The three types of telegram are:

Process block (PCD):


The PCD is made up of a data block of four bytes (2 words) and contains:

- Control word and reference value (from master to slave)
- Status word and present output frequency (from slave to master).

			130BA269.10
STX LGE ADR	PCD1	PCD2	BCC

Parameter block:

 The parameter block is used to transfer parameters between master and slave. The data block is made up of 12 bytes (6 words) and also contains the process block.




Text block:

The text block is used to read or write texts via the data block.

						13	50BA270.10
STX LGE ADR PKE	IND	Ch1	Ch2	Chn	PCD1	PCD2	ВСС

☐ The PKE Field

The PKE field contains two sub-fields: Parameter command and response AK, and Parameter number PNU:

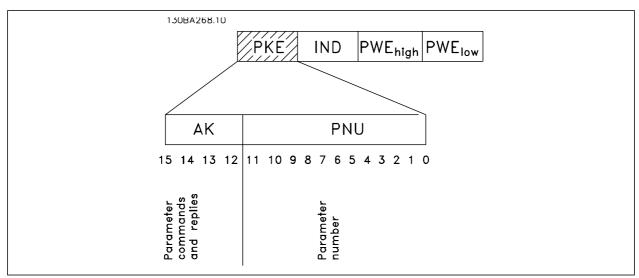

Bits no. 12-15 transfer parameter commands from master to slave and return processed slave responses to the master.





$_{-}$ RS-485 Installation and Set-up $\,\,\,\,\,\,\,\,\,$

Bit no).			Parameter command
15	14	13	12	
0	0	0	0	No command
0	0	0	1	Read parameter value
0	0	1	0	Write parameter value in RAM (word)
0	0	1	1	Write parameter value in RAM (double word)
1	1	0	1	Write parameter value in RAM and EEprom (double word)
1	1	1	0	Write parameter value in RAM and EEprom (word)
1	1	1	1	Read/write text

Response slave ⇒master								
Bit no) .			Response				
15	14	13	12					
0	0	0	0	No response				
0	0	0	1	Parameter value transferred (word)				
0	0	1	0	Parameter value transferred (double word)				
0	1	1	1	Command cannot be performed				
1	1	1	1	text transferred				

If the command cannot be performed, the slave sends this response:

0111 Command cannot be performed

- and issues the following fault report in the parameter value (PWE):

PWE low (Hex)	Fault Report
0	The parameter number used does not exit
1	There is no write access to the defined parameter
2	Data value exceeds the parameter's limits
3	The sub index used does not exit
4	The parameter is not the array type
5	The data type does not match the defined parameter
11	Data change in the defined parameter is not possible in the frequency converter's present mode. Certain parameters can only be changed when the motor is turned off
82	There is no bus access to the defined parameter
83	Data change is not possible because factory setup is selected

□ Parameter Number (PNU)

Bits no. 0-11 transfer parameter numbers. The function of the relevant parameter is defined in the parameter description in the chapter How to Programme.

□ Index (IND)

The index is used together with the parameter number to read/write-access parameters with an index, e.g. par. 15-30 *Error Code*. The index consists of 2 bytes, a low byte and a high byte.



NB!

Only the low byte is used as an index.

[//h]



□ Parameter Value (PWE)

The parameter value block consists of 2 words (4 bytes), and the value depends on the defined command (AK). The master prompts for a parameter value when the PWE block contains no value. To change a parameter value (write), write the new value in the PWE block and send from the master to the slave.

When a slave responds to a parameter request (read command), the present parameter value in the PWE block is transferred and returned to the master. If a parameter contains not a numerical value but several data options, e.g. par. 0-01 Language where [0] corresponds to English, and [4] corresponds to Danish, select the data value by entering the value in the PWE block. See Example - Selecting a data value. Serial communication is only capable of reading parameters containing data type 9 (text string).

Parameters 15-40 to 15-53 contain data type 9.

For example, read the unit size and mains voltage range in par. 15-40 FC Type. When a text string is transferred (read), the length of the telegram is variable, and the texts are of different lengths. The telegram length is defined in the second byte of the telegram, LGE. When using text transfer the index character indicates whether it is a read or a write command.

To read a text via the PWE block, set the parameter command (AK) to 'F' Hex. The index character highbyte must be "4".

Some parameters contain text that can be written to via the serial bus. To write a text via the PWE block, set the parameter command (AK) to 'F' Hex. The index characters high-byte must be "5".

	PKE	IND	PWE _{high} PWE _{low}
Read text	Fx xx	04 00	
Write text	Fx xx	05 00	
			130BA275.11

□ Data Types Supported by FC 300

Unsigned means that there is no operational sign in the telegram.

Data types	Description
3	Integer 16
4	Integer 32
5	Unsigned 8
6	Unsigned 16
7	Unsigned 32
9	Text string
10	Byte string
13	Time difference
33	Reserved
35	Bit sequence

□ Conversion

The various attributes of each parameter are displayed in the section Factory Settings. Parameter values are transferred as whole numbers only. Conversion factors are therefore used to transfer decimals.

Par. 4-12 *Motor Speed, Low Limit* has a conversion factor of 0.1.

To preset the minimum frequency to 10 Hz, transfer the value 100. A conversion factor of 0.1 means that the value transferred is multiplied by 0.1. The value 100 is thus perceived as 10.0.





$_{-}$ RS-485 Installation and Set-up $\,\,-$

Conversion index	Conversion factor
74	0.1
2	100
1	10
0	1
-1	0.1
-2	0.01
-3	0.001
-4	0.0001
-5	0.00001

□ Process Words (PCD)

The block of process words is divided into two blocks of 16 bits, which always occur in the defined sequence.

PCD 1	PCD 2
Control telegram (master⇒ Control word slave)	Reference-value
Control telegram (slave ⇒master) Status word	Present outp. frequency





Examples

□ Writing a parameter value

Change par. 4-14 *Motor Speed High Limit [Hz]* to 100 Hz. Write the data in EEPROM.

PKE = E19E Hex - Write single word in par. 4-14 Motor Speed High Limit [Hz]

IND = 0000 Hex

 
PWEHIGH = 0000 Hex

 
PWELOW = 03E8 Hex - Data value 1000, corresponding to 100 Hz, see Conversion.

Note: Parameter 4-14 is a single word, and the parameter command for write in EEPROM is "E". Parameter number 414 is 19E in hexadecimal.

The response from the slave to the master will be:

The telegram will look like this:





□ Reading a parameter value

Read the value in par. 3-41 Ramp 1 Up Time.

PKE = 1155 Hex - Read parameter value in par.

3-41 Ramp 1 Up Time


IND = 0000 Hex

PWEHIGH = 0000 Hex

PWELOW = 0000 Hex

If the value in par. 3-41 Ramp 1 Up Time is 10 s, the response from the slave to the master will be:

							130BA09	94.10
	1155	Н	0000	Н	0000	Н	0000	Н
•	PKE		IND		PWE _{hi}	gh	PWElo	w

 




NB!

3E8 Hex corresponds to 1000 decimal. The conversion index for par. 3-41 is -2, i.e. 0.01.

Danfoss FC Control Profile

□ Control Word According to FC Profile(Par. 8-10 = FC profile)

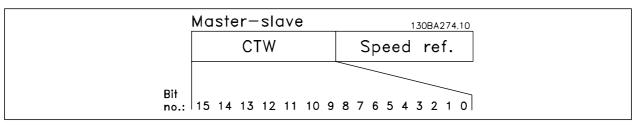



$_{-}$ RS-485 Installation and Set-up $\,\,\,\,\,\,\,\,\,\,$

Bit	Bit value = 0	Bit value = 1	
00	Reference value	external selection lsb	
01	Reference value	external selection msb	
02	DC brake	Ramp	
03	Coasting	No coasting	
04	Quick stop	Ramp	
05	Hold output frequency	use ramp	
06	Ramp stop	Start	
07	No function	Reset	
08	No function	Jog	
09	Ramp 1	Ramp 2	
10	Data invalid	Data valid	
11	No function	Relay 01 active	
12	No function	Relay 02 active	
13	Parameter set-up	selection lsb	
14	Parameter set-up	selection msb	
15	No function	Reverse	

[//h]

Explanation of the Control Bits

Bits 00/01

Bits 00 and 01 are used to choose between the four reference values, which are pre-programmed in par. 3-10 *Preset reference* according to the following table:

Programmed ref. value	Par.	Bit 01	Bit 00	
1	3-10 [0]	0	0	
2	3-10 [1]	0	1	
3	3-10 [2]	1	0	
4	3-10 [3]	1	1	



NB!

Make a selection in par. 8-56 Preset Reference Select to define how Bit 00/01 gates with the corresponding function on the digital inputs.

Bit 02, DC brake:

Bit 02 = '0' leads to DC braking and stop. Set braking current and duration in par. 2-01 DC Brake Current and 2-02 DC Braking Time. Bit 02 = '1' leads to ramping.

$_{-}\;$ RS-485 Installation and Set-up $\;-\;$

Bit 03, Coasting:

Bit 03 = '0': The frequency converter immediately "lets go" of the motor, (the output transistors are "shut off") and it coasts to a standstill. Bit 03 = '1': The frequency converter starts the motor if the other starting conditions are met.



NB!

Make a selection in par. 8-50 *Coasting Select* to define how Bit 03 gates with the corresponding function on a digital input.

Bit 04, Quick stop:

Bit 04 = '0': Makes the motor speed ramp down to stop (set in par. 3-81 Quick Stop Ramp Time.

Bit 05, Hold output frequency

Bit 05 = '0': The present output frequency (in Hz) freezes. Change the frozen output frequency only by means of the digital inputs (par. 5-10 to 5-15) programmed to *Speed up* and *Slow down*.



NB!

If Freeze output is active, the frequency converter can only be stopped by the following:

- Bit 03 Coasting stop
- Bit 02 DC braking
- Digital input (par. 5-10 to 5-15) programmed to *DC braking*, *Coasting stop*, or *Reset* and *coasting stop*.

Bit 06, Ramp stop/start:

Bit 06 = '0': Causes a stop and makes the motor speed ramp down to stop via the selected ramp down par. Bit 06 = '1': Permits the frequency converter to start the motor, if the other starting conditions are met.



NB!

Make a selection in par. 8-53 *Start Select* to define how Bit 06 Ramp stop/start gates with the corresponding function on a digital input.

<u>Bit 07, Reset:</u> Bit 07 = 0: No reset. Bit 07 = 1: Resets a trip. Reset is activated on the signal's leading edge, i.e. when changing from logic 0 to logic 1.

Bit 08, Jog:

Bit 08 = '1': The output frequency is determined by par. 3-19 *Jog Speed*.

Bit 09, Selection of ramp 1/2:

Bit 09 = "0": Ramp 1 is active (par. 3-40 to 3-47). Bit 09 = "1": Ramp 2 (par. 3-50 to 3-57) is active.

Bit 10, Data not valid/Data valid:

Tell the frequency converter whether to use or ignore the control word. Bit 10 = '0': The control word is ignored. Bit 10 = '1': The control word is used. This function is relevant because the telegram always contains the control word, regardless of the telegram type. Thus, you can turn off the control word if you do not want to use it when updating or reading parameters.



Danfoss

$_{-}$ RS-485 Installation and Set-up $\,\,\,\,\,\,\,\,\,$

Bit 11, Relay 01:

Bit 11 = "0": Relay not activated. Bit 11 = "1": Relay 01 activated provided that *Control word bit 11* is chosen in par. 5-40 *Function relay*.

Bit 12, Relay 04:

Bit 12 = "0": Relay 04 is not activated. Bit 12 = "1": Relay 04 is activated provided that *Control word bit* 12 is chosen in par. 5-40 *Function relay*.

Bit 13/14, Selection of set-up:

Use bits 13 and 14 to choose from the four menu set-ups according to the shown table: .

Set-up	Bit 14	Bit 13	
1	0	0	
2	0	1	
3	1	0	
4	1	1	

The function is only possible when *Multi Set-Ups* is selected in par. 0-10 *Active Set-Up*



NB!

Make a selection in par. 8-55 Set-up select to define how Bit 13/14 gates with the corresponding function on the digital inputs.




Bit 15 Reverse:

Bit 15 = '0': No reversing. Bit 15 = '1': Reversing. In the default setting, reversing is set to digital in par. 8-54 *Reversing Select*. Bit 15 causes reversing only when Ser. communication, Logic or or Logic and is selected.



□ Status Word According to FC Profile (STW) (Par. 8-10 = FC profile)

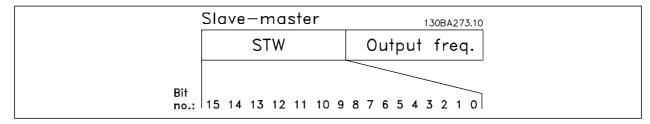



Bit	Bit = 0	Bit = 1
00	Control not ready	Control ready
01	Drive not ready	Drive ready
02	Coasting	Enable
03	No error	Trip
04	No error	Error (no trip)
05	Reserved	-
06	No error	Triplock
07	No warning	Warning
08	Speed ≠ reference	Speed = reference
09	Local operation	Bus control
10	Out of frequency limit	Frequency limit OK
11	No operation	In operation
12	Drive OK	Stopped, auto start
13	Voltage OK	Voltage exceeded
14	Torque OK	Torque exceeded
15	Timer OK	Timer exceeded

Explanation of the Status Bits

Bit 00, Control not ready/ready:

Bit 00 = '0': The frequency converter trips. Bit 00 = '1': The frequency converter controls are ready but the power component does not necessarily receive any power supply (in case of external 24 V supply to controls).

Bit 01, Drive ready:

Bit 01 = '1': The frequency converter is ready for operation but the coasting command is active via the digital inputs or via serial communication.

Bit 02, Coasting stop:

Bit 02 = '0': The frequency converter releases the motor. Bit 02 = '1': The frequency converter starts the motor with a start command.

Bit 03, No error/trip:

Bit 03 = '0': The frequency converter is not in fault mode. Bit 03 = '1': The frequency converter trips. To re-establish operation, enter [Reset].

Bit 04, No error/error (no trip):

Bit 04 = 0: The frequency converter is not in fault mode. Bit 04 = 1: The frequency converter shows an error but does not trip.

Bit 05, Not used:

Bit 05 is not used in the status word.

Bit 06, No error / triplock:

Bit 06 = '0': The frequency converter is not in fault mode. Bit 06 = "1": The frequency converter is tripped and locked.

Bit 07, No warning/warning:

Bit 07 = '0': There are no warnings. Bit 07 = '1': A warning has occurred.

Bit 08, Speed≠ reference/speed = reference:



$_{-}\;$ RS-485 Installation and Set-up $\;-$

Bit 08 = '0': The motor is running but the present speed is different from the preset speed reference. It might e.g. be the case when the speed ramps up/down during start/stop. Bit 08 = '1': The motor speed matches the preset speed reference.

Bit 09, Local operation/bus control:

Bit 09 = '0': [STOP/RESET] is activate on the control unit or *Local control* in par. 3-13 *Reference Site* is selected. You cannot control the frequency converter via serial communication. Bit 09 = '1' It is possible to control the frequency converter via the fieldbus/ serial communication.

Bit 10, Out of frequency limit:

Bit 10 = '0': The output frequency has reached the value in par. 4-11 *Motor Speed Low Limit* or par. 4-13 *Motor Speed High Limit*. Bit 10 = "1": The output frequency is within the defined limits.

Bit 11, No operation/in operation:

Bit 11 = '0': The motor is not running. Bit 11 = '1': The frequency converter has a start signal or the output frequency is greater than 0 Hz.

Bit 12, Drive OK/stopped, autostart:

Bit 12 = '0': There is no temporary over temperature on the inverter. Bit 12 = '1': The inverter stops because of over temperature but the unit does not trip and will resume operation once the over temperature stops.

Bit 13, Voltage OK/limit exceeded:

Bit 13 = '0': There are no voltage warnings. Bit 13 = '1': The DC voltage in the frequency converter's intermediate circuit is too low or too high.

Bit 14, Torque OK/limit exceeded:

Bit 14 = '0': The motor current is lower than the torque limit selected in par. 4-18 *Current Limit*. Bit 14 = '1': The torque limit in par. 4-18 *Current Limit* is exceeded.

Bit 15, Timer OK/limit exceeded:

Bit 15 = '0': The timers for motor thermal protection and VLT thermal protection are not exceeded 100%. Bit 15 = '1': One of the timers exceeds 100%.



NB!

All bits in the STW are set to '0' if the connection between the Interbus option and the frequency converter is lost, or an internal communication problem has occurred.





□ Bus Speed Reference Value


Speed reference value is transmitted to the frequency converter in a relative value in %. The value is transmitted in the form of a 16-bit word; in integers (0-32767) the value 16384 (4000 Hex) corresponds to 100%. Negative figures are formatted by means of 2's complement. The Actual Output frequency (MAV) is scaled in the same way as the bus reference.


Master-slave	16bit
CTW	Speed ref.
Slave-master	
STW	Actual output freq.
	130BA276.10

100%

(4000hex)

 The reference and MAV are scaled as follows:



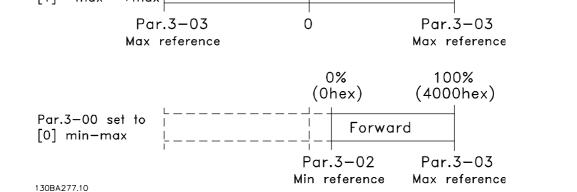

0%

(Ohex)

Forward



RS-485 Installation and Set-up —

□ PROFIdrive Control Profile

This section describes the functionality of the control word and status word in the PROFIdrive profile. Select this profile by setting par. 8-10 *Control word profile to PROFIdrive*.

□ Control Word according to PROFIdrive Profile (CTW)

The Control word is used to send commands from a master (e.g. a PC) to a slave.

	Bit = 0	Bit = 1
00	OFF 1	ON 1
01	OFF 2	ON 2
02	OFF 3	ON 3
03	Coasting	No coasting
04	Quick stop	Ramp
05 I	Hold frequency out-	Use ramp
1	put	
06 I	Ramp stop	Start
ا 70	No function	Reset
08	log 1 OFF	Jog 1 ON
09	log 2 OFF	Jog 2 ON
10	Data invalid	Data valid
11	No function	Slow down
12	No function	Catch up
13 F	Parameter set-up	Selection Isb
14 F	Parameter set-up	Selection msb
15	No function	Reverse

[////]

Explanation of the Control Bits

Bit 00, OFF 1/ON 1

Normal ramp stop using the ramp times of the actual selected ramp.

Bit 00 = "0" leads to the stop and activation of the output relay 1 or 2 if the output frequency is 0 Hz and if [Relay 123] has been selected in par. 5-40 Function relay.

When bit 00 = "1", the frequency converter is in State 1: "Switching on inhibited".

Please refer to the PROFIdrive State Transition Diagram, at the end of this section.

Bit 01, OFF 2/ON 2

Coasting stop

When bit 01 = "0", a coasting stop and activation of the output relay 1 or 2 occurs if the output frequency is 0 Hz and if [Relay 123] has been selected in par. 5-40 Function relay.

When bit 01 = "1", the frequency converter is in State 1: "Switching on inhibited". Please refer to the PROFIdrive State Transition Diagram, at the end of this section.

Bit 02, OFF 3/ON 3

Quick stop using the ramp time of par. 3-81 Quick stop ramp time. When bit 02 = "0", a quick stop and activation of the output relay 1 or 2 occurs if the output frequency is 0 Hz and if [Relay 123] has been selected in par. 5-40 Function relay.

When bit 02 = "1", the frequency converter is in State 1: "Switching on inhibited".

Please refer to the PROFIdrive State Transition Diagram, at the end of this section.

Bit 03, Coasting/No coasting

Coasting stop Bit 03 = "0" leads to a stop. When bit 03 = "1", the frequency converter can start if the other start conditions are satisfied.



NB!

The selection in par. 8-50 Coasting select determines how bit 03 is linked with the corresponding function of the digital inputs.

$_{-}$ RS-485 Installation and Set-up $\,\,\,-$

Bit 04, Quick stop/Ramp

Quick stop using the ramp time of par. 3-81 Quick stop ramp time.

When bit 04 = "0", a quick stop occurs.

When bit 04 = "1", the frequency converter can start if the other start conditions are satisfied.



NB!

The selection in par. 8-51 *Quick stop select* determines how bit 04 is linked with the corresponding function of the digital inputs.

Bit 05, Hold frequency output/Use ramp

When bit 05 = "0", the current output frequency is being maintained even if the reference value is modified.

When bit 05 = "1", the frequency converter can perform its regulating function again; operation occurs according to the respective reference value.

Bit 06, Ramp stop/Start

Normal ramp stop using the ramp times of the actual ramp as selected. In addition, activation of the output relay 01 or 04 if the output frequency is 0 Hz if Relay 123 has been selected in par. 5-40 *Function relay*. Bit 06 = "0" leads to a stop. When bit 06 = "1", the frequency converter can start if the other start conditions are satisfied.



NB!

The selection in par. 8-53 *Start select* determines how bit 06 is linked with the corresponding function of the digital inputs.

Bit 07, No function/Reset

Reset after switching off.

Acknowledges event in fault buffer.

When bit 07 = "0", no reset occurs.

When there is a slope change of bit 07 to "1", a reset occurs after switching off.

Bit 08, Jog 1 OFF/ON

Activation of the pre-programmed speed in par. 8-90 Bus Jog 1 speed. JOG 1 is only possible if bit 04 = "0" and bit 00 - 03 = "1".

Bit 09, Jog 2 OFF/ON

Activation of the pre-programmed speed in par. 8-91 *Bus Jog 2 speed*. JOG 2 is only possible if bit 04 = "0" and bit 00 - 03 = "1".

Bit 10, Data invalid/valid

Is used to tell the frequency converter whether the control word is to be used or ignored. Bit 10 = "0" causes the control word to be ignored, Bit 10 = "1" causes the control word to be used. This function is relevant, because the control word is always contained in the telegram, regardless of which type of telegram is used, i.e. it is possible to turn off the control word if you do not wish to use it in connection with updating or reading parameters.

Bit 11, No function/Slow down

Is used to reduce the speed reference value by the amount given in par. 3-12 Catch up/slow down value. When bit 11 = "0", no modification of the reference value occurs. When bit 11 = "1", the reference value is reduced.

Bit 12, No function/Catch up

Is used to increase the speed reference value by the amount given in par. 3-12 *Catch up/slow down value*.

When bit 12 = 0, no modification of the reference value occurs.

When bit 12 = "1", the reference value is increased.

If both - slowing down and accelerating - are activated (bit 11 and 12 = "1"), slowing down has priority, i.e. the speed reference value will be reduced.





$_{-}$ RS-485 Installation and Set-up $\,\,\,\,\,\,\,\,\,$

Bits 13/14, Set-up selection

Bits 13 and 14 are used to choose between the four parameter set-ups according to the following table:

The function is only possible if *Multi Set-up* has been chosen in par. 0-10 Active set-up. The selection in par. 8-55 *Set-up select* determines how bits 13 and 14 are linked with the corresponding function of the digital inputs. Changing set-up while running is only possible if the set-ups have been linked in par. 0-12 *This set-up linked to*.

Set-up	Bit 13	Bit 14
1	0	0
2	1	0
3	0	1
4	1	1



Bit 15, No function/Reverse

Bit 15 = "0" causes no reversing.

Bit 15 = "1" causes reversing.

Note: In the factory setting reversing is set to digital in par. 8-54 Reversing select.



NB

Bit 15 causes reversing only when Ser. communication, Logic or or Logic and is selected.



$_{-}$ RS-485 Installation and Set-up $\,\,\,\,\,\,\,\,\,$

□ Status Word according to PROFIdrive Profile (STW)

The Status word is used to notify a master (e.g. a PC) about the status of a slave.

Bit	Bit = 0	Bit = 1
00	Control not ready	Control ready
01	Drive not ready	Drive ready
02	Coasting	Enable
03	No error	Trip
04	OFF 2	ON 2
05	OFF 3	ON 3
06	Start possible	Start not possible
07	No warning	Warning
08	Speed ≠ reference	Speed = reference
09	Local operation	Bus control
10	Out of frequency limit	Frequency limit ok
11	No operation	In operation
12	Drive OK	Stopped, autostart
13	Voltage OK	Voltage exceeded
14	Torque OK	Torque exceeded
15	Timer OK	Timer exceeded



Explanation of the Status Bits

Bit 00, Control not ready/ready

When bit 00 = "0", bit 00, 01 or 02 of the Control word is "0" (OFF 1, OFF 2 or OFF 3) - or the frequency converter is switched off (trip).

When bit 00 = "1", the frequency converter control is ready, but there is not necessarily power supply to the unit present (in the event of external 24 V supply of the control system).

Bit 01, VLT not ready/ready

Same significance as bit 00, however, there is a supply of the power unit. The frequency converter is ready when it receives the necessary start signals.

Bit 02, Coasting/Enable

When bit 02 = "0", bit 00, 01 or 02 of the Control word is "0" (OFF 1, OFF 2 or OFF 3 or coasting) - or the frequency converter is switched off (trip).

When bit 02 = "1", bit 00, 01 or 02 of the Control word is "1"; the frequency converter has not tripped.

Bit 03, No error/Trip

When bit 03 = "0", no error condition of the frequency converter exists.

When bit 03 = "1", the frequency converter has tripped and requires a reset signal before it can start.

Bit 04, ON 2/OFF 2

When bit 01 of the Control word is "0", then bit 04 = "0".

When bit 01 of the Control word is "1", then bit 04 = "1".

Bit 05, ON 3/OFF 3

When bit 02 of the Control word is "0", then bit 05 = "0".

When bit 02 of the Control word is "1", then bit 05 = "1".

$_{\scriptscriptstyle -}$ RS-485 Installation and Set-up $_{\scriptscriptstyle -}$

Bit 06, Start possible/Start not possible

If PROFIdrive has been selected in par. 8-10 *Control word profile*, bit 06 will be "1" after a switch-off acknowledgement, after activation of OFF2 or OFF3, and after switching on the mains voltage. Start not possible will be reset, with bit 00 of the Control word being set to "0" and bit 01, 02 and 10 being set to "1".

Bit 07, No warning/Warning

Bit 07 = "0" means that there are no warnings.

Bit 07 = "1" means that a warning has occurred.

Bit 08, Speed ≠ reference / Speed = reference

When bit 08 = "0", the current speed of the motor deviates from the set speed reference value. This may occur, for example, when the speed is being changed during start/stop through ramp up/down.

When bit 08 = "1", the current speed of the motor corresponds to the set speed reference value.

Bit 09, Local operation/Bus control

Bit 09 = "0" indicates that the frequency converter has been stopped by means of the stop button on the control panel, or that [Linked to hand] or [Local] has been selected in par. 3-13 *Reference site*. When bit 09 = "1", the frequency converter can be controlled through the serial interface.

Bit 10, Out of frequency limit/Frequency limit OK

When bit 10 = "0", the output frequency is outside the limits set in par. 4-11 *Motor speed low limit* (rpm) and par. 4-13 *Motor speed high limit* (rpm). When bit 10 = "1", the output frequency is within the indicated limits.

Bit 11, No operation/Operation

When bit 11 = 0, the motor does not turn.

When bit 11 = "1", the frequency converter has a start signal, or the output frequency is higher than 0 Hz.

Bit 12, Drive OK/Stopped, autostart

When bit 12 = 0, there is no temporary overloading of the inverter.

When bit 12 = "1", the inverter has stopped due to overloading. However, the frequency converter has not switched off (trip) and will start again after the overloading has ended.

Bit 13, Voltage OK/Voltage exceeded

When bit 13 = 0, the voltage limits of the frequency converter are not exceeded.

When bit 13 = "1", the direct voltage in the intermediate circuit of the frequency converter is too low or too high.

Bit 14, Torque OK/Torque exceeded

When bit 14 = "0", the motor torque is below the limit selected in par. 4-16 *Torque limit motor mode* and par. 4-17 *Torque limit generator mode*. When bit 14 = "1", the limit selected in par. 4-16 *Torque limit motor mode* or par. 4-17 *Torque limit generator mode* is exceeded.

Bit 15, Timer OK/Timer exceeded

When bit 15 = "0", the timers for the thermal motor protection and thermal frequency converter protection have not exceeded 100%.


When bit 15 = "1", one of the timers has exceeded 100%.









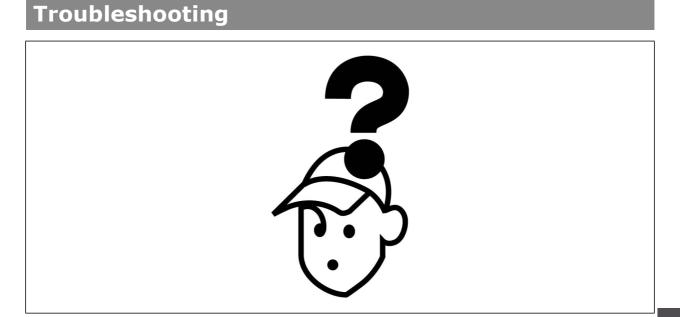

□ Warnings/Alarm Messages

A warning or an alarm is signalled by the relevant LED on the front of the frequency converter and indicated by a code on the display.

A warning remains active until its cause is no longer present. Under certain circumstances operation of the motor may still be continued. Warning messages may be critical, but are not necessarily so.

In the event of an alarm, the frequency converter will have tripped. Alarms must be reset to restart operation once their cause has been rectified. This may be done in three ways:

- 1. By using the [RESET] control button on the LCP control panel.
- 2. Via a digital input with the "Reset" function.
- 3. Via serial communication/optional fieldbus.



NB!

After a manual reset using the [RESET] button on the LCP, the [AUTO ON] button must be pressed to restart the motor.

If an alarm cannot be reset, the reason may be that its cause has not been rectified, or the alarm is triplocked (see also table on following page).

Alarms that are trip-locked offer additional protection, meaning that the mains supply must be switched off before the alarm can be reset. After being switched back on, the FC 300 is no longer blocked and may be reset as described above once the cause has been rectified.

Alarms that are not trip-locked can also be reset using the automatic reset function in parameters 14-20 (Warning: automatic wake-up is possible!)

If a warning and alarm is marked against a code in the table on the following page, this means that either a warning occurs before an alarm, or else that you can specify whether it is a warning or an alarm that is to be displayed for a given fault.

This is possible, for instance, in parameters 1-90 *Motor Thermal Protection*. After an alarm or trip, the motor carries on coasting, and the alarm and warning flash. Once the problem has been rectified, only the alarm continues flashing until the FC 300 is reset.



$_{-}$ Troubleshooting $_{-}$

No.	Description	Warning	Alarm/Trip	Alarm/Trip Lock	Parameter Refer- ence
1	10 Volts low	Χ			
2	Live zero error	(X)	(X)		6-01
3	No motor	(X)			1-80
4	Mains phase loss	(X)	(X)	(X)	14-12
5	DC link voltage high	X			
6	DC link voltage low	Χ			
7	DC overvoltage	Χ	X		
8	DC under voltage	X	X		
9	Inverter overloaded	Χ	X		
10	Motor ETR over temperature	(X)	(X)		1-90
11	Motor thermistor over temperature	(X)	(X)		1-90
12	Torque limit	X	X		
13	Over Current	Χ	Χ	Χ	
14	Earth Fault	Χ	Χ	Χ	
15	Hardware mismatch		Χ	Χ	
16	Short Circuit		Χ	Χ	
17	Control word timeout	(X)	(X)		8-04
23	Internal Fan Fault	`x´	` '		
24	External Fan Fault	Х			14-53
25	Brake resistor short-circuited	Χ			
26	Brake resistor power limit	(X)	(X)		2-13
27	Brake chopper short-circuited	`x´	`x´		
28	Brake check	(X)	(X)		2-15
29	Power board over temp	`x´	χ΄	Χ	
30	Motor phase U missing	(X)	(X)	(X)	4-58
31	Motor phase V missing	(X)	(X)	(X)	4-58
32	Motor phase W missing	(X)	(X)	(X)	4-58
33	Inrush Fault	` ,	χ΄	X	
34	Fieldbus communication fault	Χ	Х		
36	Mains failure	Χ	Χ		
38	Internal Fault		Χ	Χ	
40	Overload of Digital Output Terminal 27	(X)			5-00, 5-01
41	Overload of Digital Output Terminal 29	(X)			5-00, 5-02
42	Overload of Digital Output On X30/6	(X)			5-32
42	Overload of Digital Output On X30/7	(X)			5-33
47	24 V supply low	X	Χ	Χ	
48	1.8 V supply low		X	X	
49	Speed limit	X			
50	AMA calibration failed		Х		
51	AMA check U _{nom} and I _{nom}		X		
52	AMA low I _{nom}		X		
53	AMA motor too big		X		
54	AMA motor too small		X		
55	AMA parameter out of range		X		
56	AMA interrupted by user		X		
57	AMA timeout		X		
58	AMA internal fault	Χ	X		





$_{-}$ Troubleshooting $_{-}$

No.	prm/Warning code list Description	Warning	Alarm/Trip	Alarm/Trip Lock	Parameter Refer-
140.	Description	warming	Alarmy Trip	Alarmy Trip Lock	ence
61	Tracking Error	(X)	(X)		4-30
62	Output Frequency at Maximum Limit	Χ			
63	Mechanical Brake Low		(X)		2-20
64	Voltage Limit	X			
65	Control Board Over-temperature	X	X	Χ	
66	Heat sink Temperature Low	Χ			
67	Option Configuration has Changed		Χ		
68	Safe Stop Activated		Χ		
70	Illegal FC configuration			Χ	
80	Drive Initialised to Default Value		Χ		
90	Encoder Loss	(X)	(X)		17-61
91	Analogue input 54 wrong settings			Χ	S202
100- 199	See Operating Instructions for MCO 305				
250	New spare part			Χ	14-23
251	New Type Code		Χ	Χ	

(X) Dependent on parameter

A trip is the action when an alarm has appeared. The trip will coast the motor and can be reset by pressing the reset bottom or make a reset by a digital input (Par. 5-1* [1]). The origin event that caused an alarm cannot damage the drive or cause dangerous conditions. A trip lock is an action when an alarm occurs, which may cause dam-

age to drive or connected parts. A Trip Lock situation can only be reset by a power cycling.

LED indication	
Warning	yellow
Alarm	flashing red
Trip locked	yellow and red





$_{-}$ Troubleshooting $_{-}$

Description of Alarm Word, Warning Word and extended Status Word **Alarm Word Extended Status Word** AlarmWord WarningWord **ExtendedStatusWord** Hex Dec 0000001 Brake Check Brake Check Ramping 0 Pwr. Card Temp 00000002 Pwr. Card Temp **AMA Running** 1 2 2 00000004 4 Earth Fault Earth Fault Start CW/CCW 3 80000008 8 Ctrl.Card Temp Ctrl.Card Temp Slow Down 4 Catch Up 0000010 16 Ctrl. Word TO Ctrl. Word TO 5 Feedback High 00000020 32 Over Current Over Current 6 00000040 Torque Limit Torque Limit Feedback Low 64 00000080 128 Motor Th Over Motor Th Over Output Current High Motor ETR Over 8 Motor ETR Over Output Current Low 00000100 256 00000200 512 Inverter Overld. Inverter Overld. Output Freq High 10 00000400 1024 DC under Volt DC under Volt Output Freq Low DC over Volt DC over Volt Brake Check OK 11 00000800 2048 12 00001000 4096 **Short Circuit** DC Voltage Low Braking Max Braking 00002000 8192 Inrush Fault DC Voltage High 13 14 00004000 16384 Mains ph. Loss Mains ph. Loss Out of Speed Range 15 0008000 32768 AMA Not OK No Motor OVC Active 16 00010000 65536 Live Zero Error Live Zero Error 17 00020000 131072 Internal Fault 10V Low 00040000 **Brake Overload** 18 262144 **Brake Overload** 00080000 524288 Brake Resistor 19 U phase Loss 20 1048576 00100000 V phase Loss Brake IGBT 21 00200000 2097152 W phase Loss Speed Limit 22 00400000 4194304 Fieldbus Fault Fieldbus Fault 23 0080000 8388608 24 V Supply Low 24V Supply Low 24 01000000 16777216 Mains Failure Mains Failure 25 1.8V Supply Low 02000000 33554432 Current Limit 26 04000000 67108864 **Brake Resistor** Low Temp 08000000 Brake IGBT Voltage Limit 27 134217728 28 10000000 268435456 Option Change Unused 29 20000000 536870912 Drive Initialised Unused 30 40000000 1073741824 Safe Stop Unused 31 80000000 2147483648 Mech. brake low Extended Status Word

The alarm words, warning words and extended status words can be read out via serial bus or optional fieldbus for diagnose. See also par. 16-90, 16-92 and 16-94.



Troubleshooting

WARNING 1

10 Volts low:

The 10 V voltage from terminal 50 on the control card is below 10 V.

Remove some of the load from terminal 50, as the 10 V supply is overloaded. Max. 15 mA or minimum 590 Ω .

WARNING/ALARM 2

Live zero error:

The signal on terminal 53 or 54 is less than 50% of the value set in par. 6-10, 6-12, 6-20, or 6-22 respectively.

WARNING/ALARM 3

No motor:

No motor has been connected to the output of the frequency converter.

WARNING/ALARM 4

Mains phase loss:

A phase is missing on the supply side, or the mains voltage imbalance is too high.

This message also appears in case of a fault in the input rectifier on the frequency converter.

Check the supply voltage and supply currents to the frequency converter.

WARNING 5

DC link voltage high:

The intermediate circuit voltage (DC) is higher than the overvoltage limit of the control system. The frequency converter is still active.

WARNING 6

DC link voltage low

The intermediate circuit voltage (DC) is below the undervoltage limit of the control system. The frequency converter is still active.

WARNING/ALARM 7

DC over voltage:

If the intermediate circuit voltage exceeds the limit, the frequency converter trips after a time. Possible corrections:

Connect a brake resistor

Extend the ramp time

Activate functions in par. 2-10

Increase par. 14-26

Alarm/warning	limits:		
FC 300 Series	3 x 200 -	3 x 380 -	3 x 525 -
	240 V	500 V	600 V
	[VDC]	[VDC]	[VDC]
Undervoltage	185	373	532
Voltage warn- ing low	205	410	585
Voltage warning high (w/o brake - w/brake)	390/405	810/840	943/965
Overvoltage	410	855	975

The voltages stated are the intermediate circuit voltage of the FC 300 with a tolerance of \pm 5 %. The corresponding mains voltage is the intermediate circuit voltage (DC-link) divided by 1.35

WARNING/ALARM 8

DC under voltage:

If the intermediate circuit voltage (DC) drops below the "voltage warning low" limit (see table above), the frequency converter checks if 24 V backup supply is connected.

If no 24 V backup supply is connected, the frequency converter trips after a given time depending on the unit.

To check whether the supply voltage matches the frequency converter, see *General Specifications*.

WARNING/ALARM 9

Inverter overloaded:

The frequency converter is about to cut out because of an overload (too high current for too long). The counter for electronic, thermal inverter protection gives a warning at 98% and trips at 100%, while giving an alarm. You <u>cannot</u> reset the frequency converter until the counter is below 90%.

The fault is that the frequency converter is overloaded by more than 100% for too long.

WARNING/ALARM 10

Motor ETR over temperature:

According to the electronic thermal protection (ETR), the motor is too hot. You can choose if you want the frequency converter to give a warning or an alarm when the counter reaches 100% in par. 1-90. The fault is that the motor is overloaded by more than 100% for too long. Check that the motor par. 1-24 is set correctly.

WARNING/ALARM 11

Motor thermistor over temp:

The thermistor or the thermistor connection is disconnected. You can choose if you want the frequency converter to give a warning or an alarm when the counter reaches 100% in par. 1-90.



Troubleshooting __



Check that the thermistor is connected correctly between terminal 53 or 54 (analog voltage input) and terminal 50 (+ 10 V supply), or between terminal 18 or 19 (digital input PNP only) and terminal 50. If aKTY sensoris used, check for correct connection between terminal 54 and 55.

WARNING/ALARM 12

Torque limit:

The torque is higher than the value in par. 4-16 (in motor operation) or the torque is higher than the value in par. 4-17 (in regenerative operation).

WARNING/ALARM 13

Over Current:

The inverter peak current limit (approx. 200% of the rated current) is exceeded. The warning will last approx. 8-12 sec., then the frequency converter trips and issues an alarm. Turn off the frequency converter and check if the motor shaft can be turned and if the motor size matches the frequency converter.

If extended mechanical brake control is selected, trip can be reset externally.

ALARM 14

Earth fault:

There is a discharge from the output phases to earth, either in the cable between the frequency converter and the motor or in the motor itself.

Turn off the frequency converter and remove the earth fault.

ALARM 15

In-complete hardware:

A fitted option is not handled by the present control board (hardware or software).

ALARM 16

Short-circuit:

There is short-circuiting in the motor or on the motor terminals.

Turn off the frequency converter and remove the short-circuit.

WARNING/ALARM 17

Control word timeout:

There is no communication to the frequency converter.

The warning will only be active when par. 8-04 is NOT set to *OFF*.

If par. 8-04 is set to *Stop* and *Trip*, a warning appears and the frequency converter ramps down until it trips, while giving an alarm.

par. 8-03 *Control word Timeout Time* could possibly be increased.

WARNING 23

Internal fan fault:

The fan warning function is an extra protection function that checks if the fan is running / mounted. The fan warning can be disabled in *Fan Monitor*, par. 14-53, (set to [0] Disabled).

WARNING 24

External fan fault:

The fan warning function is an extra protection function that checks if the fan is running / mounted. The fan warning can be disabled in *Fan Monitor*, par. 14-53, (set to [0] Disabled).

WARNING 25

Brake resistor short-circuited:

The brake resistor is monitored during operation. If it short-circuits, the brake function is disconnected and the warning appears. The frequency converter still works, but without the brake function. Turn off the frequency converter and replace the brake resistor (see par. 2-15 *Brake Check*).

ALARM/WARNING 26

Brake resistor power limit:

The power transmitted to the brake resistor is calculated as a percentage, as a mean value over the last 120 s, on the basis of the resistance value of the brake resistor (par. 2-11) and the intermediate circuit voltage. The warning is active when the dissipated braking power is higher than 90%. If *Trip* [2] has been selected in par. 2-13, the frequency converter cuts out and issues this alarm, when the dissipated braking power is higher than 100%.

WARNING 27

Brake chopper fault:

The brake transistor is monitored during operation and if it short-circuits, the brake function disconnects and the warning comes up. The frequency converter is still able to run, but since the brake transistor has short-circuited, substantial power is transmitted to the brake resistor, even if it is inactive.

Turn off the frequency converter and remove the brake resistor.



Warning: There is a risk of substantial power being transmitted to the brake resistor if the brake transistor is short-circuited.



Troubleshooting —



ALARM/WARNING 28

Brake check failed:

Brake resistor fault: the brake resistor is not connected/working.

ALARM 29

Drive over temperature:

If the enclosure is IP 20 or IP 21/Type 1, the cutout temperature of the heat-sink is 95 °C \pm 5 °C. The temperature fault cannot be reset, until the temperature of the heatsink is below 70 °C \pm 5 °C. The fault could be:

- Ambient temperature too high
- Too long motor cable

ALARM 30

Motor phase U missing:

Motor phase U between the frequency converter and the the motor is missing.

Turn off the frequency converter and check motor phase U.

ALARM 31

Motor phase V missing:

Motor phase V between the frequency converter and the motor is missing.

Turn off the frequency converter and check motor phase V.

ALARM 32

Motor phase W missing:

Motor phase W between the frequency converter and the motor is missing.

Turn off the frequency converter and check motor phase W.

ALARM 33

Inrush fault:

Too many powerups have occured within a short time period. See the chapter *General Specifications* for the allowed number of powerups within one minute.

WARNING/ALARM 34

Fieldbus communication fault:

The fieldbus on the communication option card is not working.

WARNING/ALARM 36

Mains failure:

This warning/alarm is only active if the supply voltage to the frequency converter is lost and parameter 14-10 is NOT set to OFF. Possible correction: check the fuses to the frequency converter

ALARM 38

Internal fault:

By this alarm it may be necessary to contact your Danfoss supplier. Some typical alarm messages:

- 0 The serial port cannot be initialized. Serious hardware failure
- 256 The power EEPROM data is defect or too old
- 512 The control board EEPROM data is defect or too old
- 513 Communication time out Reading EE-PROM data
- 514 Communication time out Reading EE-PROM data
- 515 The Application Orientated Control cannot recognize the EEPROM data
- 516 Cannot write write to the EEPROM because a write command is on progress
- 517 The write command is under time out
- 518 Failure in the EEPROM
- 519 Missing or invalid BarCode data in EE-PROM 1024 – 1279 CAN telegram cannot be sent. (1027 indicate a possible hardware failure)
- 1281 Digital Signal Processor flash time-out
- 1282 Power micro software version mismatch
- 1283 Power EEPROM data version mismatch
- 1284 Cannot read Digital Signal Processor software version
- 1299 Option SW in slot A is too old
- 1300 Option SW in slot B is too old
- 1301 Option SW in slot C0 is too old
- 1302 Option SW in slot C1 is too old
- 1315 Option SW in slot A is not supported (not allowed)
- 1316 Option SW in slot B is not supported (not allowed)
- 1317 Option SW in slot C0 is not supported (not allowed)
- 1318 Option SW in slot C1 is not supported (not allowed)
- 1536 An exception in the Application Orientated Control is registered. Debug information written in LCP
- 1792 DSP watchdog is active. Debugging of power part data Motor Orientated Control data not transferred correctly
- 2049 Power data restarted
- 2315 Missing SW version from power unit
- 2816 Stack overflow Control board module
- 2817 Scheduler slow tasks



$_{-}$ Troubleshooting $_{-}$

2818 Fast tasks

2819 Parameter thread

2820 LCP stack overflow

2821 Serial port overflow

2822 USB port overflow

3072-5 Parameter value is outside its limits.

Perform a initialization. Parameter number causing the alarm: Subtract the code from 3072. Ex Error code 3238:

3238-3072 = 166 is outside the limit

5123 Option in slot A: Hardware incompatible with Control board hardware

5124 Option in slot B: Hardware incompatible with Control board hardware

5125 Option in slot C0: Hardware incompatible with Control board hardware

5126 Option in slot C1: Hardware incompatible with Control board hardware

5376-6 Out of memory

231

WARNING 40

Overload of Digital Output Terminal 27:

Check the load connected to terminal 27 or remove short-circuit connection. Check parameters 5-00 and 5-01.

WARNING 41

Overload of Digital Output Terminal 29:

Check the load connected to terminal 29 or remove short-circuit connection. Check parameters 5-00 and 5-02.

WARNING 42

Overload of Digital Output On X30/6:

Check the load connected to X30/6 or remove short-circuit connection. Check parameter 5-32.

WARNING 42

Overload of Digital Output On X30/7:

Check the load connected to X30/7 or remove short-circuit connection. Check parameter 5-33.

WARNING 47

24 V supply low:

The external 24 V DC backup power supply may be overloaded, otherwise Contact your Danfoss supplier.

WARNING 48

1.8 V supply low:

Contact your Danfoss supplier.

WARNING 49

Speed limit:

The speed is not within the specified range in par. 4-11 and par. 4-13.

ALARM 50

AMA calibration failed:

Contact your Danfoss supplier.

ALARM 51

AMA check Unom and Inom:

The setting of motor voltage, motor current, and motor power is presumably wrong. Check the settings.

ALARM 52

AMA low Inom:

The motor current is too low. Check the settings.

ALARM 53

AMA motor too big:

The motor is too big for the AMA to be carried out.

ALARM 54

AMA motor too small:

The motor is too big for the AMA to be carried out.

ALARM 55

AMA par. out of range:

The par. values found from the motor are outside acceptable range.

ALARM 56

AMA interrupted by user:

The AMA has been interrupted by the user.

ALARM 57

AMA timeout:

Try to start the AMA again a number of times, until the AMA is carried out. Please note that repeated runs may heat the motor to a level where the resistance Rs and Rr are increased. In most cases, however, this is not critical.

ALARM 58

AMA internal fault:

Contact your Danfoss supplier.

WARNING 59

Current limit:

Contact your Danfoss supplier.

WARNING 61

Encoder loss:

Contact your Danfoss supplier.

WARNING 62

Output Frequency at Maximum Limit:

The output frequency is higher than the value set in par. 4-19



$_{-}$ Troubleshooting $_{-}$

ALARM 63

Mechanical Brake Low:

The actual motor current has not exceeded the "release brake" current within the "Start delay" time window.

WARNING 64

Voltage Limit:

The load and speed combination demands a motor voltage higher than the actual DC link voltage.

WARNING/ALARM/TRIP 65

Control Card Over Temperature:

Control card over temperature: The cut-out temperature of the control card is 80° C.

WARNING 66

Heatsink Temperature Low:

The heat sink temperature is measured as 0° C. This could indicate that the temperature sensor is defect and thus the fan speed is increased to the maximum in case the power part or control card is very hot.

ALARM 67

Option Configuration has Changed:

One or more options has either been added or removed since the last power-down.

ALARM 68

Safe Stop Activated:

Safe Stop has been activated. To resume normal operation, apply 24 V DC to terminal 37, then send a reset signal (via Bus, Digital I/O, or by pressing [RESET]). For correct and safe use of the Safe Stop function follow the related information and instructions in the Design Guide

ALARM 70

Illegal FC Configuration:

Actual combination of control board and power board is illegal.

ALARM 80

Drive Initialised to Default Value:

Parameter settings are initialised to default setting after a manual (three-finger) reset.

ALARM 91

Analogue Input 54 Wrong Settings:

Switch S202 has to be set in position OFF (voltage input) when a KTY sensor is connected to analogue input terminal 54.

ALARM 250

New Spare Part:

The power or Switch Mode Power Supply has been exchanged. The frequency converter type code

must be restored in the EEPROM. Select the correct type code in Par 14-23 according to the label on unit. Remember to select 'Save to EEPROM' to complete.

ALARM 251

New Type Code:

The Frequency Converter has got a new type code.





Index

A	
Abbreviations	1
Access To Control Terminals	2
Accessory Bag	2
Acoustic Noise	1
Aggressive Environments	17
Air Humidity	17
Alarm Messages	3
Aluminium Conductors	95
Ama	117
Analog Inputs	8
Analog Inputs	61
Analog Inputs	8
Analog Inputs - Terminal X30/11, 12	117
Analog Output	62
Analog Output - Terminal X30/8	117
Automatic Adaptations To Ensure Performance	1
Automatic Motor Adaptation	112
Automatic Motor Adaptation (ama)	97
В	
Basic Wiring Example	2
Brake Connection Option	99
Brake Control	154
Brake Function	44
Brake Power	g
Brake Power	44
Brake Resistor	1
Brake Resistors	125
Braking Time	137
Break-away Torque	8
С	
Cable Clamp	107
Cable Clamps	104
Cable Clamps Cable Length And Cross-section	0.5
•	95
Cable Length And Cross-section	95
Cable Length And Cross-section Cable Lengths And Cross Sections	95 59

Coasting	138
Coasting	140
Communication Option	155
Connection To Mains	2
Control Cables	2
Control Cables	94
Control Cables	104
Control Card Performance	63
Control Card, +10 V Dc Output	63
Control Card, 24 V Dc Output	62
Control Card, Rs 485 Serial Communication	62
Control Card, Usb Serial Communication	64
Control Characteristics	63
Control Terminals	2
Control Terminals	2
Control Word	136
Control Word According To Profidrive Profile (ctw)	143
Cooling	68
Cooling Conditions	82
D	
Dc Brake	137
Dc Bus Connection	99
Dc Link	153
Dead Band	27
Dead Band Around Zero	1
Decoupling Plate	87
Definitions	1
Derating For Ambient Temperature	66
	00
Derating For Installing Long Motor Cables Or Cables With Larger Cross-section	68
Derating For Low Air Pressure	68
Derating For Running At Low Speed	68
Devicenet	5
Devicenet	73
Digital Inputs - Terminal X30/1-4	116
Digital Inputs:	60
Digital Output	62
Digital Outputs - Terminal X30/6, 7	117
Direction Of Motor Rotation	102
Disposal Instruction	1



_ Index _

Drive Configurator	2	Intermediate Circuit	65
		Intermediate Circuit	153
E		Internal Current Control In Vvcplus Mode	1
Earth Leakage Current	1		
Earth Leakage Current	104	J	
Earthing	107	Jog	138
Earthing Of Screened/armoured Control Cables	107	Jog	7
Efficiency	1	K	
Electrical Installation	2	Kty Sensor	154
Electrical Installation	2		
Electrical Installation	95	L	
Electrical Installation - Emc Precautions	104	Lcp	7
Electrical Terminals	93	Lcp	9
Electro-mechanical Brake	111	Lcp	22
Emc Test Results	39	Lcp	125
Encoder Feedback	19	Leakage Current	42
Equalising Cable,	107	Local (hand On) And Remote (auto On)	
Etr	101	Control	1
Etr	153	М	
External 24 V Dc Supply	124		
Extreme Running Conditions	47	Mains Supply	
		Mains Supply	
F		Mains Supply	
Fc Profile	136	Mains Supply	
Flux	1	Mains Supply	11
Flux	1	Mains Supply (I1, L2, L3)	59
Freeze Output	7	Mains Supply Interference	108
Freeze Reference	24	Mechanical Brake	1
Fuses	2	Mechanical Dimensions	79
		Mechanical Dimensions	80
G		Mechanical Mounting	82
Galvanic Isolation (pelv)	41	Moment Of Inertia	48
General Warning	6	Motor Cables	2
		Motor Cables	104
Н		Motor Connection	2
Harmonic Filters	76	Motor Feedback	1
High Voltage Test	104	Motor Name Plate	97
Hoist Mechanical Brake	1	Motor Output	59
Hold Output Frequency	138	Motor Parameters	112
T		Motor Phases	47
I		Motor Protection	60
Intermediate Circuit	44	Motor Protection	101
Intermediate Circuit	48	Motor Rotation	102
Intermediate Circuit	64	Motor Thermal Protection	48



_ Index _

Motor Thermal Protection	2	Rs 485 Bus Connection	102
Motor Thermal Protection	141	Rs-485	127
Motor Voltage	65	_	
N		S Cofo Chan	4
	0.7	Safe Stop	1
Name Plate Data	97	Safety Earth Connection	104
Name Plate Data	97	Scaling Of References And Feedback	1
Non UI Compliance	89	Screened/armoured	94
0		Serial Communication	8
Ordering Form Type Code	2	Serial Communication	64
Ordering Numbers	71	Serial Communication	107
Ordering Numbers: Brake Resistors	71 73	Side-by-side Installation	82
Ordering Numbers: Harmonic Filters	73 76	Sine-wave Filter	89
Ordering Numbers: Options And Accesso-	, 0	Sine-wave Filter	126
ries	73	Sine-wave Filters	3
Ordering Numbers: Sine-wave Filter Mod-		Smart Logic Control	46
ules	76	Software Versions	73
Output Performance (u, V, W)	59	Speed Pid	19
В		Speed Pid	20
P		Speed Pid Control	1
Plc	107	Start/stop	2
Potentiometer Reference	2	Status Word	140
Process Pid Control	1	Status Word According To Profidrive Profile (stw)	146
Profibus	5	Surroundings	63
Profibus	73	Switches S201, S202, And S801	2
Programming Of Torque Limit And Stop	2	Switching Frequency	95
Protection	17		
Protection	41	т	
Protection	42	Thermistor	10
Protection		Torque Characteristics	59
Protection And Features		Torque Control	10
Pulse Start/stop			
Pulse/encoder Inputs	61	U	
R		Usb Connection	91
	7	Usb Connection	91
Dad	10	Use Of Emc-correct Cables	106
		V	
Reference Handling Relay Connection		Vibration And Shock	
		Voltage Level	
Relay Outputs Removal Of Knockouts For Extra Cables		Vvcplus	
Residual Current Device	42	Vvcplus	1
Residual Current Device	2		
ACSIGNATION DEVICE	_		

Rise Time

65

FC 300 Design Guide



_ Index _

3

WWarnings